

AD-A062 614

DOUGLAS AIRCRAFT CO LONG BEACH CALIF  
AIRCRAFT WINDSHIELD BIRD IMPACT MATH MODEL. PART 2. USER'S MANU--ETC(U)

F/G 5/2

DEC 77 G R EIDE

F33615-75-C-3105

UNCLASSIFIED

MDC-J7174-PT-2

AFFDL-TR-77-99-PT-2

NL

1 OF 2  
ADA  
062614



AD A062614

DDC FILE COPY

AFFDL-TR-77-99

PART 2

① LEVEL II

AIRCRAFT WINDSHIELD BIRD IMPACT MATH MODEL  
PART 2 - USER'S MANUAL


GORDON R. EIDE

Douglas Aircraft Company  
McDonnell Douglas Corporation  
3855 Lakewood Boulevard  
Long Beach, California 90846

DECEMBER 1977

TECHNICAL REPORT AFFDL-TR-77-99

Final Report For Period July 1975-December 1977

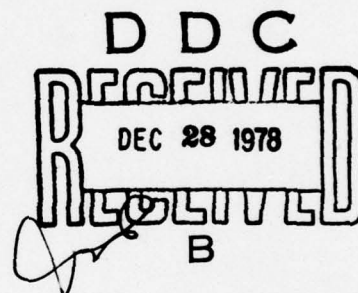

Approved for public release; distribution unlimited

AIR FORCE FLIGHT DYNAMICS LABORATORY  
AIR FORCE WRIGHT AERONAUTICAL LABORATORIES  
AIR FORCE SYSTEMS COMMAND  
WRIGHT-PATTERSON AIR FORCE BASE, OHIO 45433

78 12 18 076




# NOTICE


When Government drawings, specifications, or other data are used for any purpose other than in connection with a definitely related Government procurement operation, the United States Government thereby incurs no responsibility, nor any obligation whatsoever; and the fact that the Government may have formulated, furnished, or in any way supplied the said drawings, specifications, or other data, is not to be regarded by implication or otherwise as in any manner licensing the holder or any other person or corporation, or conveying any rights or permission to manufacture, use, or sell any patented invention that may in any way be related thereto.

This report has been reviewed by the Information Office (OI) and is releasable to the National Technical Information Service (NTIS). At NTIS, it will be available to the general public, including foreign nations.

This technical report has been reviewed and is approved for publication.

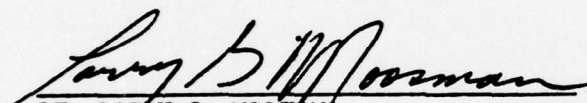


LT. LARRY G. MOOSMAN  
Project Manager  
Improved Windshield Protection ADPO  
Vehicle Equipment Division

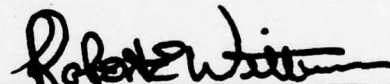

ROBERT E. WITTMAN  
Program Manager  
Improved Windshield Protection ADPO  
Vehicle Equipment Division

FOR THE COMMANDER:

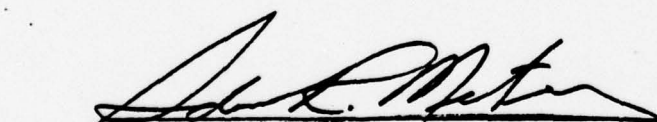

SOLOMON R. METRES  
Acting Director  
Vehicle Equipment Division

Copies of this report should not be returned unless return is required by security considerations, contractual obligations, or notice on a specific document.

19 REPORT DOCUMENTATION PAGE		READ INSTRUCTIONS BEFORE COMPLETING FORM	
1. REPORT NUMBER 19 AFFDL-TR-77-99-Part-2	2. GOVT ACCESSION NO. 1	3. RECIPIENT'S CATALOG NUMBER 9	
4. TITLE (and Subtitle) AIRCRAFT WINDSHIELD BIRD IMPACT MATH MODEL PART 2. USER'S MANUAL		5. TYPE OF REPORT & PERIOD COVERED Final Report, Jul 1975 - Dec 1977	
	14	6. PERFORMING ORG. REPORT NUMBER MDC-J7174-PT-2	
7. AUTHOR(s) 10 Gordon R./Eide	15	8. CONTRACT OR GRANT NUMBER(s) F33615-75-C-3105	
9. PERFORMING ORGANIZATION NAME AND ADDRESS Douglas Aircraft Company McDonnell Douglas Corporation Long Beach, California 90846		10. PROGRAM ELEMENT, PROJECT, TASK AREA & WORK UNIT NUMBERS Project: 162202 Task: 02 Work Unit: 01	17 02
11. CONTROLLING OFFICE NAME AND ADDRESS Air Force Flight Dynamics Laboratories (AFFDL/FEW) Air Force Wright Aeronautical Laboratories Air Force Systems Command Wright-Patterson Air Force Base, Ohio 45433		12. REPORT DATE December 1977	
14. MONITORING AGENCY NAME & ADDRESS (if different from Controlling Office) 11 Doc 77 12 170p.		13. NUMBER OF PAGES 174	
		15. SECURITY CLASS. (of this report) Unclassified	
		15a. DECLASSIFICATION/DOWNGRADING SCHEDULE	
16. DISTRIBUTION STATEMENT (of this Report) Distribution Unlimited DISTRIBUTION STATEMENT A Approved for public release; Distribution Unlimited			
17. DISTRIBUTION STATEMENT (of the abstract entered in Block 20, if different from Report) 63211F			
18. SUPPLEMENTARY NOTES 78 12 18 076			
19. KEY WORDS (Continue on reverse side if necessary and identify by block number) Aircraft      Math Model      Dynamic Response      Structural model Bird Impact      Multi-layer      Finite element      Transient Loading Computer program      Impact      Transparency Laminate      Windshield			
20. ABSTRACT (Continue on reverse side if necessary and identify by block number) Instructions are given for the use of the Bird Impact Math Model Computer Program (IMPACT). IMPACT calculates the transient dynamic response of a finite element model of a windshield system subjected to bird impact. Modeling, input, program functions and output are explained from a user's standpoint.			

DD FORM 1 JAN 73 1473

EDITION OF 1 NOV 65 IS OBSOLETE  
S/N 0102-010-6601116 400  
SECURITY CLASSIFICATION OF THIS PAGE (When Data Entered)

mt

## FOREWORD

This report is one of a series of reports that describe work performed by Douglas Aircraft Company, McDonnell Douglas Corporation, 3855 Lakewood Boulevard, Long Beach, California 90846, under the Windshield Technology Demonstrator Program. This work was sponsored by the U. S. Air Force Flight Dynamics Laboratory, Wright-Patterson Air Force Base, under Contract F33615-75-C-3105, Project 2202/0201.

This report is divided into three parts. Part 1 is entitled "Theory and Application", Part 2 is entitled "User's Manual", and Part 3 is entitled "Programming Manual." The principal investigators and authors were P. H. Denke for Part 1, G. R. Eide for Part 2, and R. C. Morris for Part 3.

Mr. D. C. Chapin, Capt., USAF Ret., was the Air Force Project Manager during the conceptual phase of the work reported herein. Lieutenant L. G. Moosman (AFFDL/FEW) succeeded Mr. Chapin during the conduct of the program.

Mr. J. H. Lawrence Jr., was the Program Director for the Douglas Aircraft Company.

This report was submitted to the Air Force on 7 December 1977, and covers the work performed during the period July 1975 through December 1977.

ACCESSION	
NTIS	NTIS Section <input checked="" type="checkbox"/>
OSC	OSC Section <input type="checkbox"/>
UNANNOUNCED	<input type="checkbox"/>
JUSTIFICATION	
BY	
DISTRIBUTION/AVAILABILITY CODES	
Dist.	AVAIL. AND/OR SPECIAL
A	



# TABLE OF CONTENTS

SECTION		PAGE
I	INTRODUCTION . . . . .	1
	PROGRAM FUNCTION . . . . .	1
	PROGRAM CAPABILITIES . . . . .	1
	UNITS . . . . .	3
	PROJECTED IMPROVEMENTS . . . . .	3
II	MODELLING CONSIDERATIONS . . . . .	5
	FINITE ELEMENTS . . . . .	5
	Axial Bar . . . . .	8
	Membrane . . . . .	8
	Cell . . . . .	8
	Point Mass . . . . .	10
	GRID DETAIL AND GEOMETRY . . . . .	11
	Transparency . . . . .	11
	Support Structure . . . . .	12
	Loads . . . . .	13
	ATTACHMENTS . . . . .	13
	CONSTRAINTS . . . . .	14
	MODEL DIAGRAMS . . . . .	14
	Joint Numbering . . . . .	28
	Element Numbering . . . . .	29
	MATERIAL PROPERTIES . . . . .	29
	Ramberg-Osgood . . . . .	29
	Strain Rate Dependence . . . . .	32
	Temperature Dependence . . . . .	32
	LIMITATIONS AND COMPUTING TIME . . . . .	33
	KEY-PUNCH DATA FORMS . . . . .	35
III	USING THE PROGRAM . . . . .	43
	FUNCTIONAL FLOW CHART . . . . .	43
	INPUT DATA REQUIREMENTS . . . . .	45
	Data Code Descriptions . . . . .	45
	FORMAT Phase 2 Data . . . . .	65
	Incremental Response Data . . . . .	69
	Postprocessor Data . . . . .	71
	Job Control Language (JCL) . . . . .	75
	INPUT PREPROCESSING . . . . .	75
	Laminate Generator . . . . .	75
	Loads Generator . . . . .	81



# TABLE OF CONTENTS (Continued)

SECTION	PAGE
INITIAL GENERATOR . . . . .	88
MODAL TRANSFORMATION . . . . .	93
Stiffness Decomposition . . . . .	94
Mode Extraction and Transformation . . . . .	95
Data Files for Incremental Solution . . . . .	97
INCREMENTAL SOLUTION . . . . .	98
POSTPROCESSOR . . . . .	99
IV PROGRAM DIAGNOSTICS AND ERROR MESSAGES . . . . .	109
LAMINATE GENERATOR . . . . .	109
LOADS GENERATOR . . . . .	110
INITIAL GENERATOR . . . . .	110
FORMAT PHASE 2 . . . . .	118
INCREMENTAL SOLUTION . . . . .	118
POSTPROCESSOR . . . . .	118
V ILLUSTRATIVE EXAMPLES . . . . .	121
APPENDIX A - SECTIONS II AND III OF AFFDL-TR-77-99 PART 3 . . . . .	137
REFERENCES . . . . .	161

# LIST OF ILLUSTRATIONS

FIGURE		PAGE
1	Finite Elements . . . . .	6
2	Cell Lumped Element Forces . . . . .	7
3	Finite Element Model Diagram, General View . . . . .	15
4	Model Diagram, Forward Frame . . . . .	16
5	Model Diagram, Side Frame Section Cuts . . . . .	17
6	Model Diagram, Side Frame Sections . . . . .	18
7	Model Diagram, Aft Frame . . . . .	23
8	Model Diagram, Transparency Layers . . . . .	24
9	Ramberg-Osgood True Stress/True Strain Curve . . . . .	30
10	IMPACT Functional Flow Chart . . . . .	44
11	Simple Model of Laminate and Support Structure . . . . .	78
12	Bird Impact Diagram . . . . .	83
13	Bird Impact Force/Time Distribution . . . . .	86
14	A Simple Finite Element Model for Purposes of Illustration . . . . .	122
A.1	Data Flow Through a Complete Solution . . . . .	141
A.2	Function of Update in Preprocessing . . . . .	148

# LIST OF TABLES

TABLE		PAGE
1	MODEL SIZE LIMITATIONS . . . . .	33
2	WAVE FRONT AND COMPUTER CORE . . . . .	33
3	CDC COMPUTER TIME, SECONDS . . . . .	34
4	MODEL DEFINITION DATA CODE SUMMARY . . . . .	47
5	MATERIAL PROPERTY IDENTIFICATION . . . . .	57
6	INITIAL GENERATOR OUTPUT FILE . . . . .	89
7	MODEL DEFINITION DATA LISTED ON KEY-PUNCH FORMS . . . .	125
8	FORMAT INSTRUCTIONS ON KEY-PUNCH FORMS . . . . .	134
9	INCREMENTAL SOLUTION AND POSTPROCESSOR DATA CARDS . . .	135
A.1	CONTENT OF MASTER MATRIX DATA FILES . . . . .	145
A.2	PROGRAM AND FILE DECLARATIONS . . . . .	153
A.3	SYSTEM CONTROL CARDS FOR A COMPLETE SOLUTION . . . . .	154
A.4	INPUT DATA FOR A COMPLETE SOLUTION . . . . .	155

# LIST OF SYMBOLS

A	Cross-sectional area or point on Ramberg-Osgood stress, strain curve
$A_s$	Surface area
$a_i$	Polynomial coefficients ( $i = 0, 1, 2, \dots$ )
$\vec{b}$	Bird path unit vector
$b_x, b_y, b_z$	X, Y, Z components of $\vec{b}$
CON	Constraint number
DIR	Direction number
$D_\beta$	Distance traveled by impact footprint in time $t_0$ to $t_{\beta-1}$
$\vec{d}$	Footprint path unit vector
$d_x, d_y, d_z$	X, Y, Z components of $\vec{d}$
E	Young's modulus
$E_A$	Secant modulus at Point A
$\bar{E}$	Tangent to Ramberg-Osgood curve at origin
e	Elongation at rupture
$\bar{F}$	Lumped element forces
$F_{avg}$	Average impact force
$F_\beta$	Resultant impact force for $\beta^{th}$ increment
$F_{ty}, F_{tu}$	Allowable stresses for metals
$f_\beta$	Impact force, time load distribution factor for $\beta^{th}$ increment
h	Damping to stiffness ratio
$I_L, I_V$	Lateral and vertical bending moments of inertia
J	Mechanical equivalent of heat
JT	Joint number



# LIST OF SYMBOLS (continued)

$j_{i\beta}$	Joint numbers within impact footprint
$L$	Effective bird length or laminate number
$\ell$	Layer number
$l_x, l_y, l_z$	X,Y,Z components of a direction vector
$M, M_2$	Material number
$M_p$	Point mass
$m$	Mass of bird
$NC$	Number of computed polynomial coefficients
$NI$	Number of input polynomial coefficients
$n$	Exponent in Ramberg-Osgood equation.
$\bar{n}$	Unit normal vector
$n_x, n_y, n_z$	X,Y,Z components of $\bar{n}$
$n_E$	Number of edge degrees of freedom
$n_{EL}$	Total number of elements
$n_e$	Number of elements excluding point mass
$n_F$	Number of lumped element forces
$n_{PF}$	Total number of element forces
$n_G$	Number of transformation modes
$n_{I\beta}$	Number of time increments during impact
$n_J$	Number of joints
$n_S$	Number of element stresses or strains
$n_T$	Total number of degrees of freedom
$n_{TJ}$	Total number of joint degrees of freedom
$n_u$	Number of unconstrained degrees of freedom

# LIST OF SYMBOLS (continued)

$n_{\beta}$	Number of increments in solution
$P$	Material property number
$p, q, r, s$	Joint numbers for element definition
$s$	Specific heat
$T_{\beta}$	Base temperature
$T_J$	Joint temperature
$T_i, V_i$	Temperature, property value pairs
$t, t_2$	Thickness
$t_0$	Surface offset
$t_d$	Impact duration time
$t_{\beta}$	Time at end of $\beta^{\text{th}}$ increment
$v$	Velocity of bird
$w$	Width
$X, Y, Z$	Right hand Cartesian coordinates
$X_0, Y_0, Z_0$	Coordinates of impact point
$\alpha_T$	Coefficient of thermal expansion
$\beta$	Time increment number
$\Delta E_2$	Element numbering increment
$\Delta J_2$	Joint numbering increment
$\epsilon_{pq}$	Stress orientation angle
$\theta$	Angle of impact
$\nu$	Poissons ratio
$\rho$	Mass density
$\sigma$	Axial stress

# LIST OF SYMBOLS (continued)

$\bar{\sigma}, \bar{\epsilon}$	True stress, strain
$\bar{\sigma}_A, \bar{\epsilon}_A$	True stress, strain at Point A
$\bar{\sigma}_L, \bar{\epsilon}_L$	True stress, strain at elastic limit
$\bar{\sigma}_r, \bar{\epsilon}_r$	True stress, strain at rupture
$\tau$	Shear stress
$\phi_\beta$	Matrix of impact joint loads
$\delta\phi_\beta$	Matrix of incremental impact joint loads

## SECTION I INTRODUCTION

In recent years design verification of aircraft windshield systems subjected to bird impact has been accomplished primarily by test. A reliable analysis tool is needed to support the design process and reduce the amount of testing required to substantiate the design. This document gives detailed instruction in the use of such a tool--the Bird Impact Math Model Computer Program (IMPACT).

### PROGRAM FUNCTION

IMPACT is a CDC oriented computer program for calculating the transient dynamic response of a windshield system to loads resulting from bird impact. The theoretical development and applications, and the program documentation and implementation procedure are found in Parts 1 and 3 (separate volumes) of this report. Appendix A contains specific operational information in the form of direct duplication of Sections II and III of Part 3--Programming Manual. These sections are oriented to the Wright Patterson Computing Facility and should be directly applicable for users at that location. Refer to Part 3--Programming Manual for additional information on implementation and execution at other installations.

### PROGRAM CAPABILITIES

IMPACT solves the equations of motion of a finite element representation of the windshield system which can include multi-layered transparencies. In fact, the analysis capability is not limited to windshield systems but may be applied to a finite element model of any structure.

Pre-processing features include the capability to generate joint coordinates and element definition data for a multi-layered, variable thickness transparency from input data defining the surface of the transparency. Also included is the capability to generate model joint loads representing the bird impact by inputting the bird mass and velocity together with model geometry and impact location data. In addition to generated impact loads, the user may independently input other joint loads which may or may not vary



with time. Optionally, the preprocessing features may be by-passed, and the required card input may be provided by the user.

The presence of initial thermal gradients in the structure may be accounted for by inputting temperatures at the joint locations in the finite element model. Not only are thermal deformations accounted for, but also the material properties are calculated as a function of temperature on an element by element basis. The linear version of the program accounts for thermal deformations in the solution. However, in the current version of the nonlinear program, the code which incorporates thermal deformations has been deactivated.

Modal transformation of the equation of motion is used to reduce the problem size to a practical limit, so that a stepwise solution in time may be generated involving a large number of time increments. Either a linear or nonlinear solution of the incremental response may be chosen by the user. The linear solution is based on linear small deflection theory and is applicable to those problems which are expected to respond in a linear fashion. Since it is more economical than the nonlinear solution, it can be advantageous to use the linear solution to perform comparative design studies of a nonlinear system followed by a final nonlinear solution of the chosen design.

The nonlinear solution features an iterative solution within each time increment using the fictitious force approach to account for geometric nonlinearity with updating of joint coordinates and the calculation of an imbalance correction to the applied loads before proceeding to the next time increment. Current experience indicates that the type and number of modes used in the modal transformation may be very significant in nonlinear analysis. Therefore, for accurate results, care and understanding must be exercised in the use of transformation modes. Experience has also shown that nonlinear results are very accurate for both high and low damped systems which are small enough to be analyzed without modal transformation. The nonlinear solution is designed to account for geometric nonlinearity, including large deflections, and material nonlinearity. However, all aspects of the material nonlinearity capability are not complete, so that feature is currently not available.

Both the linear and nonlinear solutions output a file of data containing the modal incremental displacements, accumulated displacements, velocities and accelerations together with element forces, stresses (including the Prandtl-Reuss equivalent stresses) and strains for each time point. This file is generated on magnetic tape. Post-processor capability allows the user to selectively print the modal response data, untransformed displacements, joint coordinates, and element forces, stresses and strains.

The linear or nonlinear static response of a system can also be calculated if the solution is continued until the incremental response becomes insignificant. Static equilibrium is reached in the shortest time if arbitrarily high damping is introduced.

#### UNITS

The IMPACT program has been developed without dependence on units. The user may choose any system of units he wishes, and he must then be consistent in the use of those units for all data input to the program. Results must be interpreted by the same units used for the input.

#### PROJECTED IMPROVEMENTS

The following improvements are considered to be important in the further development of IMPACT:

- 1) Improved impact load generation including pressure distribution within the footprint and the effects of bird and compliant target interaction.
- 2) Automated mode extraction tailored to nonlinear requirements.
- 3) Completion of the material nonlinearity capability.
- 4) Addition of multi-connect capability.
- 5) Improved postprocessor capability including interactive and/or batch mode plot capability.
- 6) Improved user convenience.
- 7) Addition of restart capability.

## SECTION II


### MODELLING CONSIDERATIONS

This section contains information needed by the user to create a finite element model of a windshield system which may include a multi-layered transparency and support structure. It is assumed that the user is familiar with the basic concepts involved in creating a finite element model. Therefore, this discussion will be limited to modelling procedures directly related to the IMPACT program. Instructions for preparing the data cards which define the model to the program are found in Section III under INPUT DATA REQUIREMENTS, Data Code Descriptions.


#### FINITE ELEMENTS

 Figure 1 shows the finite elements which may be used to model a structure for analysis by IMPACT. Detailed discussions and derivations of these elements are presented in "Part 1, Theory and Applications", which is a separate volume of this report. They are called "lumped parameter" finite elements. In the lumped parameter concept, membrane elements and solid plate (cell) elements are assembled from bars which carry only axial load and panels which carry only shear. The lumping process is automated, so user input is reduced to basic geometric and material data. The element forces available from the Postprocessor are the lumped element forces as shown in Figures 1 and 2. The user may convert them to stresses at the joints by multiplying by the appropriate stress transform (see Part 1 Appendix C on Element Derivations). They can also be resolved to forces and moments at the mid-plane of a plate element. Element stresses and strains calculated by the program and printed by the Postprocessor are average values at element mid points.






Axial Bar Element

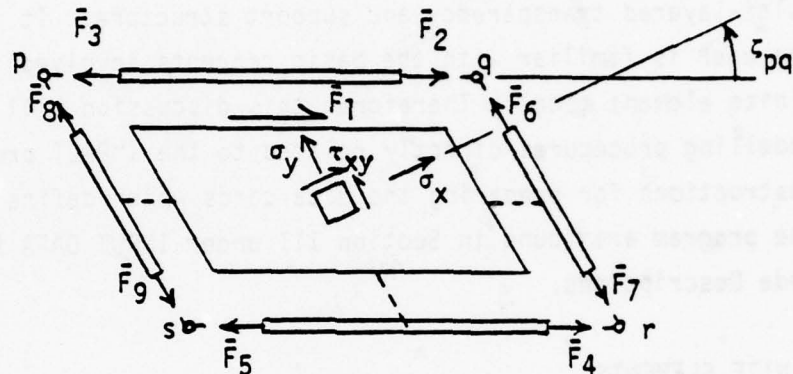

Membrane Element

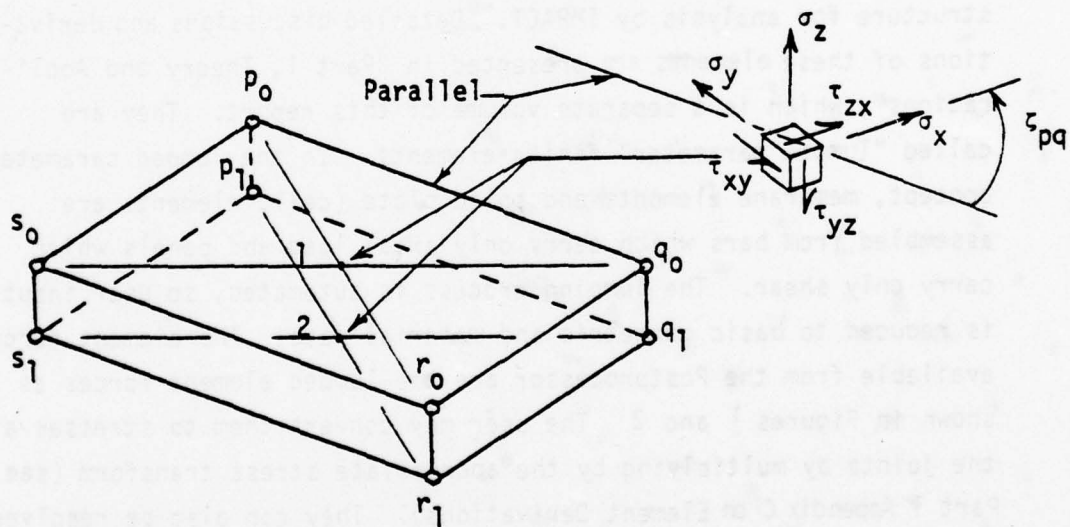

Cell Element

Figure 1. Finite Elements.



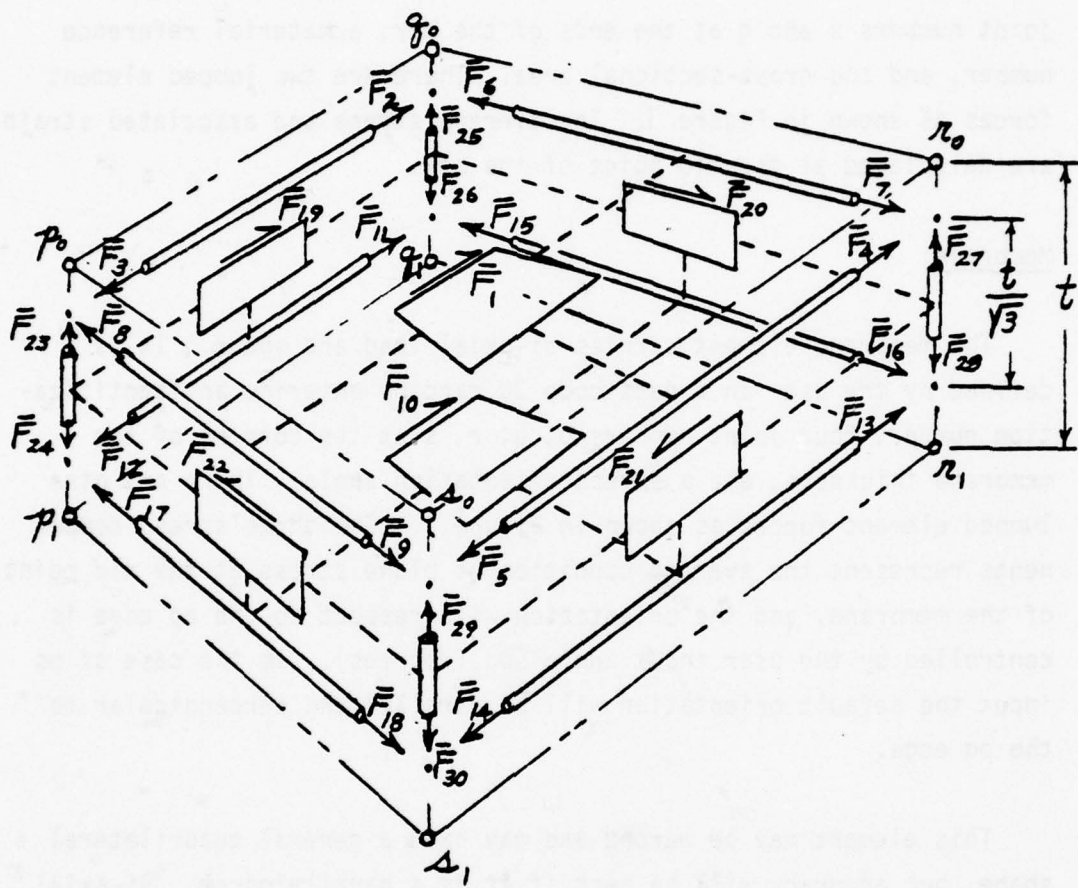


Figure 2. Cell Lumped Element Forces.

### Axial Bar

The bar element carries axial load only. It is defined by the user on a data code 20 card by entering an identification number, two joint numbers  $p$  and  $q$  at the ends of the bar, a material reference number, and the cross-sectional area. There are two lumped element forces as shown in Figure 1. The average stress and associated strain are calculated at the mid point of the bar.

### Membrane

The membrane element carries bi-axial load and shear. It is defined by the user on a data code 30 card by entering an identification number, four joint numbers  $p, q, r, s$  at the corners of the membrane thickness, and a stress orientation angle. There are nine lumped element forces as shown in Figure 1. The three stress components represent the average condition of plane stress at the mid point of the membrane, and the orientation with respect to the  $pq$  edge is controlled by the user input angle  $\phi_{pq}$  (degrees). In the case of no input the default orientation will be parallel and perpendicular to the  $pq$  edge.

This element may be warped and may have a general quadrilateral shape, but accuracy will be best if it is a parallelogram. Bi-axial Poisson coupling is accounted for.

### Cell

The cell element carries all types of load. It is defined by the user on a data code 40 card by entering an identification number, eight joint numbers  $p_0, q_0, r_0, s_0, p_1, q_1, r_1, s_1$  at the corners of the cell, a material reference number, and a stress orientation angle,

See Figure 1. It is used to represent a solid hexahedron which should be an approximate parallelepiped for best accuracy. It is called a cell because the lumped parameter representation is a cell composed of 12 bars and 6 shear panels. It is basically a plate element where the joints  $p_0$  through  $s_0$  are in the upper surface of the plate and the joints  $p_1$  through  $s_1$  are in the lower surface. The plate may be thick or thin - joint coordinates place the joints in the true plate surfaces thereby defining the thicknesses at the four corners. Thus, a laminated transparency may be modelled realistically by a stack of cell elements each having the true thickness and properties of the layer it represents.

If a string of cell elements is used to model a beam having a cross-sectional area of  $A$  and vertical and lateral bending moments of inertia of  $I_V$  and  $I_L$ , then the width  $w$  and thickness  $t$  of the cell elements in the model may be calculated from

$$w = \left( \frac{16 I_L^3}{3 I_V} \right)^{1/8} \quad (1)$$

$$t = \left( \frac{432 I_V^3}{I_L} \right)^{1/8} \quad (2)$$

Such a beam model will have the correct bending stiffnesses both vertically and laterally, but axial stiffness will be sacrificed. If axial stiffness is more important than lateral bending, the following equations may be used to satisfy vertical bending and axial stiffnesses.

$$t = \left( \frac{12 I_V}{A} \right)^{1/2} \quad (3)$$

$$w = \left( \frac{A^3}{12 I_V} \right)^{1/2} \quad (4)$$

The six stress components shown in Figure 1 represent the average state of stress at the mid-points of the upper and lower surfaces. Therefore, twelve average stresses and strains are calculated for a cell element. The x and y components are in the plane of the surface, and the x component is oriented with respect to the  $p_0q_0$  edge by the user input angle  $\zeta_{pq}$  (degrees). Figure 2 shows the lumped element forces for a cell element. The lumped elements are located at a reduced depth of  $t/\sqrt{3}$  in order to produce the correct bending stiffness. Tri-axial Poisson coupling is accounted for.

#### Point Mass

A fourth element not shown in Figure 1 is described here. The point mass element represents a local mass attached to the model at a specified joint. It is defined by the user on a data code 50 card by entering an identification number, the joint number where the mass is located, and its contributions in the global X,Y,Z degrees of freedom. These contributions are added to the appropriate diagonal elements of the structural mass matrix. This element is provided for the purpose of including non-structural mass in the finite element model.



## GRID DETAIL AND GEOMETRY

Model development usually begins with a drawing or sketch of the structure on which the user lays out a grid representing subdivision of the structure into finite elements. Surface grids and cross-sectional grids define the three dimensional model. Scale drawings are helpful for visualizing finite element shapes and for designing the grid so that important structural features are retained while varying the grid spacing so that model detail is provided in critical regions of the structure. Intersections of grid lines are called joints, and model geometry is defined in terms of joint coordinates.

Generation of joint coordinates is probably the most difficult and time consuming task in creating a finite element model of a complex structure. Some joints may be located exactly at control points for which coordinates are available on a drawing. Sometimes joint coordinates may be scaled from drawings. Coordinates for joints in the surface of a structure are usually calculated from loft data while interior joints are located by offset from the lofted surface. Some coordinates have to be calculated from equations that satisfy section property requirements in local structural elements. Some installations may have interactive graphics or other computer aided techniques to help the user in this process.

### Transparency

In a windshield system the transparency may be a single layer or a multi-layered laminate. In either case the user has to lay out the grid and calculate the joint coordinates for the outer surface only. He may then use the Laminate Generator program to generate interior joint coordinates. See Section III under INPUT PREPROCESSING, Laminate Generator. The grid mesh should be fine enough so that the dynamic response

of the structure can be adequately represented. Because of model size limitations (1200 joints) and if there are many layers in a laminated transparency, it is sometimes difficult to provide the desired degree of detail. Compromise may be necessary in the form of coarser grid in areas remote from the impact point, although careful consideration should be given as to whether critical response might occur at locations other than the impact point. Model size can also be decreased by taking advantage of structural symmetry and by modelling less of the support structure. The transparency will have some joints in common with the support structure. Therefore, planning of the transparency grid must be coordinated with important features of the support structure.

#### Support Structure

As stated above, the grid layout for the support structure is established in coordination with that of the transparency. The extent and degree of detail to be included in the model depends on considerations of factors such as model size limitations and location of impact point. Impact on or near the transparency support members would require more modelling detail to be concentrated in the support members than impact in the center of the transparency.

Extruded, formed or built-up framing members around the transparency are usually modelled as beams composed of cell elements. Load paths connecting the framing members to surrounding shell structure and a portion of the shell structure itself may be realistically represented by bar, membrane and cell elements. Joint coordinates are calculated from loft data and from drawing information.

## Loads

Loads are applied to the model at the joints in the global X, Y, Z degrees of freedom. The calculation of bird impact loads at specified joints is described under "Loads Generator". They are introduced in the input stream and converted to transformed loads as described under "MODAL TRANSFORMATION".

## ATTACHMENTS

In the overall model, the attachments between the transparency and the support structure must be simplified. A single shear bolted attachment may be represented as a simply supported or hinged connection along a single line of common joints such as joints 16, 39 and 62 in Figure 11. A double shear attachment could be represented by adding membrane elements to connect edge 13, 36, 59 to edge 22, 45, 68. In a laminate having structural plies separated by softer interlayer material the presence of bushings and bolts through the layers can be represented by specifying stiffer shear properties for the interlayer elements along the edges of the laminate. The user can approximate the stiffer properties by hand analysis.

If necessary the user can perform a more detailed study of laminate-bolt-support structure interactions by making a finite element model of the local attachment region. Important features such as bolt, bushing, and portions of the laminate and support structure can then be individually modelled in much more detail than in the overall model of the system. Response of this localized attachment model to typical impact loads can be studied to improve understanding of the interactions of the component parts and to gain insights in how to represent them realistically in the larger model.

## CONSTRAINTS

A joint may be constrained (fixed) against displacement in one, two or three specified directions. Constraint in one direction still allows the joint to be displaced in a plane normal to the specified direction. Constraint in two directions fixes the joint against movement in the plane containing the two specified direction vectors but still allows the joint to be displaced normal to the plane. Constraint in three directions fixes the joint in space and allows no displacement in any direction. Constraint data is input on data code 5 cards.

Constraints are used to support the finite element model in a stable manner and to approximate boundary conditions at the edges of the model where structural continuity needs to be represented. For example, on a symmetrically loaded structure the correct boundary conditions at an edge which lies in a plane of structural symmetry are provided by constraining all joints in the plane of symmetry in the degree of freedom normal to the plane. Constraints decrease the problem size, since each constraint eliminates one degree of freedom.

## MODEL DIAGRAMS

The user should prepare diagrams of the finite element model showing grid lay-outs and numbering sequences of joints and elements. If a computer aided drawing or plotting capability is available and can be interfaced to read model definition data (or even to help create it), then scale drawings may be produced showing the model from advantageous angles. Often non-scale diagrams are also used to clarify model details. Figures 3 through 8 are example diagrams of a large model having 910 joints, 28 bars, 143 membranes, 460 cells and 4999 degrees of freedom.



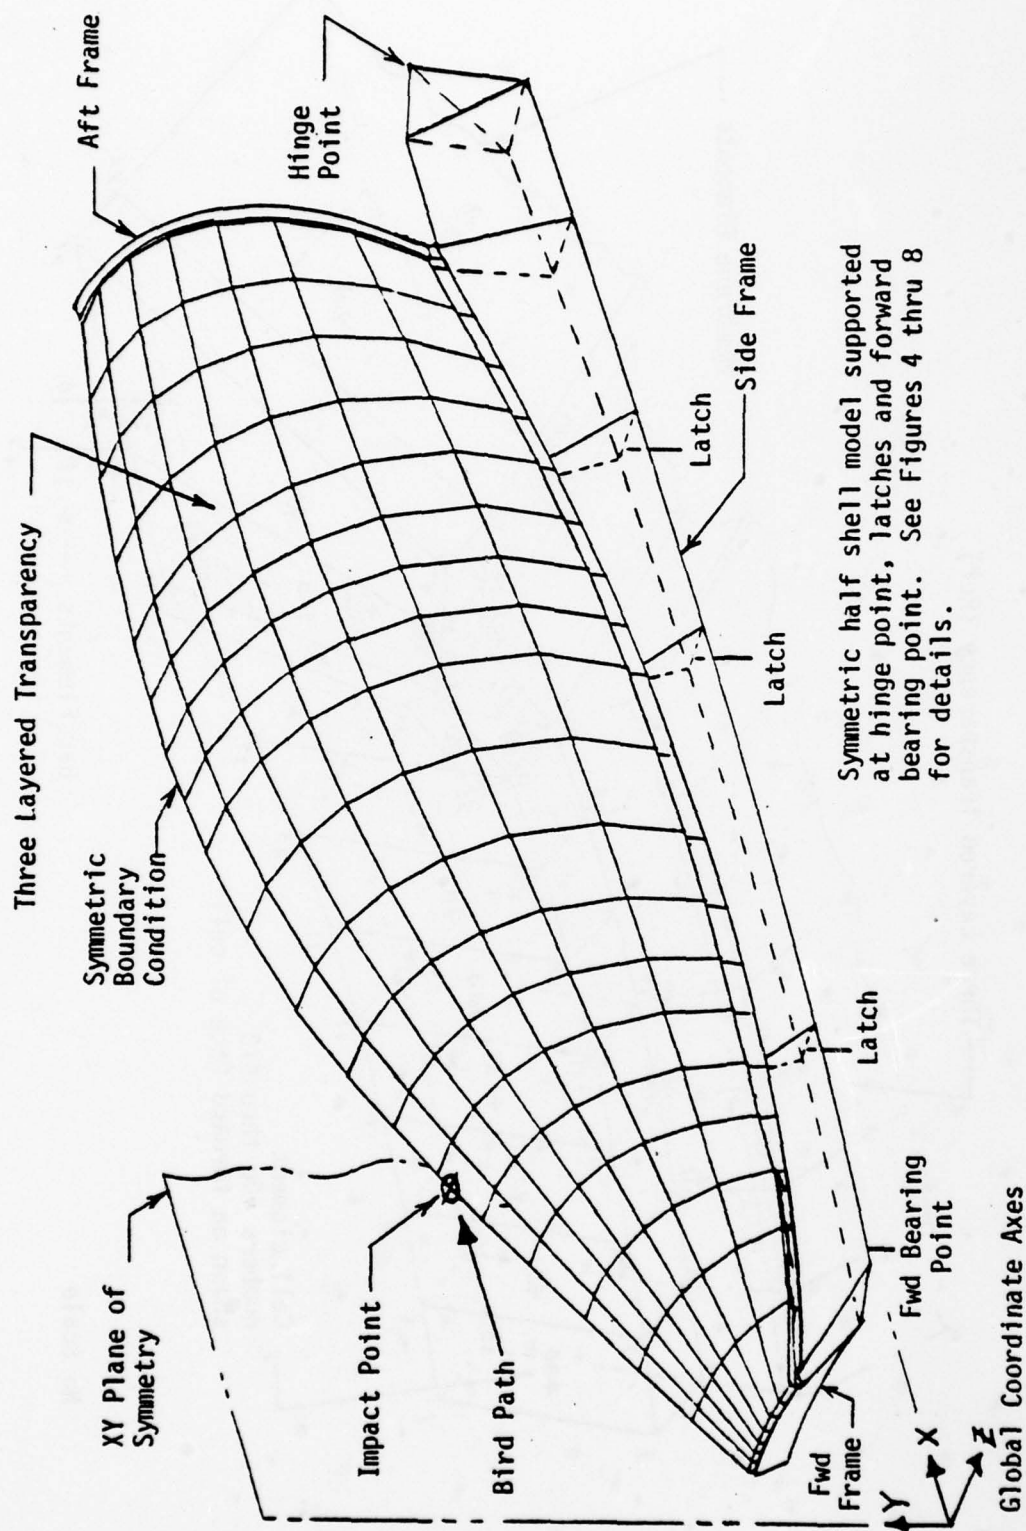


Figure 3. Finite Element Model Diagram, General View.




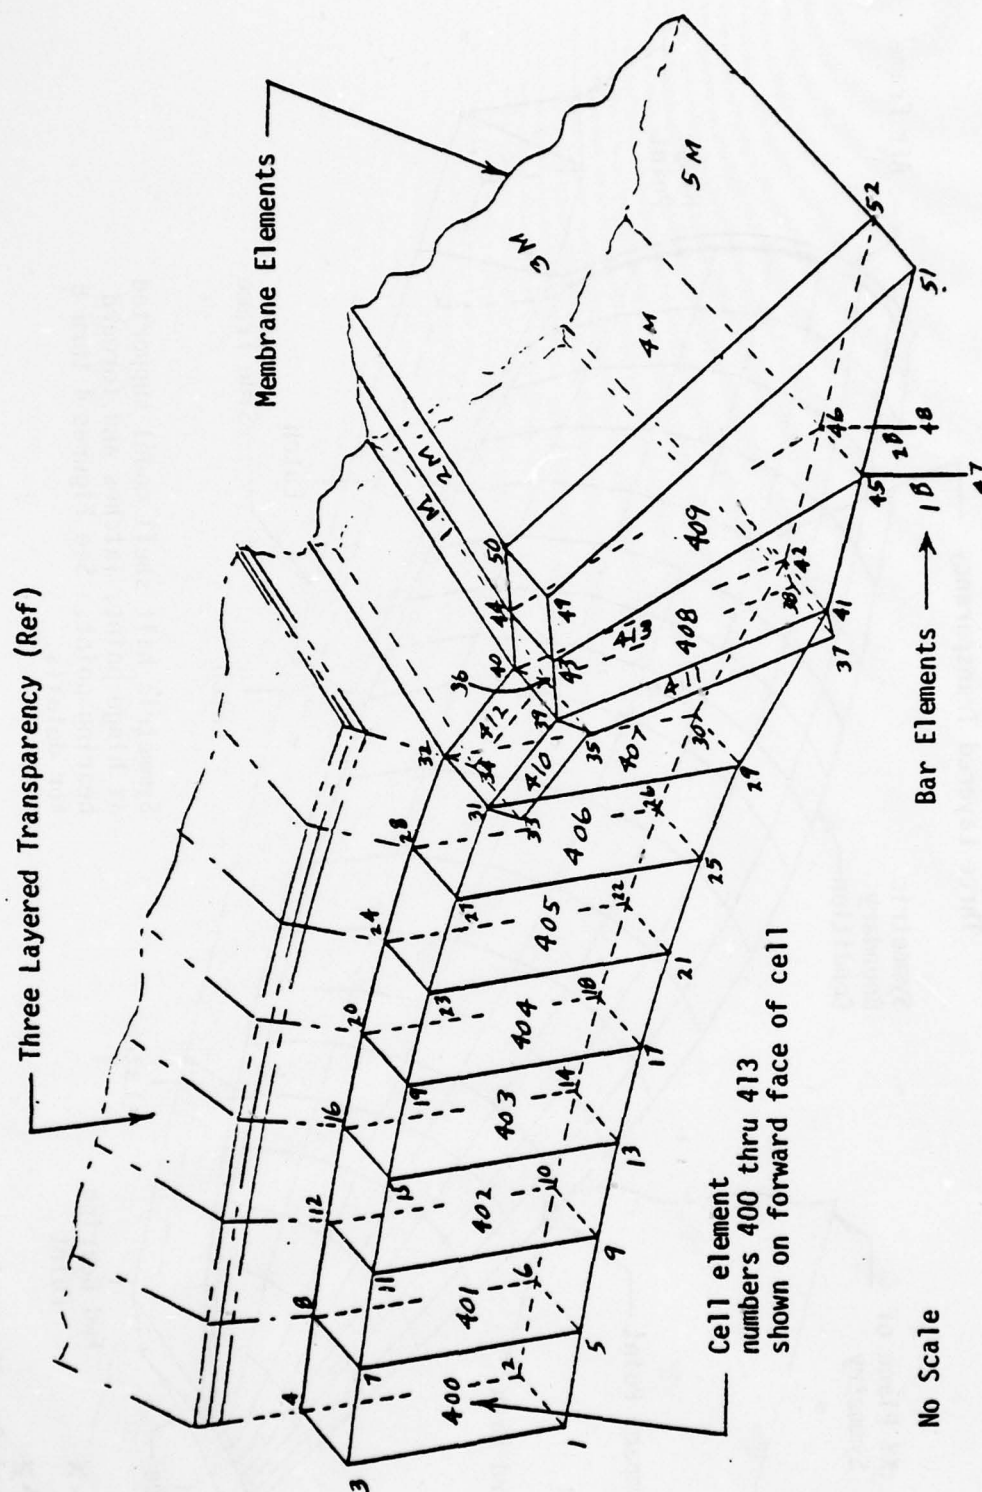


Figure 4. Model Diagram, Forward Frame.

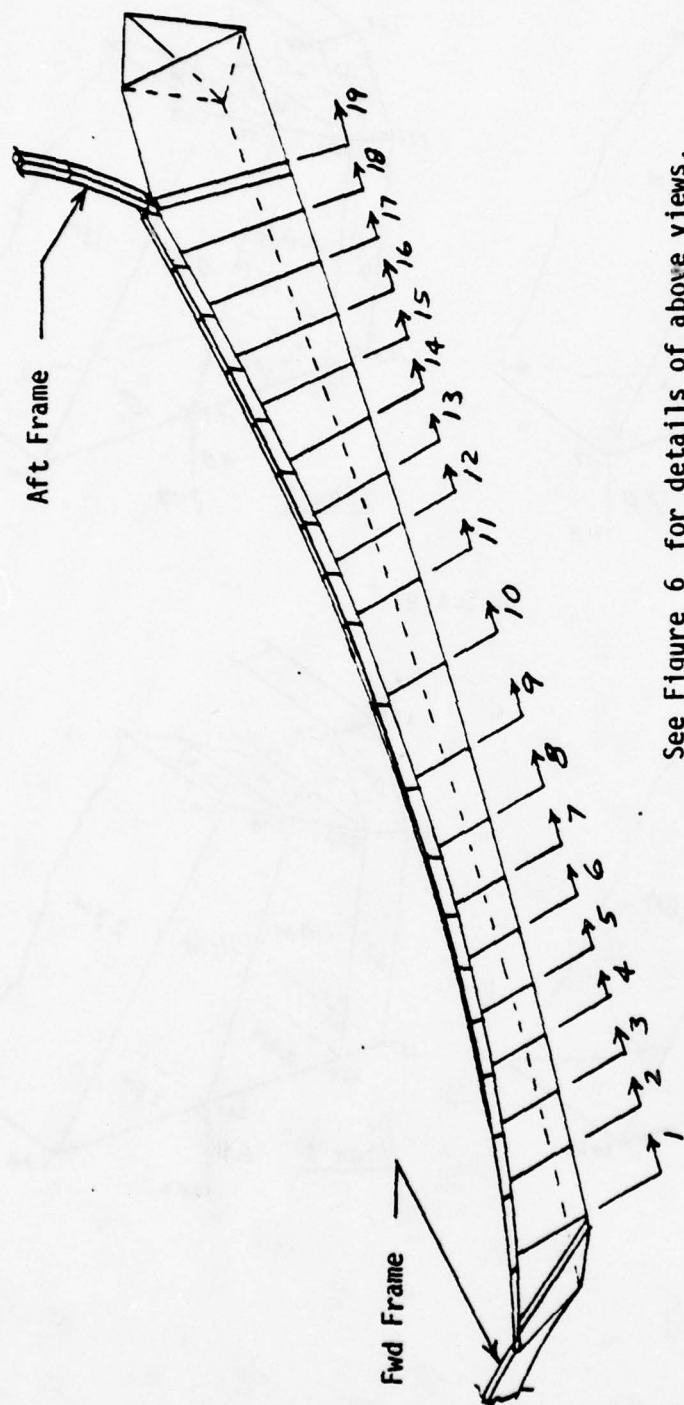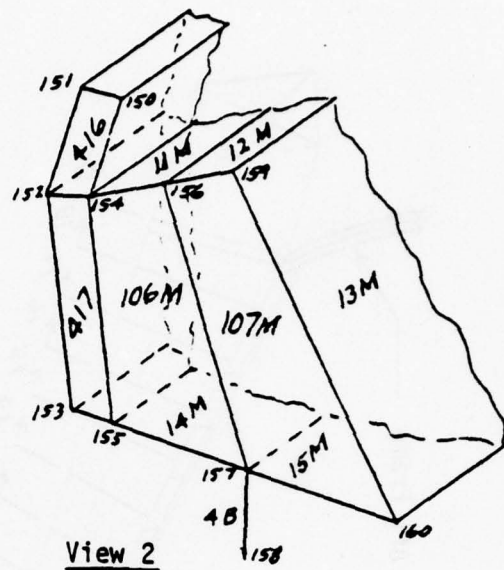

See Figure 6 for details of above views.

Figure 5. Model Diagram, Side Frame Section Cuts.

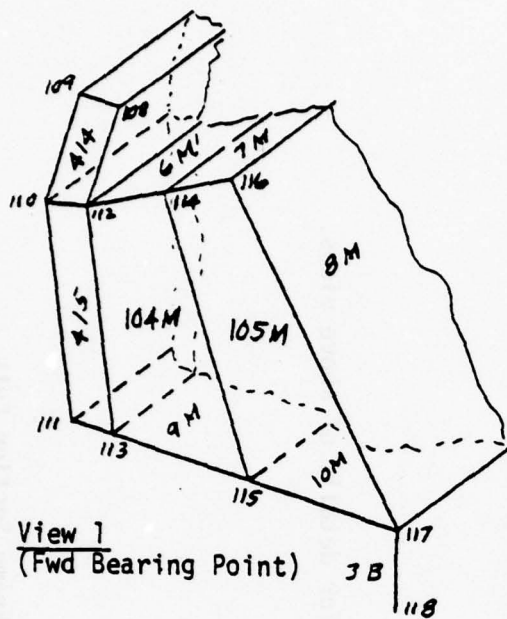

No Scale




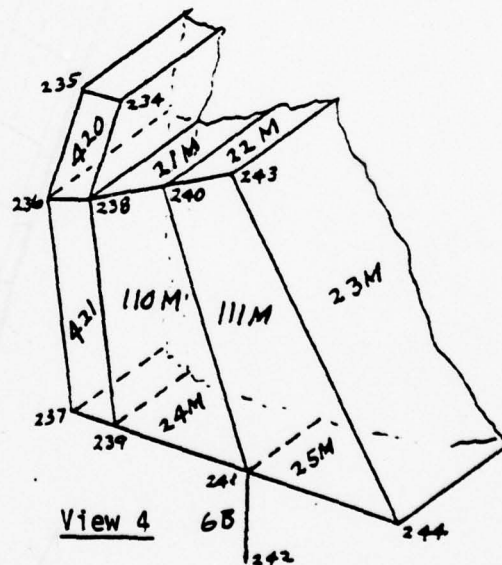


Figure 6. Model Diagram, Side Frame Sections.

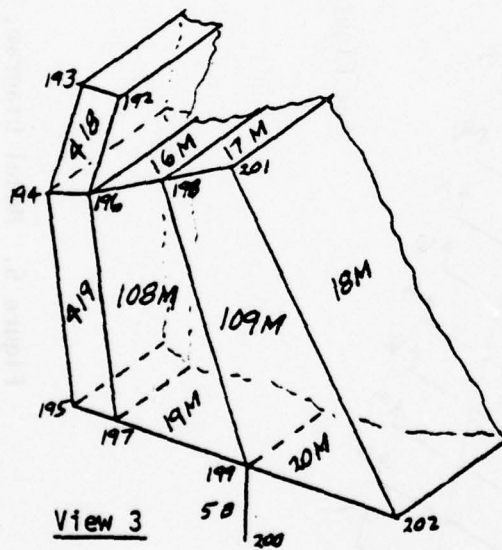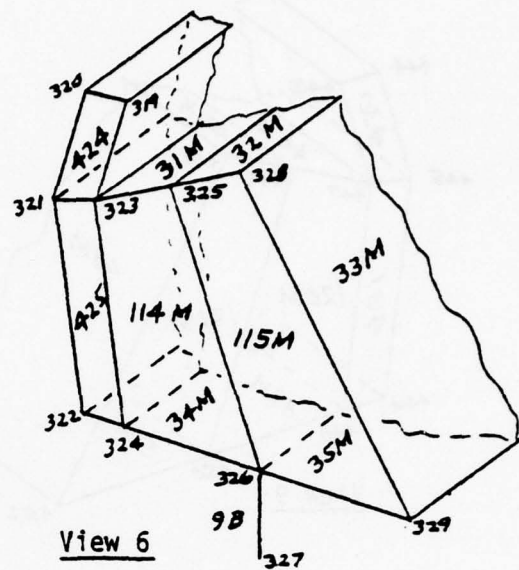

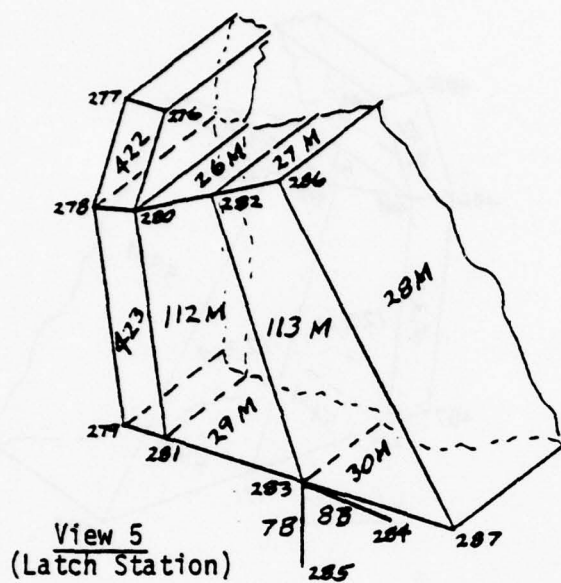

No Scale




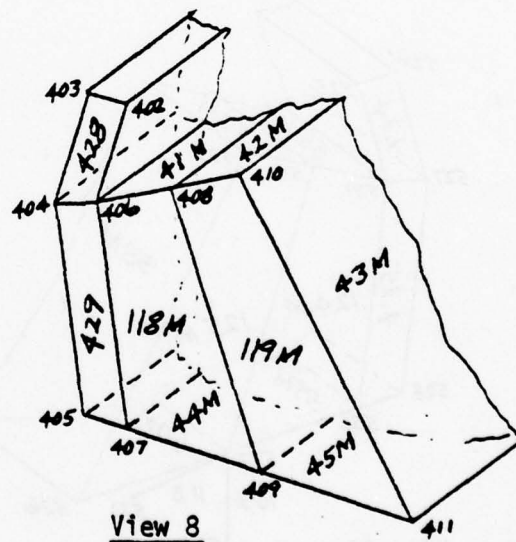


Figure 6. (Continued)

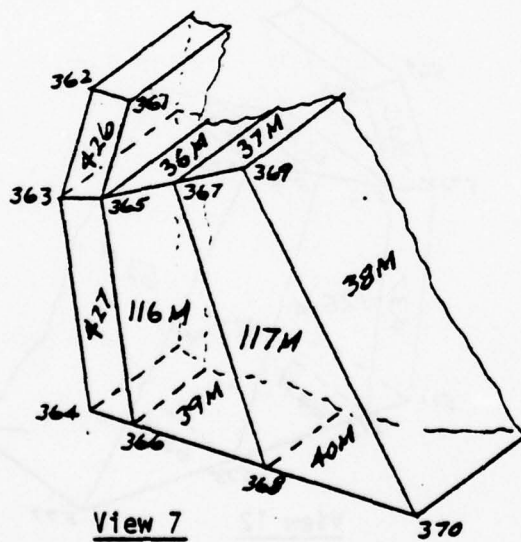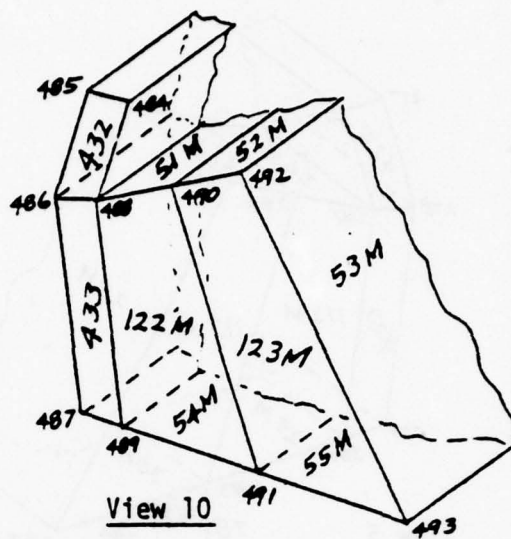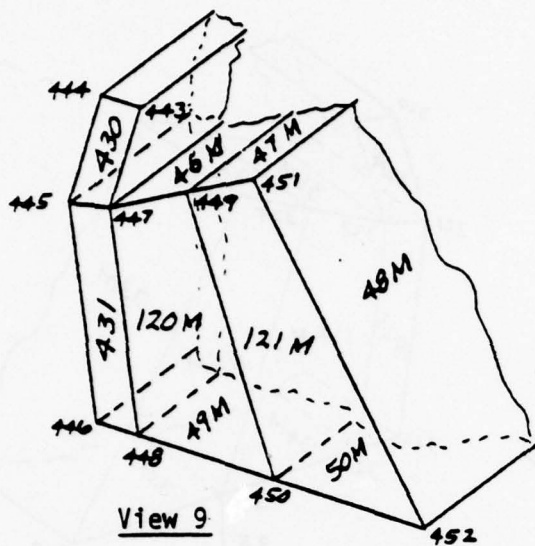

No Scale




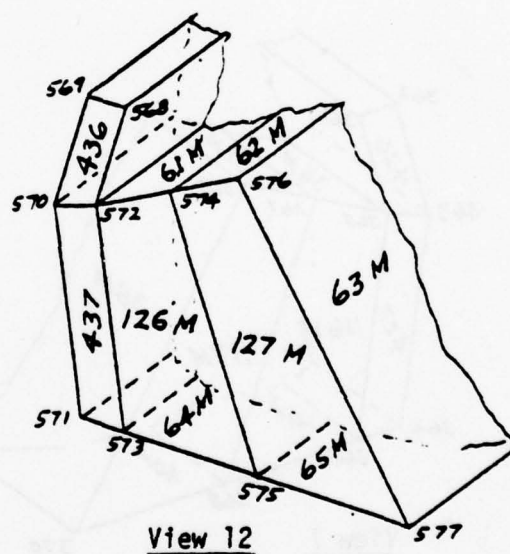


Figure 6. (Continued)

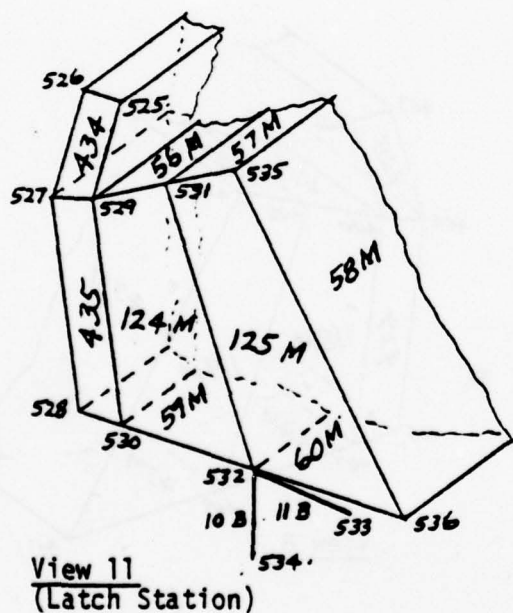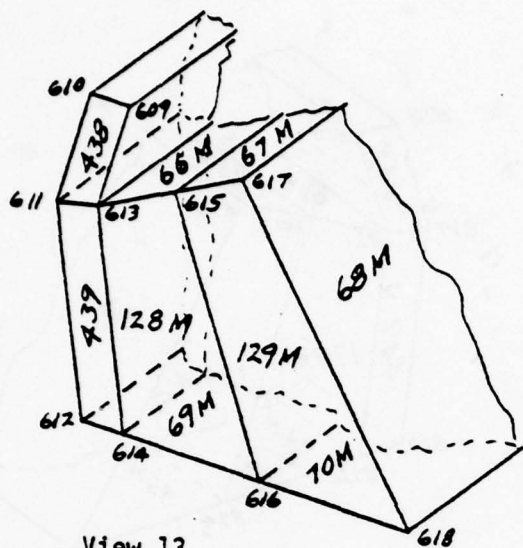


View 13

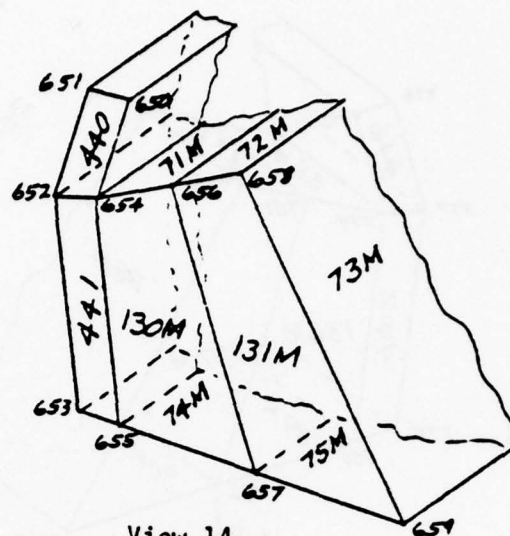


View 14

No Scale

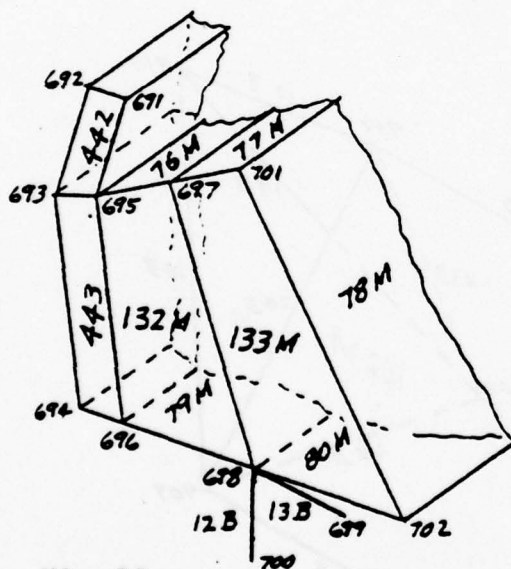

View 15  
(Latch Station)

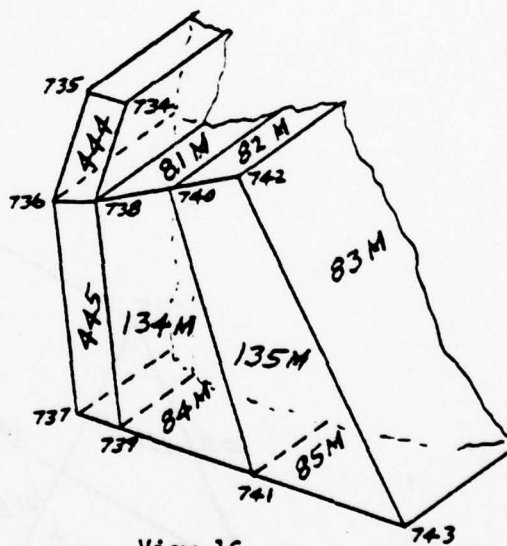

View 16

Figure 6. (Continued)





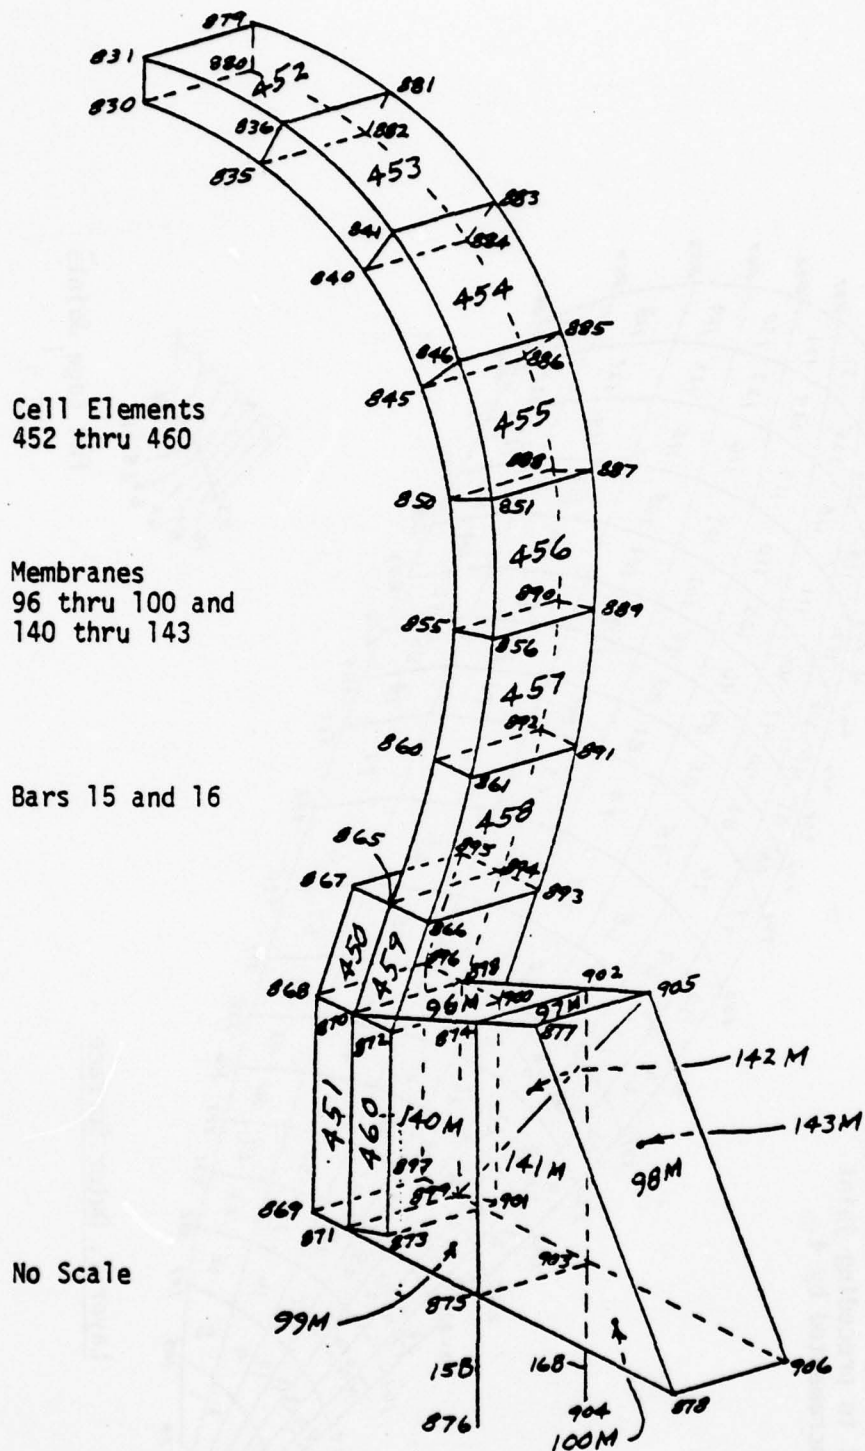


Figure 7. Model Diagram, Aft Frame.

Cell elements 1 thru 133

Edge joint numbers are shown.

Interior joint numbers (circumferentially from top & sym to lower edge) are equal to preceding joint number incremented by 4.


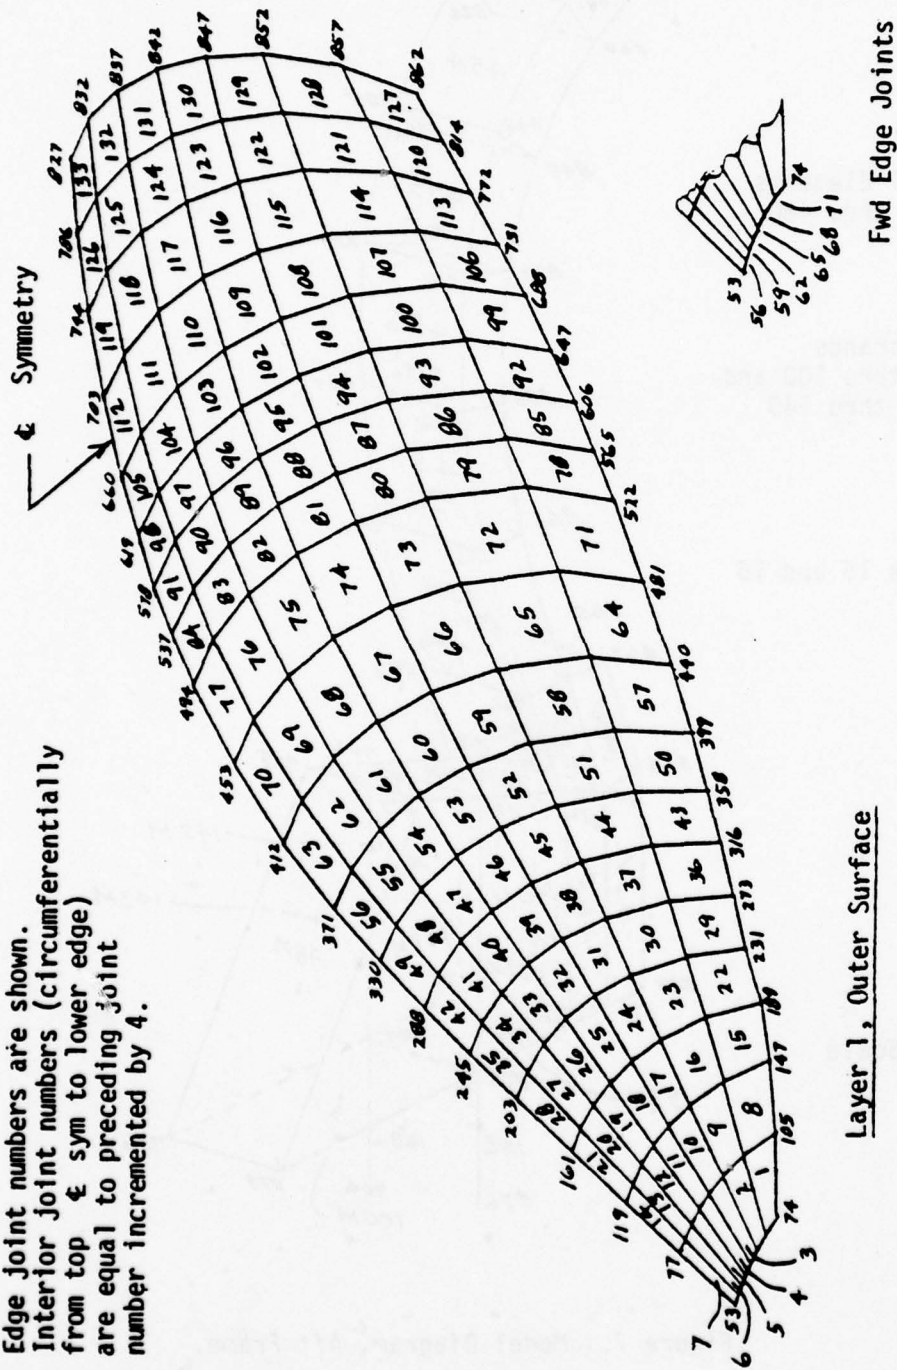


Figure 8. Model Diagram, Transparency Layers.

Cell Elements 134 thru 266.

Edge joint numbers are shown.  
Interior joint numbers (circumferentially from top & sym to lower edge) are equal to preceding joint number incremented by 4.

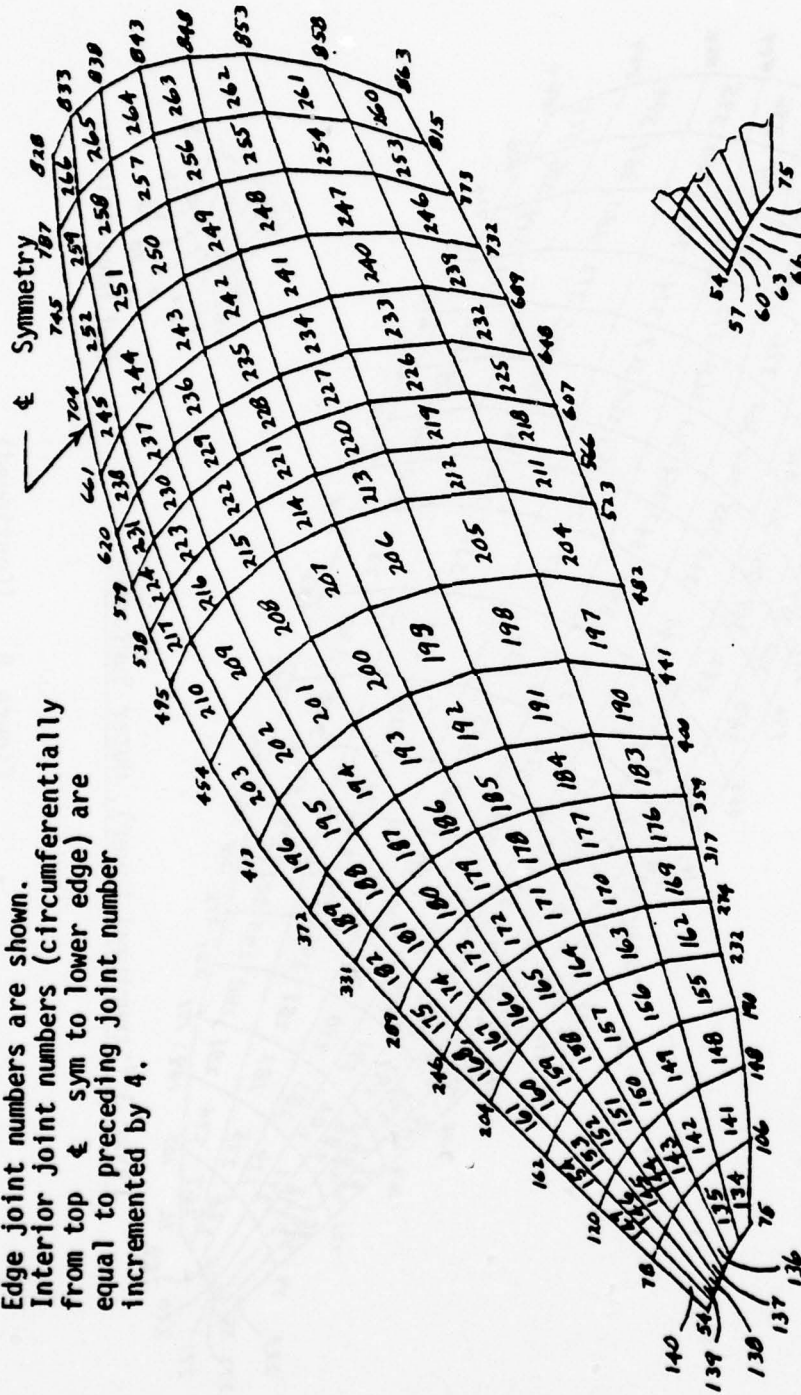

Layer 2 (Interlayer), Outer Surface

Figure 8. (Continued)

Cell Elements 267 thru 399

Edge joint numbers are shown.

Interior joint numbers (circumferentially from top  $\epsilon$  sym to lower edge) are equal to preceding joint number incremented by 4.


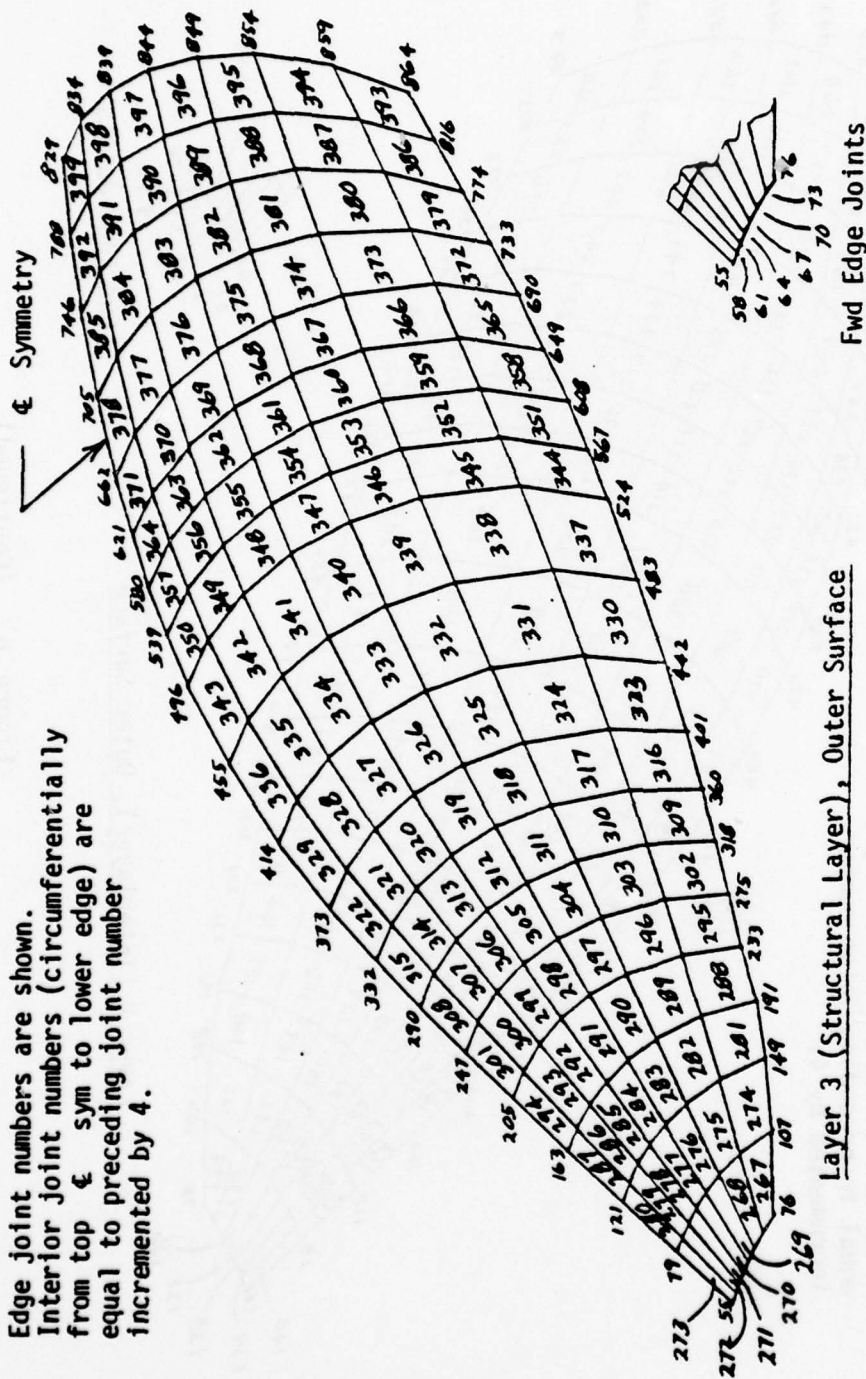


Figure 8. (Continued)



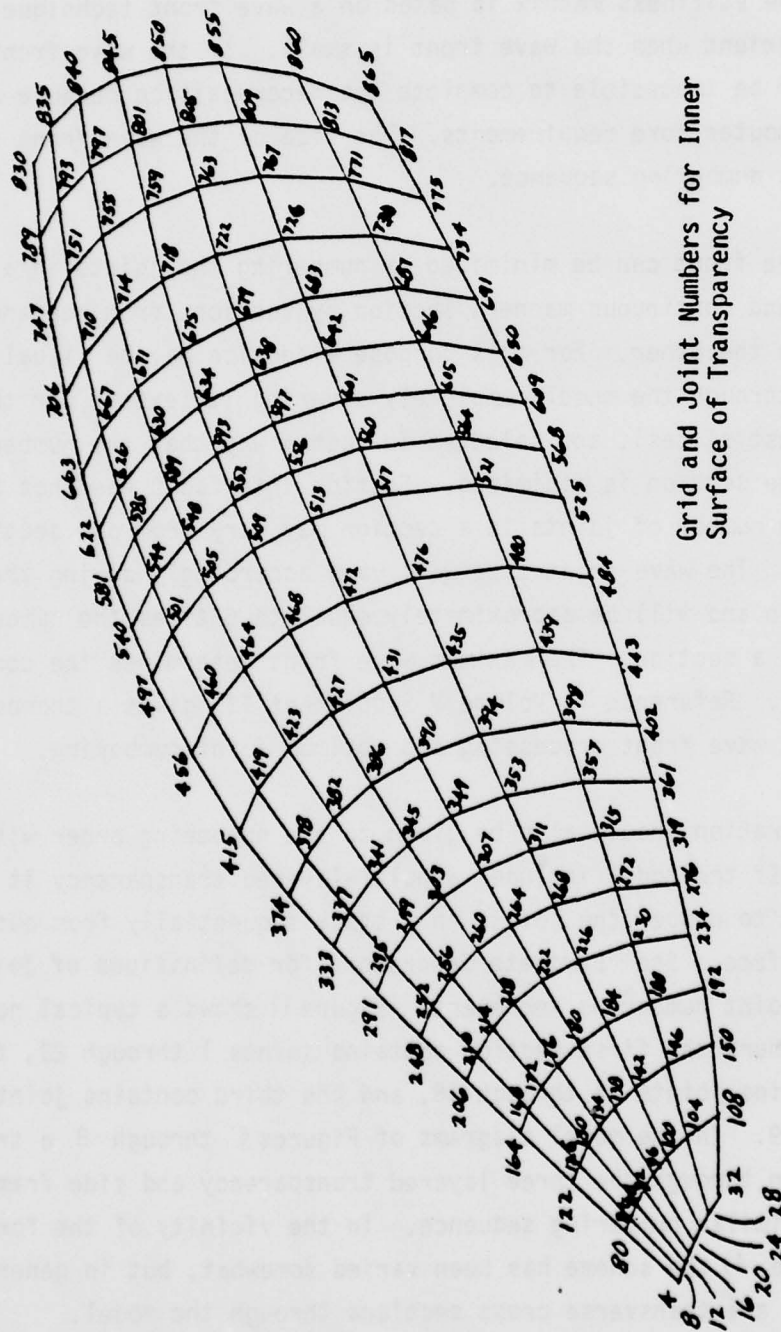

Grid and Joint Numbers for Inner Surface of Transparency

Figure 8. (Continued)

### Joint Numbering

The order in which joints are numbered is important. Decomposition of the stiffness matrix is based on a wave front technique which is most efficient when the wave front is small. If the wave front is too large it may be impossible to complete the decomposition because of prohibitive computer core requirements. The size of the wave front is related to the joint numbering sequence.

The wave front can be minimized by numbering the joints in a systematic and continuous manner, section by section, from one end of the model to the other. For this purpose a section may be visualized as a slice through the model completely severing it (except for the first and last slices), and selected in such a way that the number of joints in the section is minimized. Section interfaces need not be planes. The number of joints in a section may vary from one section to the next. The wave front size will vary accordingly during the decomposition and will be approximately equal to 6 times the number of joints in a section. The maximum wave front determines the core requirements. Reference 1, Volume V Supplement II, gives a thorough treatment of wave front processing and optimum joint numbering.

Consideration should also be given to the numbering order within a section. If the model includes a multi-layered transparency it is usually best to number the joints in a stack sequentially from outer to inner surface. See "Laminate Generator" for definitions of joint stacks and joint numbering increment. Figure 11 shows a typical numbering scheme where the first section contains joints 1 through 23, the second contains joints 24 through 46, and the third contains joints 47 through 69. In the model diagrams of Figures 4 through 8 a transverse section through the three layered transparency and side frame exhibits a similar numbering sequence. In the vicinity of the forward frame (Figure 4) the scheme has been varied somewhat, but in general the sections are transverse cross sections through the model.

### Element Numbering

Each of the four types of finite elements (bar, membrane, cell, and point mass) has its individual numbering sequence. In Figures 4 through 8 bars are numbered 1 through 28, membranes are 1 through 143, and cells are 1 through 460. There are no special rules governing the numbering of bar, membrane and point mass elements. Any systematic sequence that the user considers convenient may be used. In numbering cell elements the user must consider Laminate Generator operations and number the transparency surface elements so that inner layer element numbers may be derived by adding a constant numbering increment. Refer to the definitions and discussions under "Laminate Generator" for further information. In Figure 8 the surface cell elements are numbered 1 through 133, the second layer 134 through 266, and the third layer 267 through 399. Therefore, the numbering increment from one layer to the next is 133.

### MATERIAL PROPERTIES


Table 5 lists the ten properties which must be input for each material used in the model. Reference 3 contains the results of specialized testing to determine the mechanical properties for polycarbonate materials. Standard handbooks are used for metals.

### Ramberg-Osgood

The IMPACT program uses a Ramberg-Osgood representation of the true stress/true strain curve, see Figure 9. The analytic expression of the curve is:

$$\bar{\epsilon} = \frac{1}{\bar{E}} \left[ \bar{\sigma} - \bar{\sigma}_A \left( \frac{\bar{\sigma}}{\bar{\sigma}_A} \right)^n \right] + \frac{\bar{\sigma}_A}{\bar{E}_A} \left( \frac{\bar{\sigma}}{\bar{\sigma}_A} \right)^n \quad (5)$$

The program uses input values for  $E$ ,  $E_A$ ,  $\bar{\sigma}_A$ ,  $\bar{\sigma}_r$  and  $\bar{\epsilon}_r$  to calculate the parameters  $n$ ,  $\bar{E}$  and  $\bar{\sigma}_L$ . These parameters are required for material non-linearity considerations. As mentioned in the INTRODUCTION, the material nonlinearity code is not complete, but these basic calculations are coded,

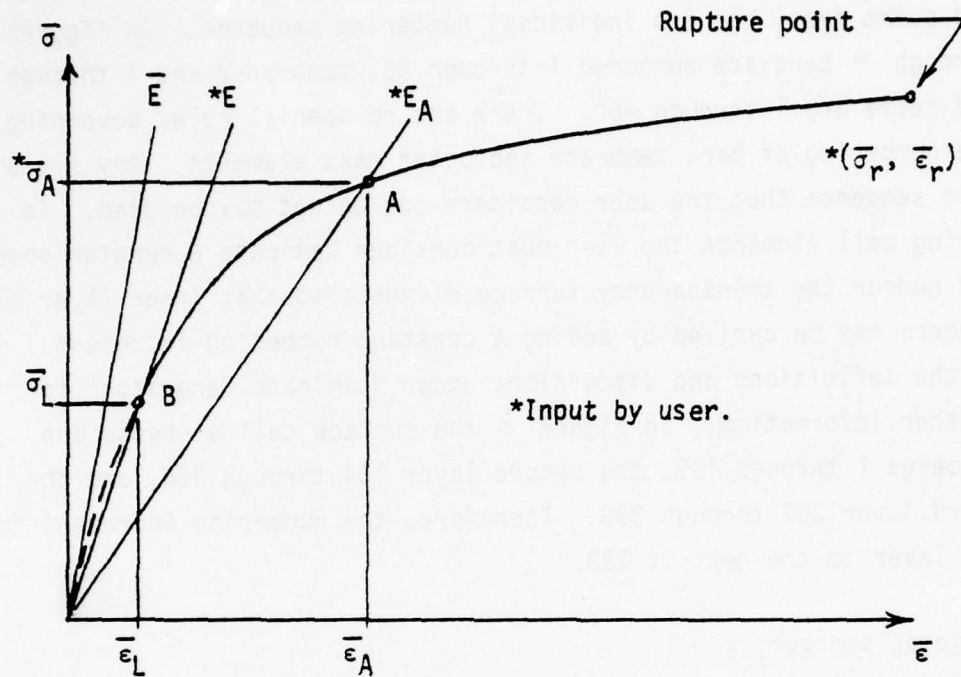

$\bar{E}$  = slope tangent to Ramberg-Osgood curve at  $\bar{\sigma} = 0, \bar{\epsilon} = 0$ .

$E$  = slope of linear part of curve (Young's modulus).

$E_A$  = secant modulus at point A, approximate yield point.

$\bar{\sigma}_L, \bar{\epsilon}_L$  = true stress and strain at elastic limit.

$\bar{\sigma}_A, \bar{\epsilon}_A$  = true stress and strain at approximate yield point.

$\bar{\sigma}_r, \bar{\epsilon}_r$  = true stress and strain at rupture.

Figure 9. Ramberg-Osgood True Stress/True Strain Curve.



and the program expects a complete set of material properties for each material. Reference 3 provides properties 1 through 9 for polycarbonate and interlayer materials. For metals, assume that point A in Figure 9 is the intersection of the standard .002 offset line with the stress/strain curve at the yield stress  $F_{ty}$ . Then

$$\bar{\sigma}_A = F_{ty} \quad (6)$$

$$\frac{\bar{\sigma}_A}{E_A} = \frac{\bar{\sigma}_A}{E} + .002 \quad (7)$$

Combining equation 6 and 7 and solving for  $E_A$  gives

$$E_A = \left( \frac{F_{ty}}{.002E + F_{ty}} \right) E \quad (8)$$

From Reference 3 the expressions for true stress and true strain are evaluated at the rupture stress  $F_{tu}$  and the rupture strain  $e$  to give:

$$\bar{\sigma}_r = \left( 1 + e - \frac{F_{tu}}{E} \right) F_{tu} \quad (9)$$

$$\bar{\epsilon}_r = \ln (1 + e) \quad (10)$$

Property number 10, the damping to stiffness ratio will probably have to be estimated for metals, unless test data is available. For polycarbonate and interlayer materials values for the damping ratio are available from Reference 4, where a method based on combined testing and analytical procedures was used to determine damping ratios for several materials.

It is sometimes desirable to specify elastic material properties. For example, glass and some interlayer materials exhibit negligible plastic characteristics. In such a case the user may establish the values for  $E$  and  $\bar{\sigma}_r$  and set

$$E_A = E, \quad \bar{\sigma}_A = \bar{\sigma}_r, \quad \bar{\epsilon}_r = \frac{\bar{\sigma}_r}{E} \quad (11)$$

The program will recognize this as a special situation, and as a result some of the calculations oriented toward material nonlinearity (plasticity) will be eliminated. The user may recognize that since material nonlinearity capability is not fully operational anyway, he may use this elastic option as a way to simplify input until such time as material nonlinearity is completed.

#### Strain Rate Dependence

The program does not automatically account for continually changing strain rates in all elements of the model. This is thought to be prohibitive. Instead the user estimates the expected strain rate and inputs material properties that are consistent with the estimated strain rate.

#### Temperature Dependence

If values of the material properties are available at more than one temperature the user will have an indication of temperature dependence. As explained in Section III under INPUT DATA REQUIREMENTS, Data Code Descriptions, Data Code 10, as many temperature and property value pairs as are available may be input for each property. The program then uses the input temperature/value pairs in a least squares curve fitting procedure to calculate a specified number of coefficients for a polynomial equation which defines the property as a function of temperature. An alternate option allows the user to input the coefficients of the polynomial equation directly if he so desires. The first coefficient is the value of the property when there is no temperature dependence. Subsequent coefficients introduce temperature effects in terms of powers of the temperature of the finite element being processed. The program calculates finite element temperatures from joint temperature data which the user inputs on data code 2 or 3 cards. Note that when no temperature dependence is being specified the second option should be used to input only the first coefficient which is then equal to the value of the property.

## LIMITATIONS AND COMPUTING TIME

Model size limitations are given in Table 1. In general these limits should allow the user to model a structure with as much detail as practicable from the standpoint of computing time.

TABLE 1. MODEL SIZE LIMITATIONS

ITEM	MAXIMUM NUMBER
Joints	1200
Direction Cosines	50
Constraints	600
Materials	20
Element Forces	20000
Edge Degrees of Freedom	3000

In the discussion under "Joint Numbering" it was pointed out that the wave front during decomposition of the stiffness matrix should be kept as small as possible to minimize computer core requirements. Table 2 gives approximate correspondence between wave front and core requirement.

TABLE 2. WAVE FRONT AND COMPUTER CORE

WAVE FRONT	CORE REQUIREMENT (CM)
140	100,000
280	200,000
370	300,000

Table 3 is presented to give the user a basis for estimating computer time. The tabulated values are actual run times on the CDC Computer.

TABLE 3. CDC COMPUTER TIME, SECONDS

Model Size	Joints	910	599	16
	Bars	28	0	2
	Membranes	143	0	2
	Cells	460	215	2
	Deg. of Freedom	4999	3042	76
	Modes	30	30	10
	Wave Front	253	172	--
Laminate Generator		30 CPU	11 CPU	Small model, all steps combined in one computer run for 10 time incre- ments.  30 CPU 80 I/O
Loads Generator		15 CPU	14 CPU	
Initial Generator		537 CPU 1098 I/O	245 CPU 401 I/O	
Decomposition		4066 CPU 7324 I/O	1000 CPU 1800 I/O	
Modal Transformation		5240 CPU 8320 I/O	2000 CPU 3200 I/O	
Data Files for Inc Sol		600 CPU 1500 I/O	250 CPU 600 I/O	
Linear Incremental Sol		750+20/Inc 1250+35/Inc	292+9/Inc 500+15/Inc	
Nonlinear Incremental Sol		---	100+430/Inc 100+280/Inc	
Postprocessor		37 CPU 474 I/O	25 CPU 320 I/O	



## KEY-PUNCH DATA FORMS

The following seven pages are suggested forms on which the user may list model definition data in order to have it keypunched to data cards. These forms are consistent with the descriptions given in SECTION III under "Data Code Descriptions." Note that the same data card format may be applicable to more than one data code. For example, data codes 1 through 5 all require the same data card format. The user may copy these forms as needed, or he may use them as a guide to design his own forms.



## DAC 25-1212C (REV 0 09)

[illegible]







[illegible]

## FORM - DATA CODE 11

[illegible]

[illegible]



## DAC 25 112C (MAY 1990)

42



### SECTION III USING THE PROGRAM

The use of the IMPACT computer program is described in this section.

#### FUNCTIONAL FLOW CHART

Figure 10 shows the sequential steps the user follows in the application of the IMPACT program. User generated card input data is primarily finite element model definition data but also includes all the rest of the card input that will be required during the course of the analysis. The preparation of input data cards is described in detail in the subsection INPUT DATA REQUIREMENTS.

The CDC UPDATE procedure may be used to input the model definition card deck and store it in an UPDATE data file. UPDATE may be used also to edit a model data file and to input model data to the Laminate Generator, Loads Generator, or Initial Generator programs. Optionally, the user may input the model definition cards directly to these programs.

The Laminate Generator program is designed to read a partial model definition deck and generate the missing data to form a complete model definition. The Loads Generator program extracts the necessary information from a model definition deck to generate bird impact loads. Functions identified to this point are referred to as "preprocessing" functions, and the modules involved are collectively termed the Preprocessor.

The Initial Generator reads a complete model definition deck and generates the structural matrices and information lists required in subsequent analysis steps. Structural mass generation, stiffness decomposition, vibration mode extraction and modal transformation are performed by the FORMAT program, which is described in Reference 1. FORMAT is also used to produce properly ordered data files for input to the incremental solution. The Incremental Solution code calculates the modal response and element forces, stresses and strains for the specified time points, and finally the post processor prints out selected information for use in evaluating results.

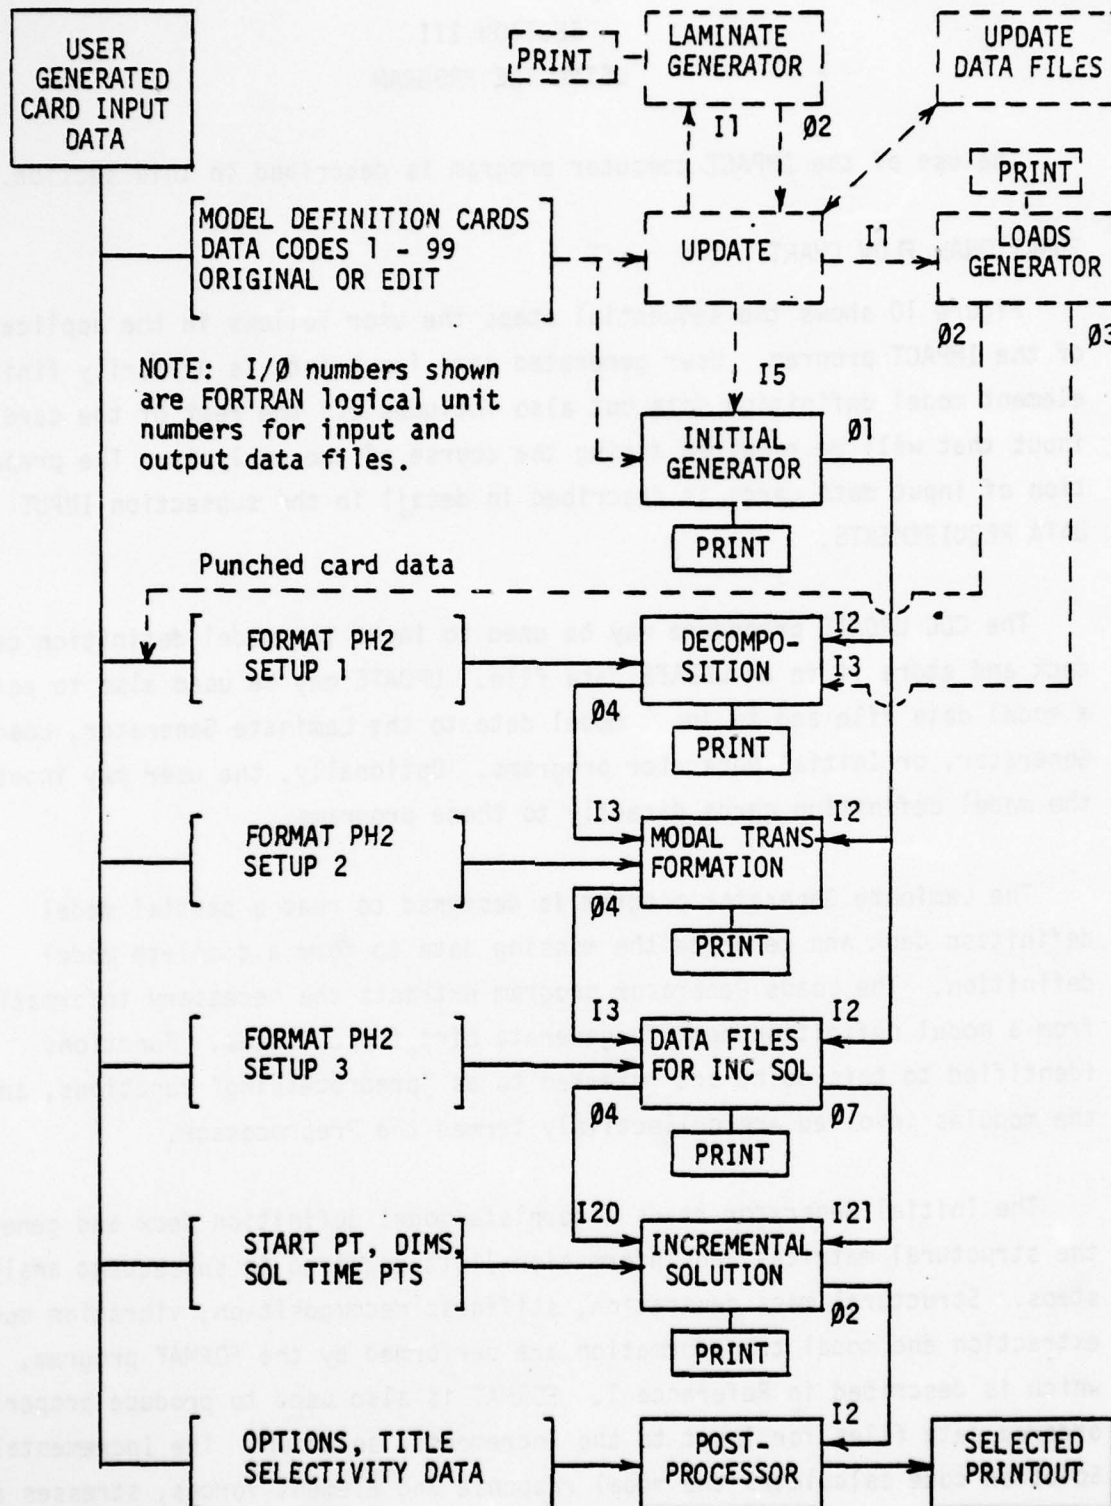


Figure 10. IMPACT Functional Flow Chart.

Detailed discussions of the functions shown in Figure 10 are presented in the following subsections. Appendix A contains an example deck setup including JCL.

#### INPUT DATA REQUIREMENTS

User generated card input data is described in this subsection.

##### Data Code Descriptions

Model definition data for the IMPACT program is identified by a data code entered in card columns 1 and 2 of each card. The data code is an integer value in the range 1 through 99. The following pages give the data code designation, type of data, input card format, and descriptions of the data to be entered in each field of the input card. Card diagrams for each data code show general headings which indicate whether the data to be entered is integer or floating point, then the card fields are marked off with a pre-entered data code in card columns 1, 2 and field heading symbols shown in applicable fields (unused fields are crossed out), and finally the beginning card column is identified at the left side of each field. In some cases, the ending card column for a field is also shown for clarity. Definitions of the field heading symbols are listed following the card diagram.

A data code deck consists of as many cards as necessary to input the type of data identified by a given data code followed by an end card having the data code and four nines entered in card columns 1 through 6. A model definition deck is made up of applicable data code decks stacked in the order of increasing data codes. A complete model definition deck as required by the Initial Generator program must include data codes decks indicated in Table 4. A data code deck

may be nothing more than the end card if that type of data is not needed to define a particular model, but the end card must be present as a minimum. Note that some data code decks are optional. However, a complete model definition deck will not be output from the Laminate Generator unless all the optional data code decks are input.



TABLE 4. MODEL DEFINITION DATA CODE SUMMARY

DATA CODE	TYPE OF DATA	GENERATOR PROGRAMS		
		LAMINATE	LOADS	INITIAL
1	Constants	OPT	OPT	REQ
2	Joint Coordinates	REQ, GEN	REQ	↑
3	Joint Temperatures	OPT	OPT	↑
4	Direction Number Definitions	OPT	↑	↓
5	Joint Constraint Definitions	OPT	↑	REQ
6	Surface Normal Vectors	GEN	↓	OPT
7	Laminate Definition Data	REQ	↓	-
8	Laminate Variable Thickness Data	OPT	OPT	-
9	- Not Used -	-	-	-
10	Material Properties	OPT	OPT	REQ
11	Bird Impact Definition Data	OPT	REQ	OPT
12	Impact Footprint Joint List	OPT	REQ	OPT
13-19	- Not Used -	-	-	-
20	Axial Bar Element Definition	OPT	OPT	REQ
21-29	- Not Used -	-	-	-
30	Membrane Element Definition	OPT	OPT	REQ
31-39	- Not Used -	-	-	-
40	Cell Element Definition	REQ, GEN	OPT	REQ
41-49	- Not Used -	-	-	-
50	Point Mass Element Definition	OPT	OPT	REQ
51-99	- Not Used -	-	-	-

REQ = required

OPT = optional

GEN = generated by program

REQ, GEN = basic data required to be input, additional data  
is generated by program

- = must not be present

# Data Code 1, Constants

User inputs two data cards and one end card.

RT ADJ INTEGER					FLOATING POINT				
1	X	X	X	X	a	b	X	X	X
123	7	11	15	19	34	49	54	72	
19999	End Card								

## Card 1

a = base temperature  $T_B$  (such as room temperature) for the analysis

b = mechanical equivalent of heat J (example:  $J = 4.184 \times 10^7$  ergs/calorie)

## Card 2

a =  $1.0 \times 10^6$

= bar compliance coefficient (part of material nonlinearity capability for which code is incomplete, but a value for "a" is required)

 


b =  $1.0 \times 10^{-12}$

= stiffness suppression coefficient (eliminates insignificant values in stiffness matrix)

Note: Values for "a" and "b" are currently required to be input by user, but eventually should be built into code.

## Data Code 2, Joint Coordinates

User inputs one card for each joint and one end card. See pages 11 and 76 for discussions of joint coordinates.

RT ADJ INTEGER				FLOATING POINT				
2	JT				X	Y	Z	T <sub>J</sub>
123	7	11	15	19	34	49	64	72
29999				End Card				

JT = joint identification number (<9999)

X, Y, Z = X, Y, Z coordinates of the joint in the right hand cartesian coordinate system of the model

T<sub>J</sub> = temperature of the structure at the joint location. (This temperature implies thermal deformations if different from the base temperature specified in data code 1.)

### Data Code 3, Joint Temperature

This data overrides temperatures previously input on data code 2 cards.  
The user inputs data cards as necessary and one end card.

RT ADJ INTEGER				FLOATING POINT					
3	JTa	JTb							T <sub>J</sub>
123	7	11	15	19	34	49	64	72	
39999	End Card								

JTa = joint number

JTb = optional entry of joint number to define a range of joint numbers JTa to JTb, inclusive

T<sub>J</sub> = temperature of the structure at joint JTa or at all joints in the range JTa through JTb, if JTb is input



# Data Code 4, Direction Number Definitions

User inputs one card for each direction number and one end card.

RT ADJ INTEGER					FLOATING POINT			
4	DIR	JTm	JTn	X	$l_x$	$l_y$	$l_z$	X
123	7	11	15	19	34	49	64	72
49999 End Card								

DIR = direction identification number (1,2,3,...)

Option 1: Enter joint numbers JTm and JTn to define the direction parallel to the vector JTm to JTn

Option 2: Enter direction vector components  $l_x$ ,  $l_y$ ,  $l_z$  (need not be normalized) to define the direction

Note: This data provides a table of direction numbers which can be referenced to define the direction of joint constraints in data code 5. It is particularly convenient when a large number of constraints are oriented in the same direction.

# Data Code 5, Joint Constraint Definitions

The joint will be constrained against displacement in the given direction. User inputs one card for each constraint and one end card. See page 14 for discussion of constraints.

RT ADJ INTEGER					FLOATING POINT			
5	CON	JTm	JTn	DIR	$l_x$	$l_y$	$l_z$	
123	7	11	15	19	34	49	64	72
59999	End Card							

CON = constraint identification number (1,2,3,...)

JTm = number of the joint to be constrained




Option 1: Enter joint number JTn to define the constraint direction parallel to the vector JTm to JTn

Option 2: Enter a direction number DIR to reference a direction defined in Code 4 data

Option 3: Enter direction vector components  $l_x$ ,  $l_y$ ,  $l_z$  (need not be normalized) to define the constraint direction

Data Code 6, Surface Normal Vectors, reference Figure 11.

This data is generated by the laminate generator program but may be edited or input by cards.

RT ADJ INTEGER				FLOATING POINT				
6	JTs				$n_x$	$n_y$	$n_z$	$A_s$
123	7	11	15	19	34	49	64	72
69999 End Card								


JTs = joint number of a joint on the surface of the laminate

$n_x, n_y, n_z$  = X, Y, Z components of a unit vector normal to the surface at joint JTs and pointing into the laminate

$A_s$  = surface area of a section of the laminate associated with joint JTs, reference Figure 11

# Data Code 7, Laminate Definition Data

User inputs cards as necessary to define a multi-layered laminate followed by one L+99 card and one end card. (See pages 75 through 80 for discussion of laminate data.

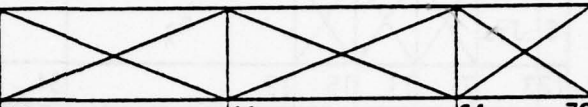RT ADJ INTEGER					FLOATING POINT				
$7L+l$	$M_l$	$\Delta J_l$	$\Delta E_l$	$t_l$					
123	7	11	15	19					
					34	49	64	72	

$7L+99$  blank for  $l = 0$  and  $t_l = t_0$

## 79999 End Card

- L = laminate identification number (any multiple of 100 < 9900)
- l = layer number (0, 1, 2, 3, ...)
- $M_l$  = material identification number for layer l ( $M_l$  is a reference to code 10 data)
- $\Delta J_l$  = joint numbering increment for layer l ( $J_{in_l} = J_{out_l} + \Delta J_l$ ), see page 76
- $\Delta E_l$  = element numbering increment for layer l ( $E_l = E_{l-1} + \Delta E_l$ ), see page 78
- $t_l$  = thickness of layer l
  - = surface offset  $t_0$  when  $l = 0$

Note: A model of a windshield system could contain more than one laminated transparency (windshield, side window, etc.). The laminate identification number L provides for identifying each laminate by a user assigned number as defined above.



# Data Code 8, Laminate Variable Thickness Data

User inputs cards as necessary to define variable thickness layers in a multi-layered laminate followed by one end card. See page 79.

RT ADJ INT			FLOATING POINT						
8	JTa	JTb	$t_1$	$t_2$	$t_3$	$t_4$	$t_5$	$t_6$	
123	7	11	21	31	41	51	61	70	
89999 End Card									

JTa = surface joint number below which layer thicknesses  $t_1, t_2, t_3, \dots$  are to be used to override layer thicknesses specified in Code 7 data

JTb = surface joint number which, if present, defines a range of surface joint numbers JTa through JTb below which the layer thicknesses will be effective

Note: If there are more than six layers in the laminate, enter  $t_7$  through  $t_{12}$  on a second card with card columns 1 through 10 duplicated from the first card. Continue this process as necessary.

## Data Code 10, Material Properties

A set of cards M through M+99 is input for each material used in the structure. One end card follows the last set. See page 29 for discussion.

RT	ADJ	INT	ALPHAMERIC
10	M	X	Material name and descriptive information

RT	ADJ	INT	FLOATING POINT
10M+P	X	NC	$T_1$ $V_1$ $T_2$ $V_2$ $T_3$ $V_3$

10M+P	NI	X	$a_0$ $a_1$ $a_2$ $a_3$ $a_4$ $a_5$
123	7 9 11		21 31 41 51 61 70

10M+99

Card col 72 non-blank for continuation  
No restrictions on symbol choice.

109999 End Card

M = user assigned material identification number (100, 200, ...) which can be referenced in element definition cards to specify the element material

P = property identification number (1, 2, 3, ...)

Either of two options may be used to input each material property as a function of temperature. Both options result in coefficients  $a_i$  of a polynomial equation for the value of the property  $V_p$  as a function of temperature  $T$  ( $V_p = a_0 + a_1T + a_2T^2 + \dots$ )

### Option 1

NC = number of polynomial coefficients to be computed by the program from the given  $(T_i, V_i)$  pairs

$\leq$  number of  $(T_i, V_i)$  pairs input

Data Code 10 (Cont.)

$T_i, V_i$  = pairs of values where  $V_i$  is the value of the property  $P$  at the temperature  $T_i$  ( $i = 1, 2, 3, \dots$ )

Option 2

$NI$  = number of polynomial coefficients  $a_i$  to be input by the user as an alternate to inputting  $(T_i, V_i)$  pairs

$a_i$  = coefficients of a polynomial equation which gives the value of the property  $P$  as a function of temperature ( $i = 0, 1, 2, 3, \dots$ )

Currently, there are ten properties which must be input for each material using one of the two options described. Assigned property numbers  $P$  and the corresponding property descriptions are given in Table 5.



TABLE 5. MATERIAL PROPERTY IDENTIFICATION

P	Property Description	Symbol
1	Elastic modulus (Young's)	$E$
2	Secant modulus at point A	$E_A$
3	True stress at point A	$\bar{\sigma}_A$
4	True stress at rupture	$\bar{\sigma}_r$
5	True strain at rupture	$\epsilon_r$
6	Poisson's ratio	$\nu$
7	Coefficient of thermal expansion	$\alpha_T$
8	Mass density (wt per unit vol. x 1/acc. of grav.)	$\rho$
9	Specific heat	$s$
10	Damping to stiffness ratio	$h$

The first five properties define the Ramberg-Osgood representation of the true stress-true strain curve, reference Figure 9. Current formulations are based on the assumption that the materials are isotropic. Sources for material properties are References 3 and 4. See also pages 29 through 31.

# Data Code 11, Bird Impact Definition Data

User inputs cards as described below and one end card. See pages 81 through 88 for discussion, definitions and equations.

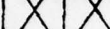RT ADJ INTEGER					FLOATING POINT				
11	a	b			c	d	e		
123	7	11	15	19	34	49	64	72	
119999 End Card									

## Card 1

a = 1

b = row dimension for output matrix of incremental loads  
= 3 x number of joints in the model

c = bird mass m

d = bird velocity v

e = effective length L, reference Figure 12

## Card 2

a = 2

b = number of time increments  $n_{I\beta}$  during which impact is applied

c, d, e = X, Y, Z components of unit vector  $\vec{b}$  parallel to the bird path

## Card 3

a = 3

b = not used

c, d, e = X, Y, Z components of a unit vector  $\vec{n}$  normal to the surface of the structure at the impact point



Card 4

a = 4

b = not used

c, d, e = X, Y, Z components of a unit vector  $\bar{d}$  in the same plane as  $\bar{b}$  and  $\bar{n}$ , in the approximate direction of motion of the impact footprint, and normal to the desired direction of the resultant impact load, reference Figure 12.

Card 5

a = 5

b = not used

c, d, e = X, Y, Z coordinates of the impact point

Cards 6 (There are  $n_{I\beta}$  of these cards)

a = 6

b = time increment identification number  $\beta$  ( $\beta = 1, 2, 3 \dots, N_{I\beta}$ )

c = distance  $D_\beta$  traveled by the impact footprint in the time period from  $t_0$  to  $t_{\beta-1}$

d = load/time distribution factor  $f_\beta$  for increment  $\beta$

e = not used

# Data Code 12, Impact Footprint Joint List

User inputs  $n_{I\beta}$  of these cards and one end card, see page 87.

RIGHT ADJUSTED INTEGER DATA																	
12	$\beta$	$j_{1\beta}$	$j_{2\beta}$	$j_{3\beta}$	$j_{4\beta}$	$j_{5\beta}$	$j_{6\beta}$	.	.	.							
123		8	12	16	20	24	28	32	36	40	44	48	52	56	60	64	68
129999	End Card      Card col 72 non-blank for continuation																

$\beta$  = time increment identification number ( $\beta = 1, 2, 3, \dots, n_{I\beta}$ )

$j_{i\beta}$  = joint numbers of all joints to which the resultant bird impact force is to be distributed in the  $\beta$ th time increment

### Data Code 20, Axial Bar Element Definition

User inputs one card for each bar and one end card. See pages 5 through 10 for discussion of finite elements.

RIGHT ADJUSTED INTEGER DATA										FLOATING POINT DATA			
20	N	P	q							M	A		
123	7	11	15	19	23	27	31	35	39	43	53	63	72


209999 End Card

N = bar identification number

p, q = joint numbers defining the ends of the bar

M = material identification number (references code 10 data)

A = cross-sectional area of the bar

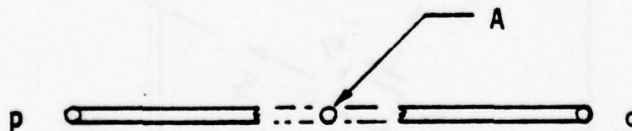

### Data Code 30, Membrane Element Definition

User inputs one card for each membrane and one end card. See pages 5 through 10 for discussion of finite elements.

RIGHT ADJUSTED INTEGER DATA										FLOATING POINT DATA			
30	N	p	q	r	s					M	t	$\zeta_{pq}$	
123	7	11	15	19	23	27	31	35	39	43	53	63	72

309999 End Card


N = membrane identification number

p, q, r, s = joint numbers defining the four corners of the membrane, see below

M = material identification number (references code 10 data)

t = thickness of membrane

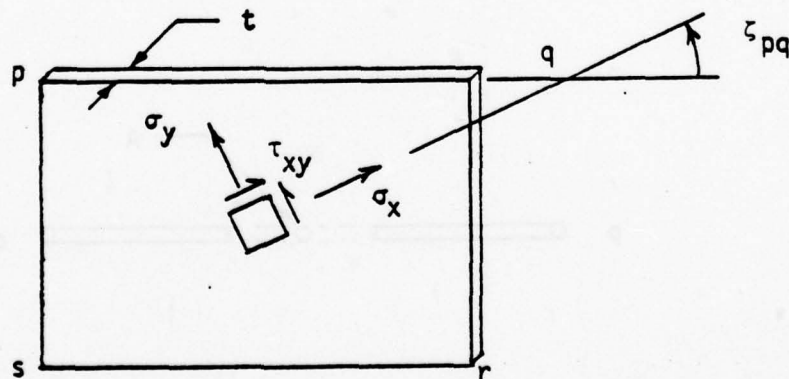

$\zeta_{pq}$  = stress orientation angle in degrees





# Data Code 40, Cell Element Definition

User inputs one card for each cell and one end card. See pages 5 through 10 for discussion of finite elements.


RIGHT ADJUSTED INTEGER DATA										FLOATING POINT DATA				
40	N	p <sub>0</sub>	q <sub>0</sub>	r <sub>0</sub>	s <sub>0</sub>	p <sub>1</sub>	q <sub>1</sub>	r <sub>1</sub>	s <sub>1</sub>	M		ζ <sub>pq</sub>		
123	7	11	15	19	23	27	31	35	39	43		53	63	72
409999	End Card													

N = cell identification number

p<sub>0</sub>, q<sub>0</sub>, r<sub>0</sub>, s<sub>0</sub>, p<sub>1</sub>, q<sub>1</sub>, r<sub>1</sub>, s<sub>1</sub> = joint numbers defining the eight corners of the cell, see below

M = material reference number (code 10 data)

ζ<sub>pq</sub> = stress orientation angle in degrees

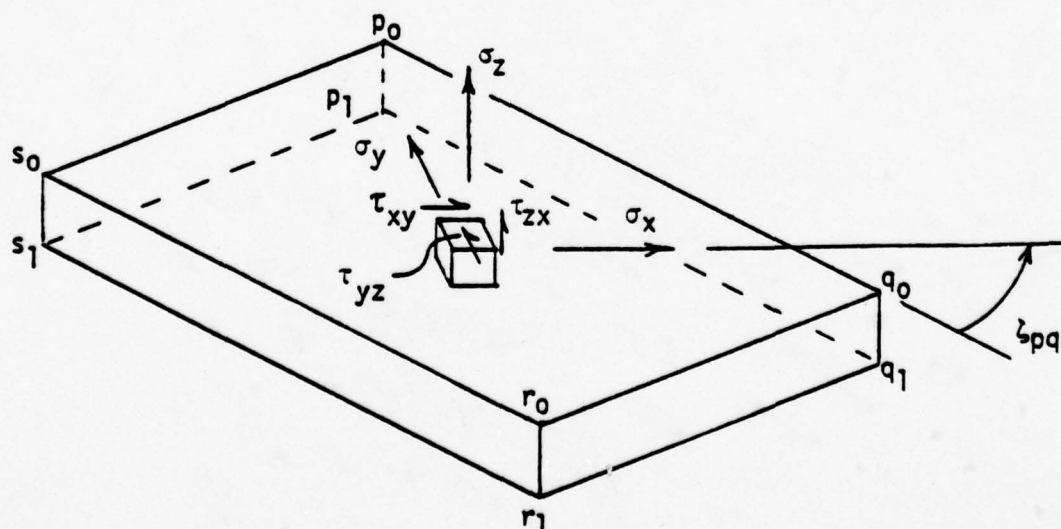

# Data Code 50, Point Mass Element Definition

User inputs one card for each point mass and one end card. See page 10 for discussion.

RIGHT ADJUSTED INTEGER DATA										FLOATING POINT DATA			
50	N	p									Mpz	Mpy	Mpz
123	7	11	15	19	23	27	31	35	39	43	53	63	72

509999 End Card

N = point mass identification number

p = joint number defining the location of the point mass

$M_{px}$ ,  $M_{py}$ ,  $M_{pz}$  = uncoupled mass contributions which will be added to the diagonal of the structural mass matrix in the X, Y, Z degrees of freedom at joint p

### FORMAT Phase 2 Data

Three data deck setups are required as indicated in Figure 10. It is not necessary for the user to refer to the FORMAT documentation to use these setups. In keypunching the cards, it is important to begin in the card columns shown. Cards beginning with the § character in CC1 have a control card name field in CC2-15 and an option field in CC16-72. The control card name and the optional information must be entered left justified in these fields as shown. All other cards in the sequence must begin in card column 7 and may be punched in free form. An exception is matrix data which has the following card format.

Header Card (one required for each matrix)

H	i <sub>max</sub>	j <sub>max</sub>	Name
1	2	56	9 67- 72

Data Card (use as many as required to input non-zero elements of matrix)

i	j	Value	Exp	i	j	Value	Exp	i	j	Value	Exp	Name	
12	- 56	- 9	11-19	20-22	24-27	28-31	33-41	42-44	46-49	50-53	55-63	64-66	67- 72

End of Matrix Data Card (one required)

E
1

- Notes:
1. "Value" is of the form ±XXX.XX, plus sign may be omitted.
  2. "Exp" is of the form ±XX, "Exp" = ±00 may be omitted.
  3. More than one matrix may be input, but only one "E" card is required after the last matrix.

The following definitions apply.

$i_{\max}, j_{\max}$  = row and column dimensions of the matrix

Name = one to six character alphameric matrix name assigned by the user. The first character must be alphabetical. Enter free form.

$i, j$  = right adjusted integer values specifying the row and column location of a matrix element whose value is given in the next field

Value, Exp = value of the  $i, j$  matrix element



# FORMAT Deck Setup 1

Card No.	Card Column	
	1	7 16
1	\$FORMAT	STANDARD
2	\$RUN	GØ,LØGIC
3		INPUT TAPE (MTAPE,1)
4		INPUT TAPE (LTAPE,1)
5		OUTPUT TAPE (DECØMP,1)
6		SIZE(NWØRK,KØNST)
7	\$INSTRUCTION	
8		PT,DPT = DPØT ·DEJCOL· (1)
9		SAVE(DECØMP)DPØT
10		MR = PRUF,MEL ·SEQWF·
11		PRUPJ,PRUPS = PRUPT ·DEJCOL· (3n <sub>j</sub> )
12		PR = PRUPJ ·MULT· PT
13		PRT = PR ·TRANSP·
14		X,LTL,UR = PRUF,KEL ·SEQWF· PRT
15		UT = PRUP ·TMULT· UR
16		SAVE(DECØMP)MR,PRUPJ,LTL,UR
17		PRINT(,,)UT
18	\$END	

An alternate setup after card 17 which will accommodate user input matrices on cards is:

```

$MATRIX      LIST
Card input matrix data, see pages 65 and 66 for card formats.
$END

```

In card 6 NWØRK represents words of working core storage, and KØNST is the maximum matrix dimension allowed. Default values are 10000 and 2000. Estimates can be calculated from equations 12 and 13, where  $w$  is the wave front, see "Joint Numbering" on page 28, and  $n_{pf}$  is given by equation 22.

In card 11,  $3n_j = 3 \times \text{number of joints in the model}$ .

$$NWORK \geq w^2/2 \quad (12)$$

$$KONST \geq n_{PF} \quad (13)$$

# FORMAT Deck Setup 2

Card No.	Card Column	1	7	16
1	\$FORMAT	STANDARD		
2	\$RUN	G0,LOGIC		
3		INPUT TAPE (MTAPE,1)		
4		INPUT TAPE (DEC0MP,1)		
5		0UTPUT TAPE (TRANSF,1)		
6		SIZE(NW0RK,K0NST)		
7	\$INSTRUCTION			
8		VAL,TR = MR ·USER06· LTL		
9		PRINT(,,,)VAL		
10		PBUPJ = TR ·TMULT· PRUPJ		
11		PBUF = TR ·TMULT· PRUF		
12		DPB0 = PBUPJ ·MULT· DP0T		
13		SAVE(TRANSF)TR,PBUPJ,PBUF,DPB0		
14		M0DES = PRUPJ ·TMULT· TR		
15		PRINT(,,F2,.05)M0DES		
16	\$SPECIAL			
		CC6	CC12	CC24 (Rt. adj. to noted CC)
17		n <sub>G</sub>	n <sub>G</sub>	1.0E-6
18	\$END			

In card 15, the value .05 is a print cutoff which provides that any matrix element whose value is  $\leq .05$  will not be printed. The user may change the cutoff value if desired. If the value is zero or blank, all matrix elements will be printed except those whose value is zero.

In card 17,  $n_G$  is the number of modes to be used in the modal transformation. The modes extracted will correspond to the  $n_G$  lowest natural frequencies of the structure. The value 1.0E-6 is the convergence criterion for the eigenvalue calculation and is based on current experience levels:

#### FORMAT Deck Setup 3

Card No.	Card Column	1	7	16
1	\$FORMAT			STANDARD
2	\$RUN			G0,L0GIC
3				INPUT TAPE (MTAPE,1)
4				INPUT TAPE (TRANSF,1)
5				OUTPUT TAPE (FILE20,1)
6				OUTPUT TAPE (FILE21,1)
7				SIZE(NWORK,K0NST)
8	\$INSTRUCTION			
9				SAVE(FILE20)PBUF
10				SAVE(FILE20)MPT
11				SAVE(FILE20)UZER0
12				SAVE(FILE20)ECT,MEL,KBEL,CBEL,FFBAR
13				SAVE(FILE20)SIGFB,EPSIG,DEBT,EVT,C0NST
14				SAVE(FILE21)DPB0
15				SAVE(FILE21)PBUPJ
16	\$END			

#### Incremental Response Data

Card input to the Incremental Solution program consists of one card to specify options and dimensional quantities followed by one or more cards as needed to specify the time points which mark the end of each increment.

Card 1 (card columns 1 through 37 are used)

RIGHT ADJUSTED INTEGER DATA						
$\beta$	$n_{EL}$	$n_{\beta}$	$n_G$	T OR F	$n_J$	JWØRK
1 - 6	7 - 12	13 - 18	19 - 24	25	26 - 31	32 - 37

$\beta$  = starting increment number

= 1

$n_{EL}$  = total number of elements in the model including bars, membranes, cells, point mass.

$n_{\beta}$  = number of increments in the solution

$n_G$  = number of transformation modes

T, F = true, false, T means that element temperature changes will be calculated as a result of damping energy converted to heat.  
F means that they will not be calculated.

$n_J$  = total number of joints in the model.

JWØRK = size of core work space required and must satisfy the following:

$$JWØRK \geq 1200 + 10.5 n_G^2 + 29.5 n_G + n_{EL} + n_{\beta} + 3 n_J$$

$$JWØRK \geq 7000 + 2.5 n_G^2 + 115.5 n_G + n_{EL} + n_{\beta} + 4 n_J$$

Card(s) 2 (card columns 1 through 72 are used)

FLOATING POINT DATA					
$t_1$	$t_2$	.	.	$t_{\beta}$	
1 - 12	13 - 24	25 - 36	37 - 48	49 - 60	61 - 72

$t_{\beta}$  = time from beginning of impact ( $t_0$ ) to the end of the  $\beta$ th increment,  $\beta = 1, 2, 3, \dots, n_{\beta}$ . The  $t_{\beta}$  are the time points at which response solutions are calculated.

The  $t_{\beta}$  must be input in sequence at the rate of six values per card until  $n_{\beta}$  values have been entered.



## Postprocessor Data

Card input to the Postprocessor program consists of six option definition cards, four title cards, and a variable number of selectivity cards.

### Card Format for Cards 1 through 6

RIGHT ADJUSTED INTEGER DATA						FLOATING POINT	RIGHT ADJUSTED
a						b c d e f	g h
1 2	3 - 10					16 - 20	21 - 30 31 - 40

INTEGER DATA			
i	j	k	
41 - 50	51 - 60	61 - 70	71 - 80

### Card 1. Selectivity Options

- a = 1
- b = 0 or 1. "Zero" means that the user desires printout for all time increments. "One" means that the user will specify selected time increments for which he desires printout.
- c = 0 or 1. "Zero" means that the user desires printout for all joints as dictated by card 2. "One" means that the user will specify selected joints for which he desires printout.
- d = 0 or 1. "Zero" means that the user desires printout for all bars as dictated by card 4. "One" means he will specify selected bars.
- e = 0 or 1. "Zero" means that the user desires printout for all membranes as dictated by card 5. "One" means he will specify selected membranes.

- f = 0 or 1. "Zero" means that the user desires printout for all cells as dictated by card 6. "One" means he will specify selected cells.
- g = value which the program will use to scale the joint displacements. May be useful when plotting the deformed structure joint coordinates. If this field is blank, the default value for the scalar is 1.0. The value is determined by experience.
- h = KWORK, which is the size of work space. The default is 10000.  
 $10000 \leq KWORK \leq 640 + L_1 + L_2 + 2n_b + 3n_j + 3n_G$   
 where  $6n_G \leq L_1 \leq 60$  and  $L_2$  is the larger of the numbers of joints, bars, membranes or cells.
- i = KLNMAX, which is the maximum number of lines per page, measured from the top of the page. The minimum value is 20, and a blank field results in a default value of 60.
- j = KCLMAX, which is the number of elements across the page. The minimum value is 1, and a blank field results in a default (maximum) value of 8.
- k = IFLGPR, a non-blank field sets a checkout print flag for intermediate print--normally not turned on by the user.

#### Card 2. Joint Data Options

- a = 2
- b,c,d,e are individually set equal to 0 or 1 to control printing of joint coordinates, displacements, velocities, and accelerations, respectively. "Zero" means no print. "One" means print.
- f through k are not used.

#### Card 3. Modal Response Options

- a = 3
- b,c,d are individually set equal to 0 or 1 to control printing of modal displacements, velocities and accelerations, respectively. "Zero" means no print. "One" means print.
- e through k are not used.

# Cards 4, 5, 6. Element Data Options

a = 4 for bar elements.


= 5 for membrane elements.

= 6 for cell elements

b,c,d,e are individually set equal to 0 or 1 to control printing of element forces, stresses, strains, and equivalent stresses, respectively. "Zero" means no print. "One" means print.

f through k are not used.

Card format for cards 7, 8, 9 and 10.

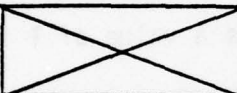RT ADJ INTEGER			ALPHAMERIC
a			b
1 2			11 - 72
	3 - 10		

These four cards allow the user to specify two 120 character lines of title information to be printed at the top of each page of printout.


a = 7, b = characters 1-62 of first title line.


a = 8, b = characters 63-124 of first title line.

a = 9, b = characters 1-62 of second title line.

a = 10, b = characters 63-124 of second title line.

Card format for selectivity cards.

RIGHT ADJUSTED INTEGER DATA								
a	b			C <sub>1</sub>	C <sub>2</sub>	...	C <sub>11</sub>	C <sub>12</sub>
1 2	3 - 6			11-15	16 - 20		61 - 65	66 - 70

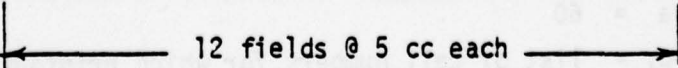

Increment selections--required only when card 1 has a value of 1 in column 11.

a = 20

c<sub>i</sub> = list of time increment numbers  $\beta$  for which printout is desired.  
Use additional cards as necessary.

b = 9999 in the last card.

Joint selections--required only when card 1 has a value of 1 in column 12.

a = 30

c<sub>i</sub> = list of joint numbers for which printout is desired. Use additional cards as necessary.

b = 9999 in the last card.

Bar selections--required only when card 1 has a value of 1 in column 13.

a = 40

c<sub>i</sub> = list of bar numbers for which printout is desired. Use additional cards as necessary.

b = 9999 in the last card.

Membrane selections--required only when card 1 has a value of 1 in column 14.

a = 50

c<sub>i</sub> = list of membrane numbers for which printout is desired. Use additional cards as necessary.

b = 9999 in the last card.

Cell selections--required only when card 1 has a value of 1 in column 15.

a = 60

c<sub>i</sub> = list of cell numbers for which printout is desired. Use additional cards as necessary.

b = 9999 in the last card.



In any of the selectivity cards described above, an inclusive range of numbers may be specified by entering the lower and upper bounding numbers with a non-blank character (such as—) entered between them in the first card column of the field containing the upper bounding number.

#### Job Control Language (JCL)

The Programming Manual, which is Part 3 (a separate volume) of this report, describes program implementation procedure at a given computer installation and the job control language (JCL) required to execute the IMPACT computer programs. The JCL deck contains estimates of computer time, core, and other resource requirements for the job, manipulates input and output data files, and calls and executes program load modules. A JCL deck together with the appropriate input data cards must be set up and loaded into the computer to perform the functions shown in Figure 10. Depending on the size of the finite element model being analyzed, the JCL setup may be tailored to perform each function as an individual computer run in the case of a large model or to perform all functions in one computer run for small models. Reference Appendix A for additional information and examples of JCL.

#### INPUT PREPROCESSING

Input preprocessing includes the input and editing of model definition decks by means of the CDC UPDATE procedure, the generation of additional model definition data using the Laminate Generator, and the generation of the bird impact incremental loads matrix using the Loads Generator program. The makeup of the model definition deck is discussed under Data Code Descriptions in the previous subsection. UPDATE is a CDC system module for creating, accessing and editing data files and is utilized through appropriate JCL.

#### Laminate Generator

The use of the Laminate Generator program is not mandatory, but it is intended to relieve the user of much of the effort required to pre-

pare model definition data for the transparency, especially when it is a multi-layered laminate having compound curvature.

#### General Description

In order to take advantage of the Laminate Generator capability the transparency must be modelled entirely of cell elements. Minimum required input data includes data code 2 joint coordinates of the joints in the surface of the transparency, data code 7 laminate definition cards and data code 40 cards giving the cell identification number and the first four corner joint numbers for each cell in the surface layer of the transparency. The program then calculates joint coordinates for all additional joints required to define the transparency geometry and produces cell definition data to complete surface cell definitions and to define all additional cell elements needed to form sublayers of the transparency.

Consider a 5-layered laminated transparency modelled with a 10 x 10 surface grid. Such a model would have 600 joints and 405 cell elements. The user would input joint coordinates for 100 surface joints, partial cell definitions for 81 cells in the surface layer, and information specifying thicknesses and materials of layers and numbering of joints and cells. The program will produce the completed data code 2 deck for 600 joints, a data code 6 deck defining unit vectors normal to the surface at the 100 surface joints, and a completed data code 40 deck defining the 405 cell elements.

The input file is Fortran logical unit 1 and is passed to the Laminate Generator from an UPDATE data file, as indicated in Figure 10. Table 4 shows optional data code decks which may be present in the input file as well as the minimum required input discussed above. If the optional input is present, it will be duplicated (except data codes 7 and 8) in the output file, thus creating a complete model definition deck. This completed model definition deck is now in the form required

for use in the Loads or Initial Generators. If the optional input is not present, the Laminate Generator output data file will have to be merged with other data files as appropriate to form a complete model definition file. The output file is Fortran logical unit 2 and is copied to an UPDATE data file and saved for future use or it may be copied to appropriate Fortran logical units and passed directly to the Loads or Initial Generators.

The Laminate Generator unconditionally prints out a listing of all data code decks present in the output file.

#### Definitions and Use Details

Figure 11 shows a representative portion of a finite element model for a 3-layered laminate and support structure. The following definitions apply.

- 1) Surface normal--a unit vector directed into the laminate based on the average of cross products of surface element edge vectors emanating from a surface joint.
- 2) Joint stack--a set of joints including a surface joint and all joints through the laminate to the opposite surface, reference Figure 11 (1,2,3,4), (13,14,15,16), etc. The joint stack line is usually parallel to the surface normal as defined above.
- 3) Layer thicknesses--thickness  $t_l$  input by the user for each layer  $l$  and used by the program together with normal vectors and surface joint coordinates to calculate the coordinates of all other joints in each stack.
- 4) Joint numbering increment--an integer value  $\Delta J_l$  input by the user for each layer  $l$  and used by the program to assign joint numbers in the joint stacks starting from the user assigned surface joint number and proceeding through the stack. In Figure 11,  $\Delta J_l = 1$  for all layers. The value for  $\Delta J_l$  cannot be negative.



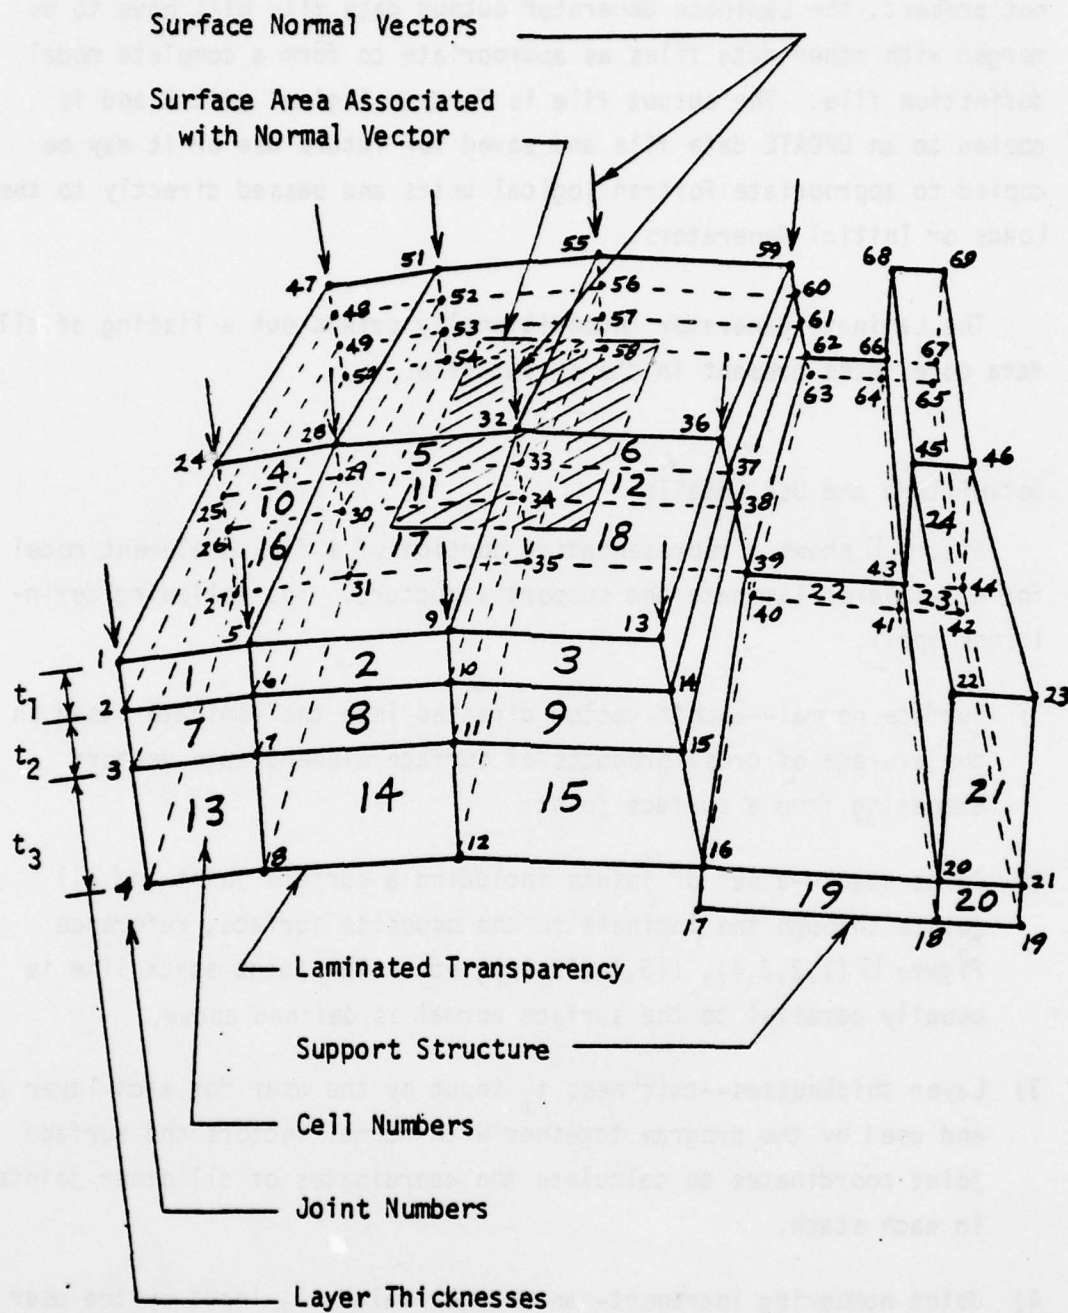


Figure 11. Simple Model of Laminate and Support Structure.



- 5) Element stack--a set of cell elements including a surface layer cell and a cell for each additional layer in the laminate, reference Figure 11, (1,7,13), (6,12,18), etc.
- 6) Element numbering increment--an integer value  $\Delta E_l$  input by the user for each layer  $l$  and used by the program to assign element numbers in the joint stacks starting from the user assigned surface element number and proceeding through the stack. In Figure 11,  $\Delta E_l = 6$  for all layers. The value for  $\Delta E_l$  cannot be negative.
- 7) Surface offset--a distance  $t_0$  input by the user and used by the program to calculate new surface joint coordinates such that the entire surface is moved a constant distance  $t_0$  outward or inward from its original position (positive  $t_0$  results in offset opposite to the unit normal vector directions).
- 8) Partial cell element definitions--a code 40 card input by the user having the cell identification number, the first four corner joint numbers, and the stress orientation angle (if applicable) entered in their appropriate fields. Note that the corner joint numbers must be surface joints and they must be entered in a clockwise sequence looking down on the surface in the direction of the unit vectors. In Figure 11 for cell number 1 the sequence could be one of four choices: (1,24,28,5), (24,28,5,1), (28,5,1,24) or (5,1,24,28).
- 9) Variable layer thicknesses--thickness  $t_l$  input by the user for each layer  $l$  at each surface joint as necessary to define a realistic variation in layer thickness.

Items defined in 3, 4, 6 and 7 above are input on data code 7 cards together with a material reference for each layer. The variable thickness data defined in 9 is input on data code 8 cards.

As mentioned in 2 above, the joint stack line will be parallel to

the surface normal vector if only the laminate surface joint coordinates are input. However, the user may control the direction of the stack line by inputting coordinates for the last joint in the stack as well as the surface joint. In fact, intermediate joint coordinates may also be input if desired. In Figure 11 this is illustrated along the edge of the laminate which is attached to the support structure at joints 16, 39 and 62. User input of coordinates for these joints controls the stack line direction to insure that the attach line between the laminate and the support structure will be where the user wants it. The undesirable alternative would be to adjust coordinates of surface joints 13, 36 and 59 to force the surface normals to intersect the desired attach line.

The Laminate Generator discussion is summarized by again referring to Figure 11. For this model the user should input data code 2 coordinates for laminate surface joints 1, 5, 9, 13, 24, 28, 32, 36, 47, 51, 55 and 59 and for support structure joints 16-23, 39-46, and 62-69. He should input data code 7 to define surface offset (if necessary), layer material, joint and element numbering increments, and thickness for each of the three layers. Data code 8 cards should be input if there are variations in thickness of the layers. Finally, data code 40 cards should be input to partially define surface elements 1-6 and completely define elements 19-24. Optional data codes, 1, 3, 4, 5, 10, 11, 12, 20, 30, 40, and 50 should be included if available. Now, execution of the Laminate Generator program will result in a completed data code 2 deck with missing joint coordinates inserted, a new data code 6 deck of surface normal vectors and associated surface areas, and a completed data code 40 deck with all missing element definition data inserted. In addition, all optional data code decks which were present in the input file will have been output in proper sequence. Data codes 7 and 8 which are used by the Laminate Generator are excluded from the output.

### Loads Generator

The problem of determining a space/time distribution of applied loads at the model joints which accurately represents bird impact phenomena is a very difficult one. Reference 2 reports on experimental and analytical investigations of bird impact, presents some practical formulations of force/time distribution as well as pressure distributions within the impact footprint, and makes recommendations for the continuation of this important work.

### General Description

The Loads Generator program is an elementary capability which calculates the average impact force using the formulation of Reference 2, allows the user to specify the force/time distribution and the movement of the footprint, and calculates the resulting load components on joints within the footprint. The load distribution to the joints is not based on impact pressures but instead is based on the method of Lagrangian multipliers to solve equilibrium equations relating joint loads to the resultant impact force. Target compliance is not accounted for, but a travelling footprint can be accommodated.

The input file is Fortran logical unit 1 and is passed to the Loads Generator from an UPDATE data file, as indicated in Figure 10. Data code decks required to be present in the input file are shown in Table 4. Optional data codes present in the input will be read over and ignored. The output file is Fortran logical unit 3 and contains the incremental loads matrix stored in the form of a FØRMAT matrix tape named LTAPE,1. It may be copied either to the appropriate Fortran logical unit for input to a FØRMAT step or to tape and saved for future use. Alternately, the output file which is also stored in card image form on Fortran logical unit 2 may be punched on cards in a form suitable for matrix card input to the FØRMAT step. These options are exercised by means of JCL cards.



The Loads Generator unconditionally prints a load summary for each time increment during the impact. The summary includes the load (time) increment number, bird mass and velocity, duration of impact and average impact force, direction and magnitude of the resultant impact force for the given increment, the loaded joint numbers together with their total loads for the given increment and their incremental load changes from the previous increment, and finally a column of the output incremental loads matrix.

#### Definitions and Use Details

Figure 12 shows parameters and diagrams which the user must consider in order to prepare input data for the Loads Generator. The following definitions apply.

- 1)  $3n_j$  -- row dimension of incremental loads matrix
- 2)  $m$  -- bird mass
- 3)  $v$  -- bird velocity
- 4)  $L$  -- estimated total travel of footprint along  $\vec{d}$  from point of impact to point of detachment divided by cosine  $\theta$
- 5)  $\theta$  -- angle through which the bird material is expected to be deflected during the impact
- 6)  $\vec{b}$  -- unit vector parallel to bird path prior to impact
- 7)  $\vec{n}$  -- unit vector normal to transparency surface at impact point
- 8)  $\vec{d}$  -- unit vector in plane with vectors  $\vec{b}$  and  $\vec{n}$  and making the angle  $\theta$  with vector  $\vec{b}$



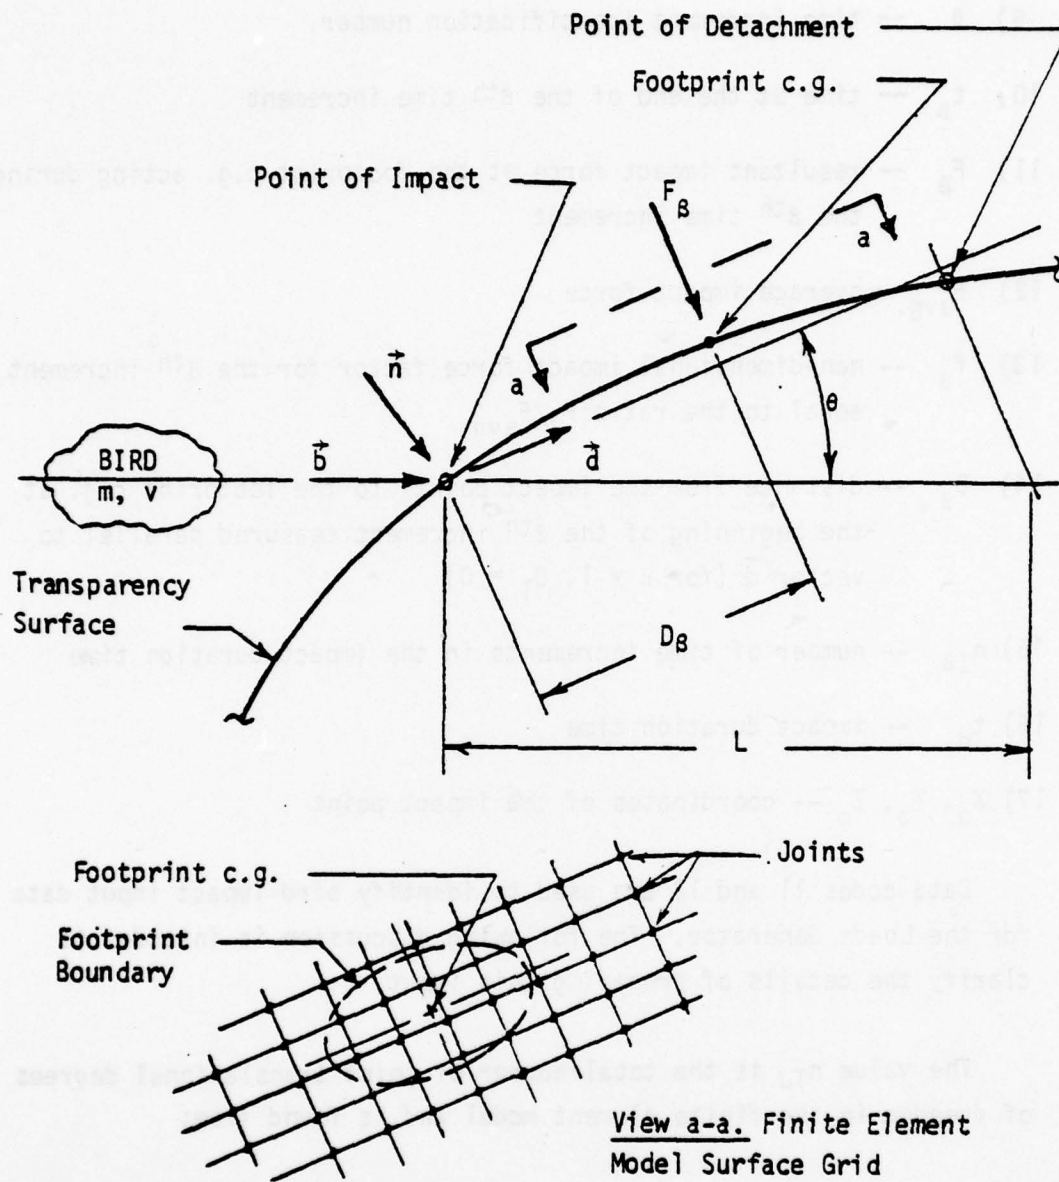


Figure 12. Bird Impact Diagram.

- 9)  $\beta$  -- time increment identification number
- 10)  $t_\beta$  -- time at the end of the  $\beta$ th time increment
- 11)  $F_\beta$  -- resultant impact force at the footprint c.g. acting during the  $\beta$ th time increment
- 12)  $F_{avg}$  -- average impact force
- 13)  $f_\beta$  -- non-dimensional impact force factor for the  $\beta$ th increment equal to the ratio  $F_\beta/F_{avg}$
- 14)  $D_\beta$  -- distance from the impact point to the footprint c.g. at the beginning of the  $\beta$ th increment measured parallel to vector  $\vec{d}$  (for  $\beta = 1$ ,  $D_1 = 0$ )
- 15)  $n_{I\beta}$  -- number of time increments in the impact duration time
- 16)  $t_d$  -- impact duration time
- 17)  $X_0, Y_0, Z_0$  -- coordinates of the impact point

Data codes 11 and 12 are used to identify bird impact input data for the Loads Generator. The following discussion is intended to clarify the details of preparing this input.

The value  $n_{TJ}$  is the total number of joint translational degrees of freedom in the finite element model and is found from:

$$n_{TJ} = 3n_J \quad (14)$$

where  $n_J$  is the total number of joints in the model.

Bird mass  $m$  and velocity  $v$  are specified by the user in order to produce the desired impact. It should be recognized that  $v$  is the relative velocity of bird to transparency.

The value of  $L$  is an important parameter because it determines the impact duration time. It should be estimated based on the user's experience and best judgement for each impact case. Reference 2 defines  $L$  as the length of the bird in the case of a rigid target whose surface is normal to the bird path, and gives a modified effective length in the case of inclined surfaces. The travelling footprint concept described here is a further modification.

At this point the user must establish the number of impact increments  $n_{I\beta}$  and the time points  $t_\beta$  marking the end of each increment. Figure 13 is a nondimensional representation of the triangular impact force/time distribution as derived in Reference 2. It shows the impact divided into ten equal increments and gives the values of the force factor  $f_\beta$ . It is not necessary that the increments be equal. The values for  $n_{I\beta}$ ,  $t_\beta$  and  $f_\beta$  should be determined in as much detail as necessary to reasonably represent the desired force/time distribution, whether it be triangular or some other shape. For example, the dotted line in Figure 13 represents a trapezoidal distribution that may be more applicable for the compliant target and travelling footprint. The value of  $t_d$  is needed to determine the actual values of  $t_\beta$ .

$$t_d = \frac{L}{v} \quad (15)$$

To insure that the correct total impulse is being input to the Loads Generator the user should check that the following equation is satisfied ( $\beta = 1, 2, 3, \dots, n_{I\beta}$ ).

$$\sum f_\beta (t_\beta - t_{\beta-1}) = t_d \quad (16)$$

The unit vector  $\vec{b}$ ,  $\vec{n}$  and  $\vec{d}$  are input in terms of their  $x$ ,  $y$ ,  $z$  components in the model coordinate axes system. The user must calculate the components of  $\vec{b}$  consistent with the desired bird path. The components of  $\vec{n}$  can be determined from the data code 6 surface normals for the joints nearest to the point of impact. The data code 6 infor-

AD-A062 614

DOUGLAS AIRCRAFT CO LONG BEACH CALIF

F/G 5/2

AIRCRAFT WINDSHIELD BIRD IMPACT MATH MODEL. PART 2. USER'S MANU--ETC(U)

DEC 77 G R EIDE

F33615-75-C-3105


UNCLASSIFIED

MDC-J7174-PT-2

AFFDL-TR-77-99-PT-2

NL


2 OF 2  
ADA  
062614

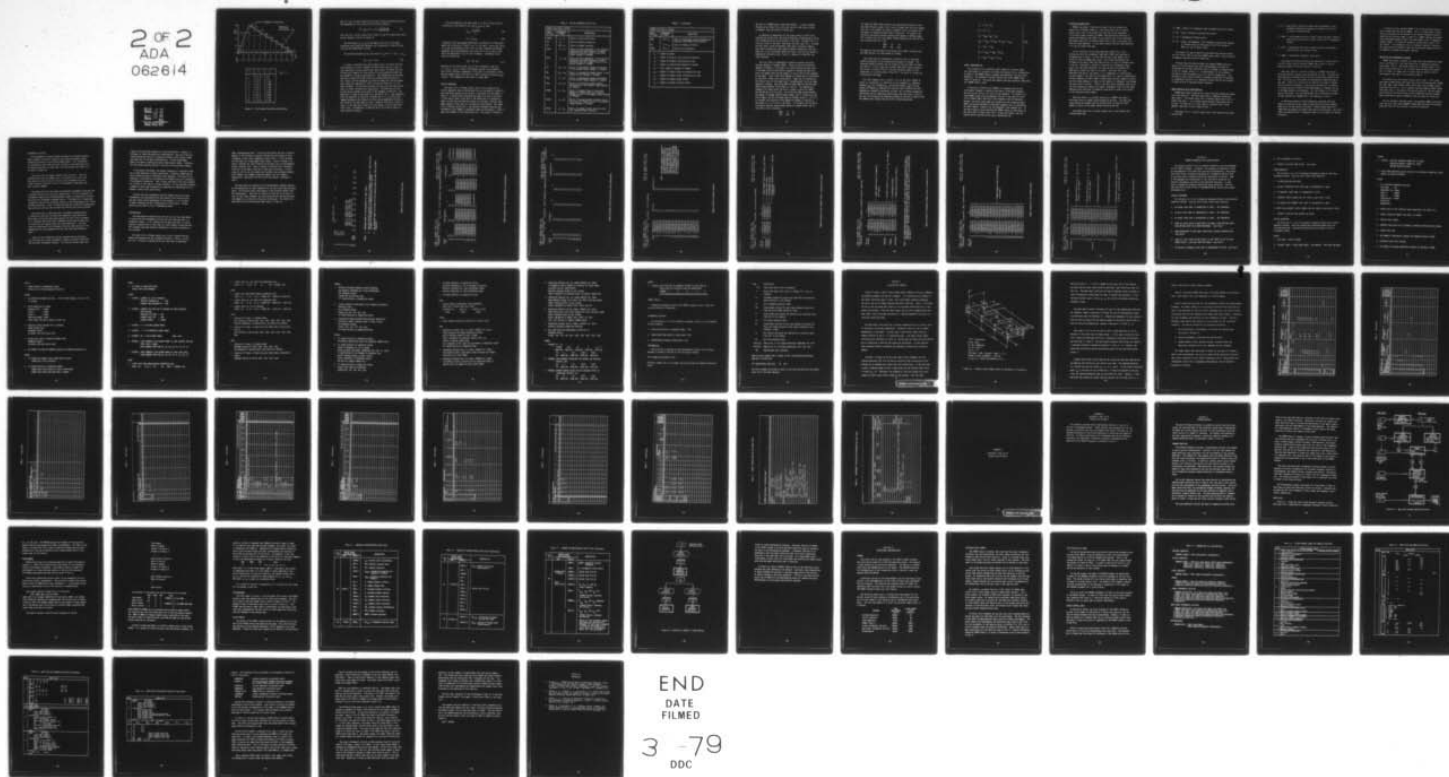

END  
DATE  
FILMED

3 -79  
DDC



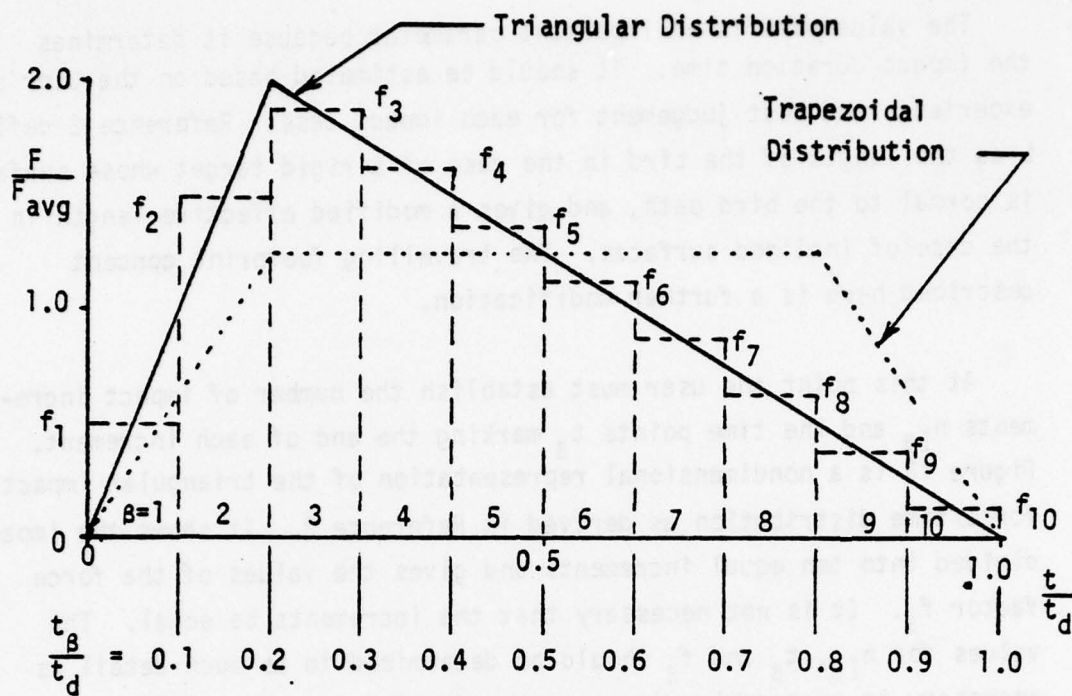

$\beta$	$t_\beta$	$f_\beta$
1	0.1 $t_d$	0.5
2	0.2	1.5
3	0.3	1.875
4	0.4	1.625
5	0.5	1.375
6	0.6	1.125
7	0.7	0.875
8	0.8	0.625
9	0.9	0.375
10	1.0 $t_d$	0.125

$$n_{I\beta} = 10$$

Figure 13. Bird Impact Force/Time Distribution.

mation is part of the unconditional printout from the Laminate Generator. The components of  $\vec{d}$  are given by the following equation.

$$\vec{d} = (\cos \theta) \vec{b} - (\sin \theta) \frac{\vec{b} \times \vec{n} \times \vec{b}}{|\vec{b} \times \vec{n} \times \vec{b}|} \quad (17)$$

The value for  $\theta$  can be scaled from a layout of the bird impact and transparency geometry similar to Figure 12.

The coordinates  $X_0, Y_0, Z_0$  of the impact point are in the model coordinate axes system and represent the intersection of the bird path line and the transparency surface.

The following equation gives the values of  $D_\beta$  for  $\beta = 1, 2, 3, \dots, n_{I\beta}$ .

$$D_\beta = t_{\beta-1} v \cos \theta \quad (18)$$

In order to determine the joint numbers which lie within the footprint boundary for each increment the user should lay out a view of the transparency surface showing the impact point, the model grid and surface joint numbers for that portion of the surface over which the bird material will pass, see Figure 12. The intersection of the plane containing vectors  $\vec{b}$ ,  $\vec{n}$  and  $\vec{d}$  with the surface should be drawn on the layout, and the distances  $D_\beta$  should be marked off from the impact point along the intersection line to locate the footprint c.g. for each increment. The footprint boundary ellipse should be drawn around each c.g. point including the impact point. The minor axis of the ellipse may be assumed to be equal to the diameter of the bird. The major axis is equal to the minor axis divided by  $\sin \theta$ . Now, beginning with the footprint at the point of impact for  $\beta = 1$ , a set of joint numbers bounded by the footprint ellipse can be determined for each  $\beta$  and listed on the data code 12 cards. Footprint overlap is likely to occur, so the same joint number will then appear in two or more footprint lists. Nevertheless, a complete joint list must be input for each footprint location.

The Loads Generator uses data codes 2, 11 and 12 input data and calculates  $t_d$  from Equation (15) and  $F_{avg}$  and  $F_\beta$  from

$$F_{avg} = \frac{m v \sin \theta}{t_d} \quad (19)$$

$$F_\beta = f_\beta F_{avg} \quad (20)$$

In Equation (19) the program effectively calculates  $\sin \theta$  from vector operations involving  $\vec{b}$ ,  $\vec{n}$  and  $\vec{d}$ , so  $\theta$  is not input. Having the values of  $F_\beta$  and the associated joint lists for each increment the program generates equilibrium equations and solves for a set of joint loads which are equivalent to  $F_\beta$  for each increment. Incremental joint loads are found from

$$\delta \phi_\beta = \phi_\beta - \phi_{\beta-1} \quad (21)$$

where  $\phi_\beta$  are the joint loads,  $\delta \phi_\beta$  are the incremental loads and  $\beta = 1, 2, 3, \dots, n_{I\beta} + 1$ . Finally the program converts the incremental joint loads into their components in the joint X, Y, Z degrees of freedom and outputs them in the form of a matrix having  $3n_j$  rows and  $n_{I\beta} + 1$  columns. The incremental loads matrix is named DPOT.

#### INITIAL GENERATOR

The input file is Fortran logical unit 5 and is passed to the Initial Generator from an UPDATE data file, as indicated in Figure 10. Data code decks required to be present in the input file are shown in Table 4. A required data code deck may consist of only an end card if that type of data is not used in the definition of a particular model, but the end card must be present as a minimum. Optional data codes present in the input will be read over and ignored. The output file is Fortran logical unit 1 and contains structural matrices and information lists needed in subsequent steps of the analysis. Table 6 shows the contents of the output data file. The output is stored in



TABLE 6. INITIAL GENERATOR OUTPUT FILE

FORMAT Tape Name Is MTAPE,1		
NAME OF ARRAY	DIMENSIONS OF ARRAY	DESCRIPTION
UZERO	$n_j \times 3$	Matrix of joint coordinates.
MPT	$n_m \times 1$	Table of material properties.
ECT	$100 \times n_e$	Table of element constants.
PRUPT	$n_u \times n_T$	Matrix of force components in the reordered unconstrained global degrees of freedom resulting from unit forces in the total global degrees of freedom.
PRUF	$n_u \times n_{PF}$	Matrix of force components in the reordered unconstrained global degrees of freedom resulting from unit element forces in the global degrees of freedom.
KEL	$n_{PF} \times n_{PF}$	Matrix of unassembled element stiffnesses in the element global degrees of freedom.
MEL	$n_{PF} \times n_{PF}$	Matrix of unassembled element masses in the element global degrees of freedom.
KBEL	$n_F^- \times n_F^-$	Matrix of unassembled element stiffnesses in the element lumped degrees of freedom.
CBEL	$n_F^- \times n_F^-$	Matrix of unassembled element damping sub-matrices in the element lumped degrees of freedom.
FFBAR	$n_F \times n_F^-$	Matrix of element forces in the global degrees of freedom resulting from unit element forces in the element lumped degrees of freedom.
SIGFB	$n_S \times n_F^-$	Matrix of average element stresses resulting from unit element forces in the element lumped degrees of freedom.
EPSIG	$n_S \times n_S$	Matrix of element strains resulting from unit average element stresses.



TABLE 6. (continued)

FORMAT Tape Name Is MTAPE,1		
NAME OF ARRAY	DIMENSIONS OF ARRAY	DESCRIPTION
DEBT	$30 \times n_e$	Table of unassembled element deformations resulting from temperature gradients.
EVT	$24 \times n_e$	Table of element variables.
CONST	$30 \times 1$	Table of job constants.
$n_j$ = number of joints $n_m$ = number of words to store material properties $n_e$ = number of elements excluding point mass $n_u$ = number of unconstrained degrees of freedom $n_T$ = total number of degrees of freedom $n_{pF}$ = number of element forces including point mass $n_F$ = number of element forces excluding point mass $n_{\bar{F}}$ = number of lumped element forces $n_S$ = number of element stresses/strains		

the form of a `FORMAT` matrix tape named `MTAPE,1`. It can be passed directly as an input file to the next analysis step and/or copied to magnetic tape and saved for future use.

In addition to generating all the arrays shown in Table 6 and creating the output file, the Initial Generator unconditionally prints out information which may be helpful to the user. Printed first is a listing of some of the data code decks from the input file. Included are data code 2 joint coordinates, data code 4 direction numbers, data code 5 constraints, data code 10 material properties, and data codes 20, 30, 40, 50 element definition data. Next are two tables of bookkeeping information and, finally, a summary of dimensions and input constants.

The first table of bookkeeping information defines the unconstrained degrees of freedom (`UDOF`). There are three translational degrees of freedom in the global `X,Y,Z` axes directions at each joint in the model and one translational degree of freedom colinear with each line segment defining the edge(s) of one or more finite elements in the model. Some of the joint degrees of freedom may be constrained as specified in data code 5 constraints. Edges are not constrained. This table lists all the remaining or "unconstrained" joint and edge degrees of freedom. Both joint `UDOF` and edge `UDOF` are defined under three column headings titled `UDOF`, `J1`, and `J2`. The headings are repeated five times across the top of a page, so that five `UDOF`'s are defined per line of print. For joints the `UDOF` column contains the degree of freedom identification number, the `J1` column gives the joint number, and the `J2` column shows an integer value of 1, 2, or 3 to indicate the direction of the degree of freedom is parallel to the global `X`, `Y`, or `Z` axis of the model. For example, the following information defines unconstrained degree of freedom number 1291 at joint 452 in the `Y`-direction.

<code>UDOF</code>	<code>J1</code>	<code>J2</code>
1291	452	2

For edges the UDØF column contains the unconstrained degree of freedom identification number, the J1 and J2 columns give two joint numbers defining a line segment (or edge of elements) which is colinear with the degree of freedom directed from J1 toward J2. For example, the following information defines unconstrained degree of freedom number 3011 colinear with the line segment (edge) between joints 164 and 168 and directed from 164 to 168.

UDØF	J1	J2
3011	164	-168

The negative sign attached to the second joint number indicates that the UDØF defined is an edge degree of freedom.

The second table of bookkeeping information gives a reordered numbering sequence for the unconstrained degrees of freedom. The reordered sequence defines the row format of matrices PRUPT and PRUF, see Table 6. In this table the original UDØF identification numbers are listed in columns titled "U" and the reordered numbers follow immediately in a second column titled "RU". Ten pairs of columns are printed across the page.

The final summary print is simply a list of the total numbers of joints  $n_j$ , constraints  $n_c$ , materials  $n_M$ , bar elements  $n_{Be}$ , membrane elements  $n_{Me}$ , cell elements  $n_{Ce}$ , point mass elements  $n_{pe}$ , and edge degrees of freedom  $n_E$  together with constant data including the base temperature, mechanical equivalent of heat, cell stiffness suppression coefficient and bar compliance coefficients (see data code 1, card 2). The user can calculate the dimensions defined at the end of Table 6 from the summary data through the use of the following equations.



$$\begin{aligned}
 n_T &= 3 n_J + n_E \\
 n_U &= n_T - n_C \\
 n_e &= n_{Be} + n_{Me} + n_{Ce} \\
 n_{PF} &= 7 n_{Be} + 16 n_{Me} + 36 n_{Ce} + 3 n_{Pe} \\
 n_F &= n_{PF} - 3 n_{Pe} \\
 n_{\overline{F}} &= 2 n_{Be} + 9 n_{Me} + 30 n_{Ce} \\
 n_S &= n_{Be} + 3 n_{Me} + 12 n_{Ce}
 \end{aligned}
 \tag{22}$$

#### MODAL TRANSFORMATION

The extraction of a relatively small number of vibration modes and using them as a transform to reduce the problem size is accomplished by means of the FØRMAT Phase 2 program, see Reference 1 for user documentation. The procedure involves executing the three FØRMAT steps shown in Figure 10. The input deck setups have been previously described, see "FØRMAT Phase 2 Data".

A user who is familiar with FØRMAT will recognize that he has considerable freedom in setting up the matrix instruction sequence and that he can tailor it to suit his own purposes. For example, all three FØRMAT steps could be combined into one in the case of a small finite element model requiring little computer time and resources. However, the three steps shown are suitable for both large and small models and may be executed as individual computer runs, or optionally for small models, linked by JCL and executed in one computer run. If the user wishes to avoid handling the FØRMAT setups as card decks, he may store them in UPDATE data files. He may then access, edit and execute them as desired by the use of appropriate JCL.



### Stiffness Decomposition

FØRMAT deck setup 1 requires two input files and creates one output file, reference Figure 10. The first input file is Fortran logical unit 2 and is the output file from the Initial Generator. It is either copied directly by FØRMAT from the Initial Generator or copied from magnetic tape where it was stored by the Initial Generator. The second input file is Fortran logical unit 3 and is the output file from the Loads Generator. It may come directly from the Loads Generator or it may be copied from tape.

In the discussion of the Loads Generator output file it was pointed out that the incremental loads matrix DPØT could optionally be punched out on cards. In that case the user could delete card 4 (LTAPE,1) from the FØRMAT deck setup 1, and insert the \$MATRIX card followed by the matrix DPØT card data and the "E" card all between cards 17 and 18. Alternately, instead of inputting the incremental loads matrix from the Loads Generator, the user may elect to generate the DPØT matrix himself and input it on cards. Note that for a user generated load matrix, the global X, Y, Z components of a load acting on joint number  $j$  are input in row numbers  $3j-2$ ,  $3j-1$  and  $3j$ , respectively. The row dimension of matrix DPØT is three times the total number of joints and the column dimension is equal to the number of incremental load changes the user wishes to define. Finally, the user should recognize that he can use this approach to combine bird impact incremental loads from the Loads Generator with additional incremental loads which he knows to be acting on the structure during impact.

Note that there is a variable called  $3n_j$  in FØRMAT deck setup 1 which must have an integer value assigned by the user. The data card involved must be updated with the correct value (3 times the total number of joints in the model) before executing the job.

The output data file is Fortran logical unit 4 and contains the following matrices.

- 1) DPOT -- matrix of incremental loads representing the bird impact
- 2) MR -- upper triangular structural mass matrix
- 3) LTL -- decomposed stiffness matrix
- 4) UR -- static displacements in the reordered unconstrained degrees of freedom resulting from applying the first column of DPOT as a set of static loads

The output file may be copied to the appropriate Fortran logical unit for direct input to the next FORMAT step, and/or it may be copied to magnetic tape and saved for future use.

Printout from this step includes the standard FORMAT print and matrix UT, which contains the static displacements of matrix UR transformed to the more convenient total (T) degree of freedom format. In the "T" format, global X, Y, Z displacements for joint number j are found in the row numbers 3j-2, 3j-1 and 3j, respectively. The printout of the UT matrix should be scanned to determine if the model is responding statically in a reasonable fashion and for any insights it might give as to expected dynamic response.

#### Mode Extraction and Transformation

FORMAT deck setup 2 requires two input files and creates one output file, see Figure 10. The first input file is identical to that of deck setup 1. The second input file is Fortran logical unit 3 and is output from step 1. It is either copied directly from output unit 4 in step 1 to input unit 3 in this step, or copied to unit 3 from magnetic tape where it was stored by step 1.

The output file is Fortran logical unit 4 and contains the following matrices.

- 1) TR -- modes matrix containing normalized displacements in the reordered unconstrained degrees of freedom for the first  $n_G$  natural vibration modes
- 2) PBUPJ -- transformed partition of PRUPT containing model displacements resulting from unit forces in the joint "T" degrees of freedom
- 3) PBUF -- transformed PRUF matrix containing modal displacements resulting from unit element forces
- 4) DPBØ -- transformed incremental loads matrix

The output file may be copied to the appropriate Fortran logical unit for direct input to the next FØRMAT step, and/or it may be copied to magnetic tape and saved for future use.

Note that there is a variable called  $n_G$  in FØRMAT deck setup 2 which must have an integer value assigned by the user. The data card involved must be updated with the correct value before executing the job. The value  $n_G$  is the number of transformation modes desired by the user. There is no fixed rule for choosing the number of modes, but for practical purposes  $n_G \leq 50$  may be considered as a guideline. In linear analysis of models having 5000 degrees of freedom, the use of 30 modes appears to be adequate. For small models 5 or 10 modes may be sufficient. The core requirement can be considered the same as that required for decomposition, see equations 12 and 13.

In nonlinear analysis limited experience indicates that more modes are required and that some of them should be higher frequency modes which are not readily available. Suitable modes need to be identified and methods to extract them need to be developed. See "Part 1 Theory and Applications" (a separate volume of this report) for further discussion.



In addition to the standard FØRMAT listing the printout from this step includes matrices VAL and MØDES. VAL is a column matrix containing the reciprocals of the squares of the natural frequencies associated with the vibration modes in matrix TR. MØDES contains the normalized displacement modes of matrix TR transformed to the "T" degree of freedom format. To reduce the volume of printout only values  $\geq .05$  are printed. The frequencies may be of general interest to the user. The modes should be plotted as they are the deformed shapes which will be combined to produce the dynamic response.

#### Data Files for Incremental Solution

FORMAT deck setup 3 requires two input files and creates two output files, see Figure 10. The first input file is identical to that of deck setups 1 and 2. The second input file is Fortran logical unit 3 and is output from step 2. It is either copied directly from output unit 4 in step 2 to input unit 3 in this step, or copied to unit 3 from magnetic tape where it was stored by step 2.

The output files are Fortran logical units 4 and 7. Unit 4 contains matrix PBUF copied from input file unit 3 and matrices MPT, UZERØ, ECT, MEL, KBEL, CBEL, FFBAR, SIGFB, EPSIG, DEBT, EVT and CØNST copied from input file unit 2. Unit 7 contains matrices DPBØ and PBUPJ copied from input unit 3. The output files may be copied to Fortran logical units 20 and 21 for direct input to the Incremental Solution program, and/or they may be copied to magnetic tape and saved for future use.

The only printout from this step is the standard FØRMAT print which lists the user input cards \$FØRMAT through \$END and prints the program generated logic for the solution of the matrix equations.



## INCREMENTAL SOLUTION

The Incremental Solution program calculates the transient dynamic modal response to the bird impact and the resulting element forces, stresses and strains in the finite element model. This information is calculated at each time point and is saved in the output data file. The program requires two input data files and creates one output file as shown in Figure 10.

The input files are Fortran logical units 20 and 21. They are generated and output by FØRMAT step 3 on logical units 4 and 7 and are copied to units 20 and 21 for use in the Incremental Solution either directly from units 4 and 7 or from magnetic tape where they were stored by FØRMAT.

The output files for the Linear and Nonlinear Incremental Solutions are on Fortran logical units 2 and 23, respectively. This file contains the information required by the Postprocessor program to selectively calculate and print the incremental response results. The output file is generated on magnetic tape and may be passed directly to the Postprocessor for initial printout selections. Also, it should be saved for additional Postprocessor runs which the user may want to make after seeing the initial printout.

Card input data is described under "Incremental Response Data". It consists of one card of option and dimensional data and one or more cards listing the time points marking the end of each increment. It is important that these time increments be the same as those used in calculating the impact loads, see "Loads Generator". The deck setup for execution of the Incremental Solution code consists of the appropriate JCL cards together with the card input data mentioned above.

There are two Incremental Solution program modules available. One calculates the linear incremental response; the other calculates the nonlinear incremental response. The user may attach either the

linear or the nonlinear program in a given application. However, as indicated in "Mode Extraction and Transformation", the use of the nonlinear program may result in unrealistic answers unless special modes have been used in the modal transformation. Further development needs to be done to define and extract these special modes. Therefore, the user should exercise caution in the use of the nonlinear program.

If continued long enough, the dynamic response will eventually damp out to some condition of static equilibrium. Therefore, IMPACT may be used to perform linear or nonlinear static analyses. This use will be expedited if arbitrarily high damping to stiffness ratios are introduced in the material properties. Then a single relatively long time increment will suffice in the case of a linear solution. For the nonlinear solution, a number of short time increments (as determined by experience) will be needed to reach static equilibrium.

Printout from the Incremental Solution program consists of some intermediate data generated during the course of the solution which has been useful during development of the program. It is in terms of modal responses and has limited physical significance. Further details may be found in Part 3 Programming Manual.

#### POSTPROCESSOR

The Postprocessor program allows the user to scan the large amount of output from the Incremental Solution and print selected data in a convenient format. It will normally be run more than once in a given analysis, because after a first look at a small amount of data the user will probably want more detailed information at critical locations in the structure.

The input file is Fortran logical unit 2 and is copied from the output tape generated by the Incremental Solution. There is no output file. Printout is controlled by card input data as described

under "Postprocessor Data". The first card allows the user to specify whether or not he wants to exercise selectivity with regard to time increments, joints, bars, membranes, and/or cells. It also provides for the input of a displacement scale factor. Cards 2 through 6 are used to indicate the type of data to be printed, such as displacements, forces, stresses, etc. Cards 7 through 10 provide title information which will be printed at the top of each page of printout. Finally, cards 20, 30, 40, 50, 60 contain user selected time increment numbers, joint numbers, bar numbers, membrane numbers, and cell numbers, respectively, consistent with the selectivity options indicated in card 1.

The deck setup for execution of the Postprocessor program consists of the appropriate JCL cards together with the card input data discussed above. The following pages show samples of the printout formats from the Postprocessor. Note that the results printed are at the end of a long (10 sec) time increment, and that the velocities and accelerations have damped out so that zero values are printed out. The results are applicable to the finite element model shown in Figure 14.



	CARD INPUT DATA									
1	11000	-0.	-0	-0	-0	-0	-0	-0	-0	-0
2	1111									
3	111									
4	1111									
5	1111									
6	1111									
7										
8										
9										
10										
20	9999	1=	10	-0	-0	-0	-0	-0	-0	-0
30	9999	1=	16	-0	-0	-0	-0	-0	-0	-0

	CARD 1, FIRST TITLE LINE									
1	11000	-0.	-0	-0	-0	-0	-0	-0	-0	-0
2	1111									
3	111									
4	1111									
5	1111									
6	1111									
7										
8										
9										
10										
20	9999	1=	10	-0	-0	-0	-0	-0	-0	-0
30	9999	1=	16	-0	-0	-0	-0	-0	-0	-0

Notes: 1. Reference page 31 for explanation of input cards.

2. Card 20 indicates printout is desired for increments 1 through 10. Only the first increment is included here for demonstration of print formats.

3. The following pages are printed in the sequence shown for each time increment requested.

Sample printout of card input data



CARD 1, FIRST TITLE LINE  
 CARD 2, SECOND TITLE LINE  
 INCREMENT 1 AT TIME 10.000000 JOINT RESPONSE, DISPLACEMENTS SCALED BY .100000E+01

JOINT NO.	DISPLACEMENT			COORDINATES		
	X	Y	Z	X	Y	Z
1	0.	0.	0.	0.	0.	.100000E+01
2	0.	0.	0.	0.	0.	0.
3	0.	0.	0.	0.	.400000E+01	.100000E+01
4	0.	0.	0.	0.	.400000E+01	0.
5	.314083E-02	.373848E-03	-.162330E-01	.400314E+01	.373848E-03	-.9833767E+00
6	-.314062E-02	-.373889E-03	-.162329E-01	.399686E+01	-.373889E-03	-.162329E-01
7	.314036E-02	-.373781E-03	-.162330E-01	.400314E+01	.399463E+01	.9833767E+00
8	-.314071E-02	.373832E-03	-.162329E-01	.399686E+01	.400037E+01	-.162329E-01
9	.428572E-02	-.364441E-05	-.506176E-01	.800429E+01	.364441E-05	.949382E+00
10	-.427658E-02	.305247E-07	-.506130E-01	.799572E+01	.305247E-07	-.506130E-01
11	.428573E-02	.364061E-05	-.506176E-01	.800429E+01	.400000E+01	.949382E+00
12	-.427674E-02	-.408580E-07	-.506130E-01	.799572E+01	.400000E+01	-.506130E-01
13	.4284452E-02	.570883E-08	-.141514E-03	.120043E+02	.570883E-08	.999858E+00
14	-.427681E-02	-.519514E-06	0.	.119957E+02	-.519514E-06	0.
15	.4284451E-02	-.593021E-08	-.141514E-03	.120043E+02	.400000E+01	.999858E+00
16	-.427655E-02	.532609E-06	0.	.119957E+02	.400000E+01	0.

Sample printout of joint displacements and coordinates

CARD 1, FIRST TITLE LINE  
 CARD 1, SECOND TITLE LINE  
 INCREMENT 1 AT TIME 10.000000 JOINT RESPONSE, DISPLACEMENTS SCALED BY .100000E+01

JOINT NO.	VELOCITY			ACCELERATION		
	X	Y	Z	X	Y	Z
1	0.	0.	0.	0.	0.	0.
2	0.	0.	0.	0.	0.	0.
3	0.	0.	0.	0.	0.	0.
4	0.	0.	0.	0.	0.	0.
5	0.	0.	0.	0.	0.	0.
6	0.	0.	0.	0.	0.	0.
7	0.	0.	0.	0.	0.	0.
8	0.	0.	0.	0.	0.	0.
9	0.	0.	0.	0.	0.	0.
10	0.	0.	0.	0.	0.	0.
11	0.	0.	0.	0.	0.	0.
12	0.	0.	0.	0.	0.	0.
13	0.	0.	0.	0.	0.	0.
14	0.	0.	0.	0.	0.	0.
15	0.	0.	0.	0.	0.	0.
16	0.	0.	0.	0.	0.	0.

Sample printout of joint velocities and accelerations

CARD 1, FIRST TITLE LINE  
 CARD 1, SECOND TITLE LINE  
 INCREMENT 1 AT TIME 10.000000 MODAL RESPONSE

MODE	DISPLACEMENT	VELOCITY	ACCELERATION
1	.505740E-01	0.	0.
2	.080334E-13	0.	0.
3	.533321E-13	0.	0.
4	.172371E-03	0.	0.
5	.413433E-13	0.	0.
6	.165065E-03	0.	0.
7	.134275E-12	0.	0.
8	.139830E-04	0.	0.
9	.415783E-12	0.	0.
10	.742154E-13	0.	0.
11	.641628E-05	0.	0.
12	.199609E-13	0.	0.
13	.172409E-05	0.	0.
14	.268180E-13	0.	0.
15	.248099E-06	0.	0.
16	.139942E-03	0.	0.
17	.196440E-13	0.	0.
18	.477193E-11	0.	0.
19	.175946E-06	0.	0.
20	.400006E-10	0.	0.
21	.399385E-07	0.	0.
22	.746542E-06	0.	0.
23	.298251E-06	0.	0.
24	.150719E-06	0.	0.
25	.238320E-06	0.	0.

Note: The modal response is generated by the Incremental Solution program and consists of three sets of amplitudes which are used to scale and combine the transformation modes (in this case 10 modes) to calculate the joint displacements, velocities and accelerations in the global X, Y, Z degrees of freedom.

Sample printout of modal response

CARD 1, FIRST TITLE LINE  
 CARD 1, SECOND TITLE LINE  
 INCREMENT 1 AT TIME 10.000000 BAR ELEMENT RESPONSE

CARD 2, FIRST TITLE LINE  
 CARD 2, SECOND TITLE LINE

BAR NO.	1	2	
FORCES	1	2	Lumped element forces $\bar{F}_1$ and $\bar{F}_2$ , see Figure 1
	1	2	
STRESSES	1	2	Average axial stress
STRAINS	1	2	Corresponding strain
FASTRESS	1	2	Prandtl-Reuss equivalent stress, $\bar{\sigma}$ , see note on page 106



CARD 1, FIRST TITLE LINE  
 CARD 1, SECOND TITLE LINE  
 INCRFMET 1 AT TIME 10.000000 MEMBRANE ELEMENT RESPONSE

CARD 2, FIRST TITLE LINE  
 CARD 2, SECOND TITLE LINE

MEM NO.	1	2	
FORCES			
1	.458795E-01	-.127249E+00	Lumped element forces $\bar{F}_1$ through $\bar{F}_9$ , see Figure 1
2	.190860E+02	-.1118275E+00	
3	.195101E+02	.163129E-01	
4	-.629297E-01	.298758E+01	
5	-.140978E-01	.286118E+01	
6	-.554987E-01	.910498E+00	
7	-.108737E+00	.102787E+01	
8	.113929E-01	-.730240E-01	Average stresses 1) $\sigma_x$ , 2) $\sigma_y$ , 3) $\tau_{xy}$ , see Figure 1
9	.622506E-01	-.200622E+00	
10	.962976E+01	.143687E+01	
STRESSES			
1	-.226481E-01	.416111E+00	Corresponding strains
2	.229397E-01	-.636245E-01	
3	.909173E-06	.122593E-06	
STRAINS			
1	-.301931E-06	-.546882E-08	Prandtl-Reuss equivalent stress, $\bar{\sigma}$
2	.575657E-08	-.159681E-07	
3	.964119E+01	.124523E+01	

Note: The Prandtl-Reuss equivalent stress is equal to twice the octahedral shearing stress and is considered to be the failure criterion for an element, see Part 1, Appendix E for derivations and discussions. Therefore, if  $\bar{\sigma} > \bar{\sigma}_r$  the element has failed, where  $\bar{\sigma}_r$  is the rupture stress, see Table 5.

Sample printout of membrane element forces, stresses and strains

CARD 2, FIRST TITLE LINE  
CARD 2, SECOND TITLE LINE

CARD 1, FIRST TITLE LINE  
CARD 1, SECOND TITLE LINE  
INCREMENT 1 AT TIME 10.000000 CELL ELEMENT RESPONSE

CELL NO.	1	2
FURCES	1	2
1	.174557E+00	.248279E+00
2	.230682E+04	.150435E+01
3	.230686E+04	.271226E+00
4	.167831E+01	.206266E+02
5	.100713E+01	.207296E+02
6	.692742E+04	.346874E+04
7	.346222E+04	.387766E+01
8	.692816E+04	.346666E+04
9	.346406E+04	.294727E+01
10	.150173E+00	.246621E+00
11	.230702E+04	.213276E+01
12	.230719E+04	.219289E+01
13	.544909E+00	.924056E+01
14	.851035E+00	.934880E+01
15	.692888E+04	.346084E+04
16	.346406E+04	.352483E+01
17	.692819E+04	.346104E+04
18	.346377E+04	.317168E+01
19	.316205E+01	.233489E+00
20	.346493E+04	.346457E+04
21	.233489E+00	.299106E+00
22	.346424E+04	.346395E+04
23	.249651E+03	.180340E+01
24	.250392E+03	.196326E+01
25	.248994E+03	.673509E+01
26	.251174E+03	.349102E+01
27	.599555E+01	.447089E+03
28	.286040E+01	.529746E+02
29	.331001E+01	.449635E+03
30	.340415E+01	.502800E+02

Lumped element forces  $\bar{F}_1$  through  $\bar{F}_{30}$   
see Figure 2

Sample printout of cell element forces

CARD 2, FIRST TITLE LINE  
CARD 2, SECOND TITLE LINE

CARD 1, FIRST TITLE LINE	CARD 1, SECOND TITLE LINE	INCREMENT	1 AT TIME	10.000000	CELL ELEMENT RESPONSE

STRESSES	1	2	3	4	5	6	7	8	9	10	11	12	STRAINS	1	2	3	4	5	6	7	8	9	10	11	12	POSTRESS	1	2																																
	19672E+04	899911E+04	305837E+02	917414E-01	250035E+03	728424E-02	199722E+04	899985E+04	317395E+02	706239E-01	250035E+03	728424E-02		927434E-04	785858E-03	339438E-03	230219E-07	627446E-04	182794E-08	927549E-04	785877E-03	339367E-03	177226E-07	627446E-04	182794E-08	817645E+04	817625E+04																																	
	156139E+02	300360E+04	555116E+02	124443E+00	250011E+03	236775E-02	114475E+02	299684E+04	679430E+01	123007E+00	250011E+03	236775E-02		932530E-04	285572E-03	982590E-04	312242E-07	627347E-04	594171E-09	941662E-04	283248E-03	935823E-04	308677E-07	627347E-04	594171E-09	307005E+04	303699E+04																																	
	Average stresses $\sigma_x, \sigma_y, \sigma_z, \tau_{xy}, \tau_{yz}, \tau_{zx}$ at point 1, see Figure 1												Average stresses $\sigma_x, \sigma_y, \sigma_z, \tau_{xy}, \tau_{yz}, \tau_{zx}$ at point 2, see Figure 1												Corresponding strains at point 1												Corresponding strains at point 2												Prandtl-Reuss equivalent stresses at points 1 and 2, $\bar{\sigma}_1$ and $\bar{\sigma}_2$ . See note on page 106.											

## SECTION IV

### PROGRAM DIAGNOSTICS AND ERROR MESSAGES

This section contains lists of program diagnostics and error messages for the IMPACT Programs. In general, the messages are designed to point to discrepancies in the input data and are self-explanatory. Most represent fatal errors, although the program will continue to check as much of the input data as possible before the termination of the run. Some of the messages are informational or call the user's attention to a possible discrepancy, but they do not terminate execution. In some cases a message may indicate insufficient space allocation. Then the user may have to refer to Part 3 Programming Manual and/or seek program maintenance help.

#### LAMINATE GENERATOR

The following is a list of diagnostic messages printed by the Laminate Generator program. They are fatal errors unless noted otherwise.

1. NO LAYERS (DATA CODE 7) ENCOUNTERED IN INPUT. JOB TERMINATED.
2. NO CELLS (DATA CODE 40) ENCOUNTERED IN INPUT. JOB TERMINATED.
3. NO JOINTS (DATA CODE 2) ENCOUNTERED IN INPUT. JOB TERMINATED.
4. JOINT NO. XXXX LISTED IN DATA CODE 8 IS ABOVE A USER DEFINED JOINT - USER DEFINED JOINT WILL REMAIN UNCHANGED. (non-fatal)
5. CARD ENCOUNTERED IN DATA CODE 8 DUPLICATES EXISTING LAMINATE DATA. (non-fatal)
6. JOINT NO. XXXX LISTED IN DATA CODE 8 IS NOT FOUND IN LIST OF QUAD CORNER JOINTS - BAD JOINT DATA MAY RESULT. (non-fatal)
7. NO REVISED THICKNESSES (DATA CODE 8) ENCOUNTERED IN INPUT. (non-fatal)



8. GAP IN SEQUENCE (non-fatal)
9. ATTEMPT TO UNITIZE ZERO VECTOR. (non-fatal)

#### LOADS GENERATOR

The following is a list of diagnostic messages printed by the Loads Generator Program. They are fatal unless noted otherwise.

1. A 29999 CARD WAS NOT FOUND.
2. NO JOINT COORDINATE DATA (DATA CODE 2) ENCOUNTERED IN INPUT.
3. NO CONSTANTS (DATA CODE 11) ENCOUNTERED IN INPUT.
4. INCREMENT (BETA) NUMBER XXXX NOT FOUND IN DATA CODE 11 DATA.
5. NO LOADED JOINT NUMBERS (DATA CODE 12) ENCOUNTERED IN INPUT.
6. JOINTS FOR INCREMENT (BETA) NUMBER XXXX NOT FOUND IN DATA CODE 12 DATA.
7. ATTEMPT TO UNITIZE ZERO VECTOR (non-fatal)

#### INITIAL GENERATOR

The following is a list of diagnostic messages printed by the Initial Generator Program. They are grouped under subroutine names which are not described here. Subroutine descriptions may be found in Part 3, Programming Manual.

#### BIRDG1

1. DATA CODE 1 INPUT IN ERROR.
2. (BIRDG1) TBASE = 0 DATA INPUT ERROR. JOB ABORTED. DATA SCAN CONTINUES.

ACCPRP

1. (ACCPRP) MATERIAL REFERENCE NUMBER OUT OF RANGE.  
REQUESTED MATERIAL NUMBER NO. NNNNN  
MAXIMUM MATERIALS NNNNN
2. FATAL ERROR CONDITION EXISTS OUTSIDE OF THE MATERIAL PROPERTIES ACCESS  
MODULE, NO ACCESS ATTEMPTED.

CNSTRN

1. ALL DIRECTION COMPONENTS ARE ZERO.  
DATA CODE = NN  
CONSTRAINT NO. = NNNNN  
JOINT M = NNNNN  
JOINT N = NNNNN  
DIRECTION NO. = NNNNN  
DIRECTIONS  
NNNNNNN,NNN
2. INVALID DATA IN THE DIRECTION TABLE ASSOCIATED WITH DIREC NO. N
3. INVALID DIRECTION NUMBER. MAX DIREC. NO.=NNNNN
4. INVALID JOINT NUMBER.
5. CONSTANT TABLE DATA OUT OF SEQUENCE, CONSTRAINT NUMBER EXPECTED NNNNN
6. INVALID DATA CODE.
7. THE NUMBER OF CONSTRAINTS EXCEEDS THE PROGRAM MAXIMUM OF NNNNN
8. CONSTRAINT DATA INPUT MISSING.
9. THE NUMBER OF OBLIQUE CONSTRAINTS EXCEEDS THE MAXIMUM OF NNNNN

#### COCALC

1. ERROR DETECTED IN SUBROUTINE COCALC  
MATRIX ASC IS EITHER SINGULAR OR NEAR SO.

#### DRCNUM

1. ALL DIRECTION NUMBERS ARE ZERO. A UNIT VECTOR PARALLEL TO THE X AXIS IS ENTERED.
2. JOINT NUMBER OUT OF RANGE.  
MAXIMUM JOINT = NNNNN  
JOINT M = NNNNN  
JOINT N = NNNNN  
DIRECTION NUMBER NNNNN  
FIXUP TAKEN, BAD DATA FLAGGED IN DIREC TBL.
3. DIRECTION COSINE RECORDS NOT IN SEQUENCE.  
NNNNN RECORDS READ  
ERRONEOUS RECORD  
ID NDIREC JNTM JNTN IBLNK DIREC
4. INVALID DATA CODE IN DIRECTION NUMBER INPUT  
ERRONEOUS RECORD  
ID NDIREC JNTM JNTN IBLNK DIREC
5. THE NUMBER OF DIRECTION NUMBERS EXCEEDS THE PROGRAM MAXIMUM OF 50.

#### EDGDOF

1. \*\*\* SUBROUTINE EDGDOF, FATAL ERROR PRIOR TO ENTRY  
EDGDOF WILL NOT BE EXECUTED.
2. \*\*\* ERROR DETECTED IN SUBROUTINE EDGDOF  
NNNNN JOINT PAIRS WRITTEN TO TAPE IN SUBR EDGES  
NNNNN JOINT PAIRS READ FROM TAPE IN EDGDOF

## EDGES

1. \*\*\* ERROR IN SUBROUTINE EDGES  
INVALID DATA CODE NNNNNNNN

## ELEMNT

1. (ELEMNT) ELEMENT NO. OUT OF SEQUENCE.  
PREVIOUS SEQUENCE NO. = NNN  
CURRENT CARD SEQUENCE NO. = NNN
2. (ELEMNT) ELEMENT TYPE CODE OUT OF SEQUENCE OR 9999 SEPARATOR  
CARD MISSING,  
PREVIOUS TYPE CODE = NNN  
CURRENT CARD TYPE = NNN  
ELEMENT NUMBER = NNNNN
3. (ELEMNT) A = 0 FOR BAR ELEMENT NNNNN
4. (ELEMNT) T = 0 FOR MEMBRANE ELEMENT NNNNN
5. (ELEMNT) MR = 0 FOR ELEMENT NNNNN CODE = NNN
6. (ELEMNT) JOINT NUMBER(S) FOR ELEMENT NNNNN IS (ARE) GREATER THAN MAX  
JOINT INPUT = NNNNN  
JOINT NUMBERS INPUT ARE P0, Q0, R0, S0, P1, Q1, R1, S1
7. (ELEMNT) JOINT NUMBER(S) FOR ELEMENT NNNNN IS (ARE) EQUAL ZERO,  
JOINT NUMBERS INPUT ARE P0, Q0, R0, S0, P1, Q1, R1, S1

## JTEMP

1. (JTEMP) DATA CODE ERROR READING TEMPERATURE DATA.  
ICODE = NN J1, J2 = NN NN TEMP = .NNNNNN ENN



2. (JTEMP) JOINT NO. NOT INPUT FOR TEMPERATURE DATA.

ICODE = NN J1,J2 = NN NN TEMP = .NNNNNN ENN

#### JZERO

1. (JZERO) DATA CODE ERROR READING COORDINATE DATA.

ICODE = NN J = NN X,Y,Z = .NNNNN ENN .NNNNN ENN .NNNNN ENN

2. (JZERO) JOINT NO. NOT INPUT FOR COORDINATE DATA.

ICODE = NN J = NN X,Y,Z = .NNNNN ENN .NNNNN ENN .NNNNN ENN

3. (JZERO) JOINT NO. OUT OF SEQUENCE.

ICODE = NN J = NN X,Y,Z = .NNNNN ENN .NNNNN ENN .NNNNN ENN

#### LPCKC

1. LPCKC-SID \*\*\* KBAR = D INVERSE ERROR.

CELL DEFINED BY JOINTS NNNN NNNN NNNN NNNN NNNN NNNN NNNN  
NNNN HAS GENERATED A SINGULAR MATRIX AND CANNOT BE INVERTED.

2. LPCKC-SID \*\*\* KBAR = D MATRIX HAS ONLY ABOUT NNNN.N SIGNIFICANT DIGITS.

CELL DEFINED BY JOINTS NNNN NNNN NNNN NNNN NNNN NNNN NNNN  
NNNN

#### LPMKC

1. LPMKC-SID \*\*\* KBAR = D INVERSE ERROR.

MEMBRANE DEFINED BY JOINTS NNNN NNNN NNNN NNNN  
HAS GENERATED A SINGULAR MATRIX AND CANNOT BE INVERTED.

2. LPMKC-SID \*\*\* KBAR = D MATRIX HAS ONLY ABOUT NNNN.N SIGNIFICANT DIGITS.

MEMBRANE DEFINED BY JOINTS NNNN NNNN NNNN NNNN

## MATDES

1. MATERIAL REFERENCE NUMBER NN BEING PROCESSED  
AND MATERIAL REFERENCE NO. NN WAS ENCOUNTERED.  
THE ERRONEOUS RECORD  
IDCODE NTRY NPC MAP REC CONT  
\*\*\* ERROR DETECTED IN SUBROUTINE MATDES
2. INVALID IDCODE NN ENCOUNTERED WHILE PROCESSING MATERIAL  
PROPERTIES DATA  
THE ERRONEOUS RECORD .  
IDCODE NTRY NPC MAP REC CONT  
\*\*\* ERROR DETECTED IN SUBROUTINE MATDES
3. INSUFFICIENT SPACE ALLOCATED FOR MATERIAL DESCRIPTION  
STATEMENTS, MODIFY VARIABLE MXDES IN SUBR. MTLMOD.  
THE ERRONEOUS RECORD .  
IDCODE NTRY NPC MAP REC CONT  
\*\*\* ERROR DETECTED IN SUBROUTINE MATDES

## MTLMOD

1. \*\*\* ERROR DETECTED IN SUBROUTINE MTLMOD  
NO MATERIAL DESCRIPTION INPUT FOR REFERENCE NUMBER NNNNNN
2. \*\*\* ERROR DETECTED IN SUBROUTINE MTLMOD  
MATERIAL REFERENCE NO. OUT OF RANGE  
SPACE ALLOCATED FOR NNNNNN ERRONEOUS MTRL. REF. NO. NNNNNN  
IF MODIFICATION OF THE PROGRAM IS NECESSARY THEN  
MODIFY VARIABLE MXMTRL IN SUBR. MTLMOD,  
MODIFY SUBSCRIPTS IN VARIABLES LNGTHS,  
AND MPTR IN LABELED COMMON MTRL.
3. \*\*\* ERROR DETECTED IN SUBROUTINE MTLMOD  
INVALID DATA CODE NN ENCOUNTERED  
IDCODE NTRY NPC MAP REC CONT

4. \*\*\* ERROR DETECTED IN SUBROUTINE MTLMOD  
MATERIAL REFERENCE NO. OUT OF SEQUENCE OR MISSING  
MATERIAL REFERENCE NO. LAST ENCOUNTERED NNNNN  
MATERIAL REFERENCE NO. JUST ENCOUNTERED NNNNN
5. \*\*\* ERROR DETECTED IN SUBROUTINE MTLMOD

#### OVER3

1. (OVER3) ERROR IN CONSTRAINT TABLE GENERATION  
MORE THAN 3 ENTRIES FOR JOINT NNNNN  

CONSTRAINT NO.	JOINT NO.	DIRECTION	VALUE
NNNNN	NNNNN	NNNNN	NNNNN

#### PASSM2

1. ERROR (PASSM2) DUPLICATE CONSTRAINTS AT JOINT NNNNN

#### PROP

1. PROCESSING MATERIAL REF. NO. NNNNN PROPERTY NO. NNNNN  
SPACE ALLOCATED FOR NNNNN PROPERTIES MAXIMUM.  
MODIFY VARIABLE MXPROP IN SUBR. MTLMOD,  
MODIFY SUBSCRIPTS IN VARIABLES LNGTHS, MPTR, AND  
PRPVAL IN LABELED COMMON MTRL.  
MOD. SUBSCRIP IN VAR. COEF AND VAR MXPROP IN SUBROUTINE ACCPRP  
\*\*\* ERROR DETECTED IN SUBROUTINE PROP
2. PROCESSING MATERIAL REF. NO. NNNNN PROPERTY NO. NNNNN  
THE NUMBER OF COEF.S READ NNNNN DOES NOT EQUAL THE NUMBER  
SPECIFIED TO BE INPUT NNNNN
3. PROCESSING MATERIAL REF. NO. NNNNN PROPERTY NO. NNNNN  
THE NUMBER OF COEF.S SPECIFIED TO BE CALCULATED NNNNN IS  
GREATER THAN THE NUMBER OF VALUES INPUT NNNNN

4. PROCESSING MATERIAL REF. NO. NNNNN PROPERTY NO. NNNNN  
THE NUMBER OF COEF.S NNNNN WILL OVERFLOW THE SPACE NNNNN  
ALLOCATED FOR ALL COEFFICIENTS.  
MODIFIED VARIABLE MXCOFS IN SUB. MTLMOD,  
MODIFY SUBSCRIPTS IN VARIABLE COEFS IN LABELED COMMON MTRL.
5. PROCESSING MATERIAL REF. NO. NNNNN PROPERTY NO. NNNNN  
MORE PROPERTY VALUES TO BE INPUT THAN SPACE AVAILABLE NNNNN  
MODIFY VARIABLE MXPVL IN SUB. MTLMOD,  
MODIFY SUBSCRIPTS IN ARRAYS TVPA, TVPAT, AND VPT.
6. PROCESSING MATERIAL REF.NO. NNNNN PROPERTY NO. NNNNN  
MORE COEFFICIENTS TO BE INPUT NNNNN THAN SPACE AVAILABLE NNNNN  
MODIFY VARIABLE MXPCO IN SUB. MTLMOD,  
MODIFY SUBSCRIPTS IN ARRAYS TVPA, TVPAT, AP, RTMP,  
ITMP, ASC, AND BSC IN LABELED COMMON COFCLC.
7. PROCESSING MATERIAL REF.NO. NNNNN PROPERTY NO. NNNNN  
MATERIAL REFERENCE NUMBER WAS EXPECTED.
8. DATA CODE NNNNN WAS ENCOUNTERED INSTEAD OF 10.  
ERRONEOUS RECORD  
IDCODE NTRY NPC MAP REC1 REC2 REC3 REC4 REC5 REC6

#### RAMOSG

1. (RAMOSG) R = 1.0  

MTLERR	EA/E	SR	R	N K = 1
.NNNN ENN	.NNNN ENN	.NNNN ENN	.NNNN ENN	.NNNN ENN
MR	E	EA	SIGA	SIGR
NN	.NNNN ENN	.NNNN ENN	.NNNN ENN	.NNNN ENN
2. (RAMOSG) ZERO ARGUMENT CALCULATED FOR NATURAL LOG FUNCTION.  

MTLERR =	NNN			
MR	E	EA	SIGA	SIGR
NN	.NNNN ENN	.NNNN ENN	.NNNN ENN	.NNNN ENN
3. (RAMOSG) RAMBERT-OSGOOD VALUES DID NOT CONVERGE WITHIN 50  
ITERATIONS, MTLERR = NN.  

MR	E	EA	SIGA	SIGR
NN	.NNNN ENN	.NNNN ENN	.NNNN ENN	.NNNN ENN



## SKDATA

1. (SKDATA) INPUT DATA OUT OF SEQUENCE, ATTEMPT TO SKIP CODE NN  
FAILED WHEN THE FOLLOWING CARD WAS ENCOUNTERED.

```
ID9999A  A      A      A      A      A  
NNYYYYAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA
```

## FORMAT PHASE 2

Diagnostic messages printed by the FORMAT program are not listed here but are available in Reference 1.

## INCREMENTAL SOLUTION

The following is a list of diagnostic messages printed by the Incremental Solution program:

1. TIME NOT SPECIFIED IN ASCENDING ORDER. STOP.
2. INSUFFICIENT WORK SPACE BY XXXXX WORDS. STOP.
3. UNCORRECTABLE SINGULAR EIGENVECTORS. HALT.

## POSTPROCESSOR

When an error is detected by the Postprocessor program, the following message is printed at the top of the last page of output.

\*\*\*\*\* ERROR nnnn DETECTED \*\*\*\*\*

The error number nnnn is an integer having the values and meanings described below.

nnnn	Description
1-6	Input card nnnn is out of sequence
7	One of the input title cards (7 through 10) is out of sequence
21	Increment selectivity option was specified but selection table (card 20) is not present
22	Null increment selection table
30	Inconsistent options for joint data between selectivity flag and joint subset selection flags
31	Joint selectivity option was specified but selection table (card 30) is not present
32	Null joint selection table
40	Inconsistent options for bar data between bar selectivity flag, bar subset selection flags and/or presence of bar elements in model
41	Bar selectivity option was specified but selection table (card 40) is not present
42	Null bar selection table
50,51,52	Same as 40, 41, 42 except substitute "membrane" for "bar"
60,61,62	Same as 40, 41, 42 except substitute "cell" for "bar"
100	Insufficient core available

When the error number nnnn is equal to 100, the following additional message is printed out.

\*\*\* INSUFFICIENT CORE XXXX VS YYY

The first integer value XXXX is equal to the core available and the second value YYY is the core required.

## SECTION V

### ILLUSTRATIVE EXAMPLES

Figure 14 shows a simple finite element model composed of two bar elements, two membrane elements and two cell elements. Its orientation with respect to the global coordinate axes is shown, joint and element numbering sequences are given, and a bird impact loading condition is defined. Table 7 illustrates the use of the key-punch data forms to list the model definition data in the proper card formats. Note that data codes 2 and 40 are not complete and that data codes 7 and 8 have been provided for a laminate generator run which will calculate the missing data.

The data code 3 card specifies a constant temperature at all joints, which is also equal to the base temperature. Therefore, there will be no thermal deformations in the model. The data code 4 cards define three direction numbers parallel to the X, Y, Z coordinate axes. Data code 5 cards impose the constraints indicated in Figure 14. Notice that the three available options are all exercised in defining the constraint directions. In this case the most convenient option is probably the reference to data code 4 direction numbers.

The model in Figure 14 has only one layer of cell elements, but the Laminate Generator can still be used to calculate lower surface joint coordinates and to complete the single layer cell definitions. In the data code 7 cards a laminate number of 100 is specified, and the surface offset field is blank ( $t_0 = 0$ ). Therefore, the program will use the surface joint coordinates as given without offset normal to the surface. Only one layer

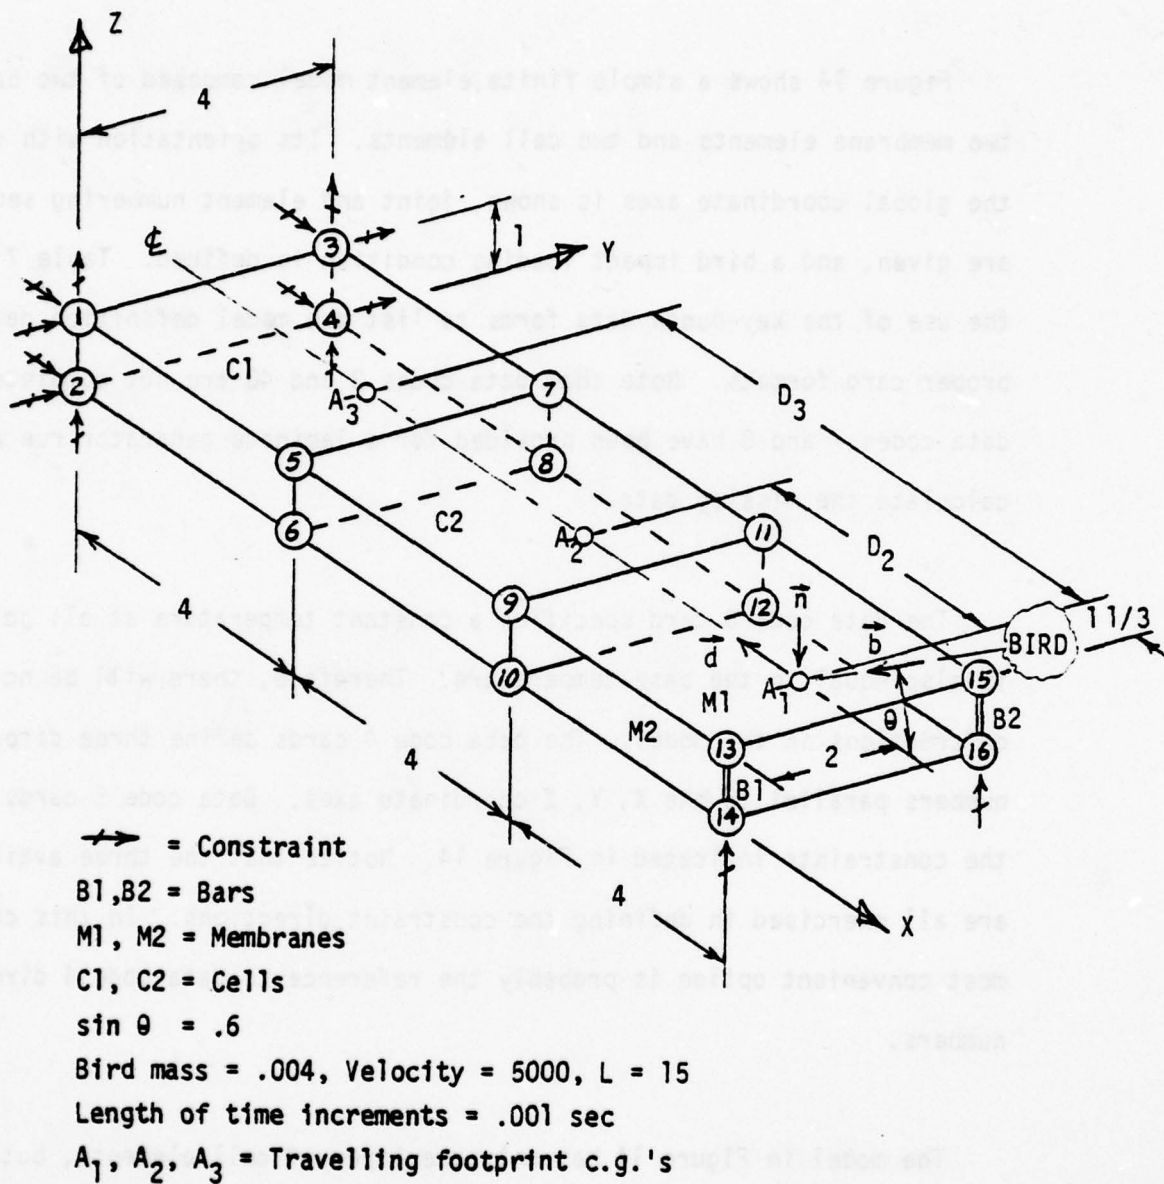


Figure 14. A Simple Finite Element Model for Purposes of Illustration.



definition card ( $L + 1 = 101$ ) is needed in this case, but if the laminate had more than one layer there would be additional layer definition cards 102, 103, etc. The data code 8 cards are not really necessary since no change in layer thicknesses is being made, but they illustrate the procedure. If the laminate had more layers, fields  $t_2$ ,  $t_3$ , etc. would also contain overriding thickness values.

The data code 10 cards illustrate the input of room temperature properties for aluminum (based on equations 15 through 18) and for polycarbonate (based on preliminary data for Reference 3). Temperature dependence for any property would be input by specifying the desired number of polynomial coefficients in field NC and giving temperature, property value pairs in fields  $T_i$ ,  $V_i$ .

Data codes 11 and 12 are provided so that a Loads Generator run can be executed to calculate the bird impact loads. In this case a travelling footprint loading has been specified with a rectangular force-time distribution, see data code 11, cards 6. The user should recognize that he may also specify a stationary footprint loading by setting  $D = 0$  for all  $\beta$ . Likewise, the force-time distribution may be controlled by means of the load distribution factors  $f$ .

Element definitions on data code 20, 30, 40 and 50 cards show complete bar and membrane definitions but only partial cell data. The Laminate Generator will produce the data for fields  $p_1$ ,  $q_1$ ,  $r_1$ ,  $s_1$  and  $M$ . If the stress orientation angle  $\zeta_{pq}$  is non-zero for any surface cell, it should be entered by the user, since the Laminate Generator does not calculate this angle. However, it does duplicate the surface cell angle input by the user for all other cells in a

stack in the case of a multi-layered laminate.

Table 8 illustrates FORMAT deck setup 1 card data entered on a key-punch form. Deck setups 2 and 3 are generated in a similar manner.

Table 9 shows the data cards for the Incremental Solution and Postprocessor programs. The impact loading will be acting on and travelling along the surface of the structure for the first three increments only, but inertia forces could cause more critical response after impact than during impact. Therefore, ten time increments are specified for the incremental solution. The Postprocessor cards specify that results will be printed for time increments 1 through 6. The results printed are to include the following:

1. Joint coordinates, displacements, velocities and accelerations for joints 1 through 12.
2. Modal displacements, velocities and accelerations.
3. Lumped element forces, average stresses, average strains and equivalent stresses for all bar, membrane and cell elements.

For larger models than that shown in Figure 14, the user will normally make a first Postprocessor run to print a more limited selection of results. Then, after inspection of this select information, he will know better what information to print out in subsequent Postprocessor runs for detailed evaluation of results.





TABLE 7. (Continued)



TABLE 7. (Continued)

DATA CODE 7, LAMINATE DEFINITION DATA									
RIGHT ADJUSTED INTEGER DATA					FLOATING POINT DATA				
7	L	M	$\Delta J_0$	$\Delta E_1$	$t_0$	$t_1$			
7	L + 1	M	$\Delta J_0$	$\Delta E_1$					
7	L + 99								
1	2	3	4	5	6	7	8	9	10
1	11	12	13	14	15	16	17	18	19
1	20	21	22	23	24	25	26	27	28
1	29	30	31	32	33	34	35	36	37
1	38	39	40	41	42	43	44	45	46
1	47	48	49	50	51	52	53	54	55
1	56	57	58	59	60	61	62	63	64
1	65	66	67	68	69	70	71	72	73
1	74	75	76	77	78	79	80	81	82
1	83	84	85	86	87	88	89	90	91
1	92	93	94	95	96	97	98	99	100
1	101	102	103	104	105	106	107	108	109
1	110	111	112	113	114	115	116	117	118
1	119	120	121	122	123	124	125	126	127
1	128	129	130	131	132	133	134	135	136
1	137	138	139	140	141	142	143	144	145
1	146	147	148	149	150	151	152	153	154
1	155	156	157	158	159	160	161	162	163
1	164	165	166	167	168	169	170	171	172
1	173	174	175	176	177	178	179	180	181
1	182	183	184	185	186	187	188	189	190
1	191	192	193	194	195	196	197	198	199
1	200	201	202	203	204	205	206	207	208
1	209	210	211	212	213	214	215	216	217
1	218	219	220	221	222	223	224	225	226
1	227	228	229	230	231	232	233	234	235
1	236	237	238	239	240	241	242	243	244
1	245	246	247	248	249	250	251	252	253
1	254	255	256	257	258	259	260	261	262
1	263	264	265	266	267	268	269	270	271
1	272	273	274	275	276	277	278	279	280
1	281	282	283	284	285	286	287	288	289
1	290	291	292	293	294	295	296	297	298
1	299	300	301	302	303	304	305	306	307
1	308	309	310	311	312	313	314	315	316
1	317	318	319	320	321	322	323	324	325
1	326	327	328	329	330	331	332	333	334
1	335	336	337	338	339	340	341	342	343
1	344	345	346	347	348	349	350	351	352
1	353	354	355	356	357	358	359	360	361
1	362	363	364	365	366	367	368	369	370
1	371	372	373	374	375	376	377	378	379
1	380	381	382	383	384	385	386	387	388
1	389	390	391	392	393	394	395	396	397
1	398	399	400	401	402	403	404	405	406
1	407	408	409	410	411	412	413	414	415
1	416	417	418	419	420	421	422	423	424
1	425	426	427	428	429	430	431	432	433
1	434	435	436	437	438	439	440	441	442
1	443	444	445	446	447	448	449	450	451
1	452	453	454	455	456	457	458	459	460
1	461	462	463	464	465	466	467	468	469
1	470	471	472	473	474	475	476	477	478
1	479	480	481	482	483	484	485	486	487
1	488	489	490	491	492	493	494	495	496
1	497	498	499	500	501	502	503	504	505
1	506	507	508	509	510	511	512	513	514
1	515	516	517	518	519	520	521	522	523
1	524	525	526	527	528	529	530	531	532
1	533	534	535	536	537	538	539	540	541
1	542	543	544	545	546	547	548	549	550
1	551	552	553	554	555	556	557	558	559
1	560	561	562	563	564	565	566	567	568
1	569	570	571	572	573	574	575	576	577
1	578	579	580	581	582	583	584	585	586
1	587	588	589	590	591	592	593	594	595
1	596	597	598	599	600	601	602	603	604
1	605	606	607	608	609	610	611	612	613
1	614	615	616	617	618	619	620	621	622
1	623	624	625	626	627	628	629	630	631
1	632	633	634	635	636	637	638	639	640
1	641	642	643	644	645	646	647	648	649
1	650	651	652	653	654	655	656	657	658
1	659	660	661	662	663	664	665	666	667
1	668	669	670	671	672	673	674	675	676
1	677	678	679	680	681	682	683	684	685
1	686	687	688	689	690	691	692	693	694
1	695	696	697	698	699	700	701	702	703
1	704	705	706	707	708	709	710	711	712
1	713	714	715	716	717	718	719	720	721
1	722	723	724	725	726	727	728	729	730
1	731	732	733	734	735	736	737	738	739
1	740	741	742	743	744	745	746	747	748
1	749	750	751	752	753	754	755	756	757
1	758	759	760	761	762	763	764	765	766
1	767	768	769	770	771	772	773	774	775
1	776	777	778	779	780	781	782	783	784
1	785	786	787	788	789	790	791	792	793
1	794	795	796	797	798	799	800	801	802
1	803	804	805	806	807	808	809	810	811
1	812	813	814	815	816	817	818	819	820
1	821	822	823	824	825	826	827	828	829
1	830	831	832	833	834	835	836	837	838
1	839	840	841	842	843	844	845	846	847
1	848	849	850	851	852	853	854	855	856
1	857	858	859	860	861	862	863	864	865
1	866	867	868	869	870	871	872	873	874
1	875	876	877	878	879	880	881	882	883
1	884	885	886	887	888	889	890	891	892
1	893	894	895	896	897	898	899	900	901
1	902	903	904	905	906	907	908	909	910
1	911	912	913	914	915	916	917	918	919
1	920	921	922	923	924	925	926	927	928
1	929	930	931	932	933	934	935	936	937
1	938	939	940	941	942	943	944	945	946
1	947	948	949	950	951	952	953	954	955
1	956	957	958	959	960	961	962	963	964
1	965	966	967	968	969	970	971	972	973
1	974	975	976	977	978	979	980	981	982
1	983	984	985	986	987	988	989	990	991
1	992	993	994	995	996	997	998	999	1000



TABLE 7. (Continued)

RT ADJ INTEGER		ALPHABETIC DATA										Card column 72 non-blank for continuation										TYPE OF DATA	
RT ADJ INTEGER		MATERIAL DESCRIPTION																					
RT ADJ INTEGER		FLUATING POINT DATA																					
10N+P	10N+P	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0		
10N+99	10N+99	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0		
		End of data for material N																					
		ALUMINUM, 2024-T62, RM TEMP																					
		10.6 E+6																					
		7.44 E+6																					
		50000																					
		66800																					
		1.0488																					
		1.33																					
		1.126 E-4																					
		1.259 E-3																					
		80																					
		1.10 E-9																					
		POLYCARBONATE (SEIRACIN, LOW STRAIN RATE), RM TEMP																					
		1.27 E+6																					
		1.143 E+6																					
		9076																					
		1.1936																					
		1.531																					
		1.35																					
		1.347 E-4																					



TABLE 7. (Continued)

ALPHAMERIC DATA										Card column 72 non-blank for continuation									
MATERIAL DESCRIPTION																			
FLOATING POINT DATA																			
RT ADD INTEGER																			
1 0 M																			
RT ADD INTEGER																			
1 0 M																			
1 0 M + P																			
1 0 M + P																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			
1 0 M + 99																			





TABLE 7. (Continued)

DAC 25-1113C (REV. 8-69)

DATA CODE 12. IMPACT FOOTPRINT DATA

RIGHT ADJUSTED INTEGER DATA

Card column 72 non-blank for continuation

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71									

TABLE 7. (Continued)



TABLE 8. FORMAT INSTRUCTIONS ON KEY-PUNCH FORMS

DAK 35 1312C (REV 8-69)

FORMAT Deck Setup 1, reference page 6

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80
\$FORMAT																																																																															
\$RUN																																																																															
STANDARD																																																																															
GP LOGIC																																																																															
INPUT TAPE (MTAPE 1)																																																																															
INPUT TAPE (LTAPE 1)																																																																															
OUTPUT TAPE (DECAMP 1)																																																																															
INSTRUCTION																																																																															
PT PRT = DPT, DEJCL (1)																																																																															
SAVE (DECAMP) DPT																																																																															
MR = PRUF MEL, SEQWF																																																																															
PRUPJ PRUPS = PRUPJ, DEJCL (AB)																																																																															
PR = PRUPJ, MULT, PT																																																																															
PRT = PR, TRANSP																																																																															
XUTL UR = PRUF, KEL, SEQWF, PRT																																																																															
UT = PRUPJ, TMULT, UR																																																																															
SAVE (DECAMP) MK, PRUPJ, LTL, UR																																																																															
PRINT (UUU) UT																																																																															
END																																																																															





APPENDIX A  
SECTIONS II AND III OF  
AFFDL-TR-77-99 PART 3

This appendix contains direct duplications of Sections II and III of the Part 3 Programming Manual. These sections are presented here for the purpose of providing the user with example code segments, including JCL, for standard operations at the Wright-Patterson Air Force Base CDC Computing Facility. At other installations this information may not be completely applicable. But additional information concerning installation and execution of the PART 3 program is available in Part 3.

APPENDIX A  
SECTIONS II AND III OF  
AFFDL-TR-77-99 PART 3

APPENDIX A  
SECTIONS II AND III OF  
AFFDL-TR-77-99 PART 3

This appendix contains direct duplications Sections II and III of the Part 3 Programming Manual. These sections are presented here for the purpose of providing the user with example deck setups, including JCL, for standard operations at the Wright-Patterson Air Force Base CDC Computing Facility. At other installations this information may not be completely applicable, but additional information concerning implementation and execution of the IMPACT Programs is available in Part 3.

## SECTION II SYSTEM OVERVIEW

The user initiates an analysis by preparing tabular data which describes the idealized model of the windshield system under investigation. The model may include support structure for the transparency which may itself consist of a number of laminates. The tabular data prepared by the user, consisting of geometry, constraint, material property, and element definition data, is described in detail in Part 2.

### PROGRAM FUNCTIONS

The Laminate Generator provides a preprocessing function with respect to multi-layered transparencies: Optionally, the user may prepare the model definition data consistent with the requirements of the Laminate Generator. The program will then augment the input model definition data with the joint coordinates and element definitions of interior joints and elements within a laminate. In addition, surface normal vectors representing a unit pressure distribution over the exterior surface of the transparency are generated. When applicable, this program reduces the amount of input data prepared by the user and provides vector data for use in assembling pressure loading conditions in subsequent analysis steps.

The Initial Generator serves the prime function of transforming the complete model definition data in tabular form into matrix data consistent with the requirements of the subsequent solution process. Using the model definition data, the unassembled element stiffness, damping, and mass matrices are generated as are other matrices of geometric transformations, thermal effects, etc. The data generated here is independent of mechanical loading on the structure and satisfies the requirements of either a linear and non-linear analysis whichever might follow.

The Loads Generator provides the means of computing discrete joint



loads on the idealized model as a function of time and bird length, mass, velocity, and impact direction. Optionally, the user may prepare the model definition data to include the description of the impact loading consistent with the requirements of the Loads Generator. The program will then generate a matrix of incremental joint loads at the times specified in either card image or binary form.


The FORMAT Phase II program is used to assemble the structural mass and stiffness matrices, decompose the structural stiffness matrix, extract vibration modes, perform the modal transformation, and produce properly ordered binary output data files for input to the incremental solution step. Input to this processing step are the binary file of matrices from the Initial Generator and, optionally, the loads matrix from the Loads Generator in either card image form or as a binary matrix in a separate file. The required tasks in this phase of the solution process may be accomplished in one or more executions of the FORMAT program.

The Linear and Non-Linear Incremental Solution programs solve the equations of motion incrementally for the modal response, structural displacements, and element forces, stresses, and strains. The results from each increment are output to a binary file for subsequent processing. The format and content of the output file is identical for either a linear or non-linear solution.

The Postprocessor accepts the output file from either a linear or non-linear solution and selectively prints the results. Selection may be specified for time increments, joints, modes, and elements in any logical combination.

#### DATA FILES

 Figure A.1 shows the flow of data through a complete solution. Each data file is identified for subsequent reference in this discussion,



e.g., C1, M3, etc. The FORTRAN logical unit numbers of the input and output files for each program are shown in parenthesis. Not shown in the figure is system print file 6 which is used for printed output by each program nor is the use of the CDC utility program UPDATE which is discussed later in this section.

#### File Formats

There are only two file structures used for all data files shown in Figure A.1. Those files identified with the letter "C" are sequential files of card images (formatted). Each logical record in these files corresponds to a single card and contains a string of 80 characters. The formats associated with each card are given in Part 2.

Those files identified with the letter "M" are sequential files of matrix data (binary, unformatted). The structure of these files corresponds to that of FORMAT matrix data (Reference 1). For purposes of continuity, a description of this file structure is repeated here.

Each logical record in these files is of the form

ICØL, KØDE, NUM, (A(I), I=1, NUM)

where ICØL is an integer identifier for the record, KØDE is an integer flag indicating compressed or expanded mode for the data part of record (array A), NUM is an integer number equal to the number of words remaining in the record, and A is an array of variable length containing the actual data to be read or written.

The logical records in the file are structured as follows

Tape header

Matrix A header

Column 1 of matrix A

Column 2 of matrix A

⋮

Last column of matrix A

Matrix A trailer

Matrix B header

Column 1 of matrix B

Column 2 of matrix B

⋮

Last column of matrix B

Matrix B trailer

⋮

Tape trailer

The contents of the header and trailer records are as follows

	ICØL	KØDE	NUM	Data
Tape header	-10	0	7	(TNAME(I),I=1,6),TMØD
Tape trailer	-20	0	1	0
Matrix header	-1	0	9	(MNAME(I),I=1,6),MMØD,IMAX,JMAX
Matrix trailer	-2	0	1	0

where TNAME and MNAME are six character tape and matrix names stored one character per word with blank word fill in trailing words as necessary, TMØD and MMØD are integer numbers used as modifiers of the tape and matrix names for identification, and IMAX and JMAX are the row and column dimensions of the matrix.

In matrix column data, ICØL is a positive integer equal to the column number. If a column of a matrix has more than 50% non-zero elements, the



column is written in expanded form ( $KØDE=0$ ) and NUM is equal to IMAX. If a column has less than 50% non-zero elements, the column is written in compressed form ( $KØDE=1$ ). Compression is accomplished by forming an array of the non-zero values and their corresponding row locations in the column as the data part of the record. For example, if the 12th column of a matrix with a row dimension of 100 had only 3 non-zero elements, it would be compressed and appear as a logical record of the form

ICØL	KØDE	NUM	Data
12	1	6	$V_1, L_1, V_2, L_2, V_3, L_3$

where ICØL = 12 is the column number, KØDE = 1 indicates a data record in compressed form, NUM = 6 is the number of words remaining in the record (three pairs of value and location), the element values are  $V_1, V_2, V_3$ , and the row locations of these elements are  $L_1, L_2$ , and  $L_3$ . Note that  $L_1, L_2, L_3$  must be in ascending order.

If a column of a matrix is completely null, no record for that column will be present in the file.

### File Contents

The files shown in Figure A.1 are the master files used by the IMPACT system to pass data between each of the stand alone programs. The content of each of the card image files is given in detail in Part 2. The content of each of the matrix data files is given in Table A.1. The FORMAT tape and matrix names shown in parentheses are specified by user input and, consequently, may vary while all other names are fixed since they are imbedded in the program code.

### USE OF UPDATE

The design of the IMPACT system provides for the optional use of the CDC utility UPDATE during the preprocessing phase. This phase includes the execution of the Laminate Generator, Initial Generator, and Loads Generator. Figure A.2 shows the intended use of UPDATE in an application

TABLE A.1. CONTENT OF MASTER MATRIX DATA FILES

FILE ID	FORMAT NAMES AND MODIFIERS		DESCRIPTION
	TAPE	MATRIX	
M1	MTAPE,1	UZERØ,1	$U_o$ , original joint coordinates
		MPT,1	MPT, material property data
		ECT,1	ECT, element constants
		PRUPT,1	$P_{RUPT}$ , reordering transform for degrees of freedom
		PRUF,1	$P_{RUF}$ , reordering transform for elements
		KEL,1	$k$ , lumped element stiffness
		MEL,1	$m$ , lumped element mass
		KBEL,1	$\bar{k}$ , unlumped element stiffness
		CBEL,1	$\bar{c}$ , unlumped element damping
		FFBAR,1	$F_{\bar{F}}$ , element force transform
		SIGFB,1	$\sigma_{\bar{F}}$ , element stress transform
		EPSIG,1	$\epsilon_o$ , element strain transform
		DEBT,1	$\delta \bar{e}_T$ , element thermal deformations
M2	LTAPE,1	EVT,1	EVT, element variables
		CØNST,1	CØNST, problem constants
M2	LTAPE,1	DPØT,1	$\delta P_{(\phi)T}$ , incremental applied loads

TABLE A.1. CONTENT OF MASTER MATRIX DATA FILES (Continued)

FILE ID	FORMAT NAMES AND MODIFIERS		DESCRIPTION
	TAPE	MATRIX	
M3	(FILE20,1)	(PBUF,1)	$\bar{P}_{UF}$ , element force modal transformation
		MPT,1	Copied from file M1
		UZERØ,1	
		ECT,1	
		MEL,1	
		KBEL,1	
		CBEL,1	
		FFBAR,1	
		SIGFB,1	
		EPSIG,1	
		DEBT,1	
		EVT,1	
		CONST,1	
M4	(FILE21,1)	(PBPHI,1)	$\delta \bar{P}_{(\phi)U}$ , transformed incremental applied loads
		(PBUPTJ,1)	$\bar{P}_{UPTJ}$ , degree of freedom modal transformation

TABLE A.1. CONTENT OF MASTER MATRIX DATA FILES (Continued)

FILE ID	FORMAT NAMES AND MODIFIERS		DESCRIPTION
	TAPE	MATRIX	
M5	WINDOW,52877 (linear)	CØNST,1	CØNST, augmented problem constants
		TIME,1	t, incremental time history
		UZERØ,1	Copied from file M3
		(PBPFI,1)	Copied from file M4
	TAPE,1 (non-linear)	(PBUPTJ,1)	Copied from file M4
		RESPNS,ß	$\bar{\Delta}_\beta$ , $\delta\bar{\Delta}_\beta$ , $\bar{v}_\beta$ , and $\dot{\bar{v}}_\beta$ , modal response
		BARS,ß	$\bar{F}_{K_{\beta B}}$ , $\sigma_{\beta B}$ , and $\epsilon_{\beta B}$ , bar element forces, stresses, and strains
		MEMBRN,ß	$\bar{F}_{K_{\beta M}}$ , $\sigma_{\beta M}$ , and $\epsilon_{\beta M}$ , membrane element forces, stresses, and strains
		CELLS,ß	$\bar{F}_{K_{\beta C}}$ , $\sigma_{\beta C}$ , and $\epsilon_{\beta C}$ , cell element forces, stresses, and strains
			where ß is the increment number and these four matrices are repeated for each time increment. If there are no elements of a given type, the corresponding matrix will not be present.



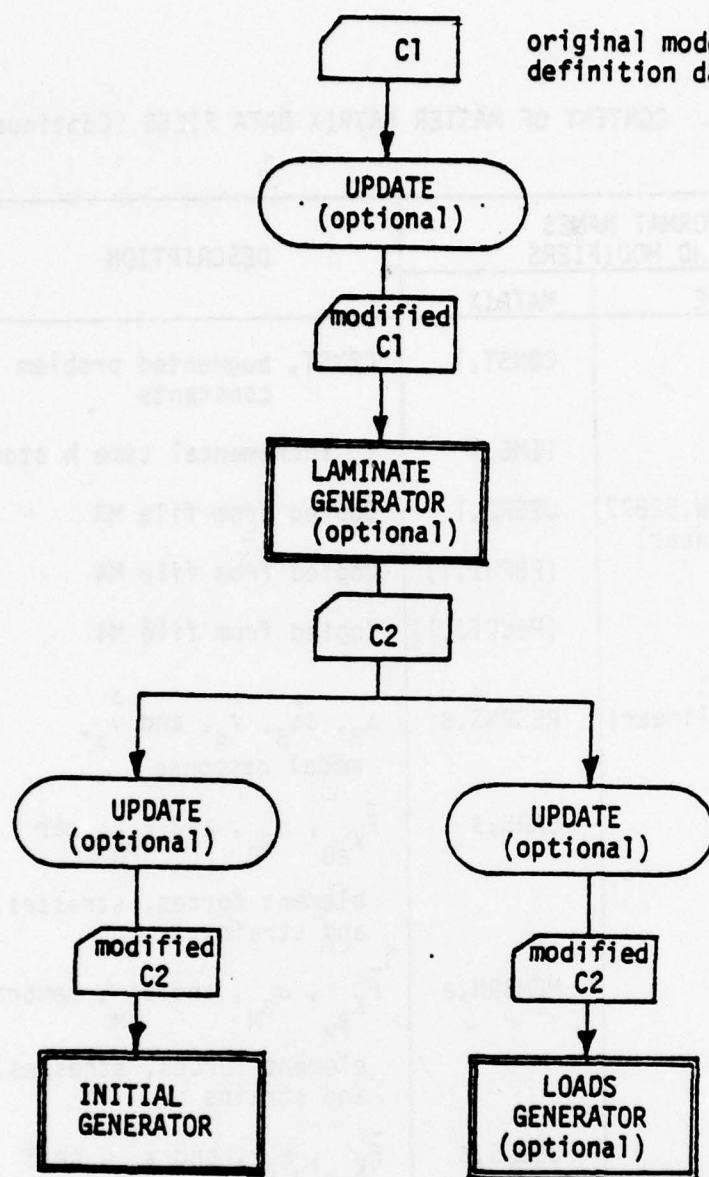


Figure A.2. Function of UPDATE in Preprocessing

using all three preprocessing programs. The basic function of UPDATE in the IMPACT system is to edit the model definition data as necessary for each of the preprocessing programs. A secondary function is to permanently store the model definition data in an easily accessible form once it has been read into the system. On a large model with a large amount of data, this will avoid many card handling and reader errors each time the model definition data is required.

In Figure A.2, each of UPDATE steps as well as the execution of the Laminate and Loads Generators are optional. Obviously, many combinations of these programs are possible in applying these tools to the variety of design problems a user might encounter. Suffice to say that the effective use of UPDATE in the preprocessing phase will enhance the users effectiveness by alleviating card handling problems.

### SECTION III OPERATIONAL CONSIDERATIONS

#### GENERAL

Only one of the six new programs in the IMPACT system currently uses the overlay capability of the CDC operating system. This feature is used extensively by the Initial Generator. The overlay is accomplished using the SEGLOAD option of the loader. The SEGLOAD directives for implementation of this program are given in Section V under the heading CORE UTILIZATION.

Significant savings in core requirements could be realized by using overlay in the implementation of the Linear and Non-Linear Incremental Solution programs. The remaining new programs coded for IMPACT are relatively small and would not yield enough savings to justify overlay. The FORMAT program already uses this feature.

The following tables gives 1) minimum core requirements for the current version of each program as implemented, and 2) the associated size of blank common in the compiled code as implemented where applicable. The core requirement is in octal and the blank common region is in decimal.

PROGRAM	CORE REQUIREMENT (octal)	BLANK COMMON LENGTH (decimal)
Laminate Generator	130000	NA
Initial Generator	130000	NA
Loads Generator	71000	NA
FORMAT Phase II	100000	10000
Linear Incremental Solution	104000	8000
Non-Linear Incremental Solution	134000	8000
Postprocessor	60000	10000



## EXTENDING BLANK COMMON

The FORMAT Phase II program, the Linear and Non-Linear Incremental Solutions, and the Postprocessor use blank common exclusively for core storage of data during their execution. Space is allocated within the blank common region for all arrays required in each program. The array space is allocated according to problem size as defined by input data.

Even though the blank common regions are of fixed dimension in the source code, the effective blank common region can be increased at execution time without recompiling any code when operating on the CDC system. By requesting additional core on the job request card and supplying input data to the program indicating the increased size of blank common, larger problems can be processed than could be accommodated by the dimensioned size of the work area in the compiled code.

For example, a program requires a field length of 100000 words (octal) with a blank common region of 10000 words (decimal). For a given problem, an increase of 2000 words (decimal) is required in the blank common region. By requesting an additional 4000 words (octal) for program execution to account for the 2000 word (decimal) increase in blank common region and inputting data to the program specifying this increase in available work space, the program could process the larger problem without recompiling any code.

Of course, this procedure can be used only with a program whose structure and input are consistent with this philosophy. The four programs of the IMPACT system mentioned above conform to these requirements. The blank common size requirements and associated input data to over ride the size parameters in the code are given in Sections VII, VIII, and IX of this document under the heading LIMITATIONS. Again, input card formats associated with this data are given in Part 2. Similar information regarding FORMAT Phase II is given in References 6 and 10 and discussed in Part 2.



## OVER RIDING FILE NAMES

On the CDC system when executing multiple stand alone programs as may be done using IMPACT, it may be necessary to over ride system default file names because of conflicts between two programs. That is, one program may output its data on a file named TAPE1 and the second program may expect its input on TAPE3. In order to resolve this conflict, the default file name in one of the programs must be temporarily renamed during the execution of that program.

On the CDC system, file names of FORTRAN programs are established by means of the PROGRAM statement, the first statement of the main program. The system provides for over riding these names at execution time by means of a system control card. The format of this command, however, requires foreknowledge of the sequence of appearance of file names in the PROGRAM statement for a given program.

Table A.2 gives the PROGRAM statements for each of the seven programs in the IMPACT system. It shows all files that are used by each program, and, together with Figure A.1, implicitly defines all files used as scratch as well as those used for master input/output.

## SYSTEM CONTROL CARDS

As previously stated, the seven programs of the IMPACT system may be used in any number of combinations in actual application to the variety of design problems that may be encountered. However, in order to show an example of a complete deck set up including system control cards and data, a single run using all components of the IMPACT system is described here.

Table A.3 gives the system control cards for a complete solution while Table A.4 lists the corresponding user input data. The complete job is broken down into steps for reference in the tables and this dis-

TABLE A.2. PROGRAM AND FILE DECLARATIONS

LAMINATE GENERATOR

```
PROGRAM LAMGEN ( TAPE1,TAPE2,OUTPUT,TAPE6=OUTPUT )
```

INITIAL GENERATOR

```
PROGRAM BIRDL ( TAPE1=512,INPUT,OUTPUT,TAPE5=INPUT,TAPE6=OUTPUT,
. TAPE7 =512, TAPE8 =512, TAPE9 =512, TAPE10=512,
. TAPE11=512, TAPE12=512, TAPE13=512, TAPE14=512,
. TAPE15=512, TAPE16=512, TAPE17=512, TAPE18=512 )
```

LOADS GENERATOR

```
PROGRAM LODGEN ( TAPE1,TAPE2,TAPE3,OUTPUT,TAPE6=OUTPUT )
```

FORMAT

```
PROGRAM F0RMAT ( TAPE1=512,TAPE2=512,TAPE3=512,TAPE4=512,
1 INPUT=512,TAPE5=INPUT,OUTPUT=512,TAPE6=OUTPUT,TAPE7=512,
6 TAPE8=512,TAPE9=512,TAPE10=512,TAPE14=512,TAPE15=512,TAPE16=512 )
```

LINEAR INCREMENTAL SOLUTION

```
PROGRAM RESPNS(TAPE1 =512,TAPE2 =512,TAPE3 =512,TAPE4 = 512
1,INPUT =512,TAPE5 =INPUT,OUTPUT=512,TAPE6=OUTPUT,TAPE7 =512
2,TAPE8 =512,TAPE9 =512,TAPE10=512,TAPE11=512,TAPE12=512
3,TAPE13=512,TAPE14=512,TAPE15=512,TAPE16=512,TAPE17=512,TAPE18=512
4,TAPE19=512,TAPE20=512,TAPE21=512,TAPE22=512,TAPE23=512
5,TAPE29=512 )
```

NON-LINEAR INCREMENTAL SOLUTION

```
PROGRAM RESPNS(TAPE1 =512,TAPE2 =512,TAPE3 =512,TAPE4 =512
1,INPUT =512,TAPE5 =INPUT,OUTPUT=512,TAPE6=OUTPUT,TAPE7 =512
2,TAPE8 =512,TAPE9 =512,TAPE10=512,TAPE11=512,TAPE12=512
3,TAPE13=512,TAPE14=512,TAPE15=512,TAPE16=512,TAPE17=512,TAPE18=512
4,TAPE19=512,TAPE20=512,TAPE21=512,TAPE22=512,TAPE23=512
5,TAPE30=512,TAPE31=512 )
```

POSTPROCESSOR

```
PROGRAM POST ( TAPE1,TAPE2,TAPE3,
1 INPUT,TAPE5=INPUT,OUTPUT,TAPE6=OUTPUT )
```

TABLE A.3. SYSTEM CONTROL CARDS FOR COMPLETE SOLUTION

STEP	SYSTEM CONTROL CARDS
	RCQ,T07S,IO150,CM140000,STC98. 0750545,MORRIS,32096 LIMIT(7777)
1	UPDATE(N,F,COTAPE1) RETURN(NEWPL) REWIND(TAPE1)
2	ATTACH(LGO,LANGE4LGO) MAP(ON) LGO. RETURN(TAPE1,LGO) REWIND(TAPE2)
3	UPDATE(N,F,COCASE) RETURN(NEWPL,TAPE2) REWIND(CASE)
4	ATTACH(BSLCRD,BIRDG18L) UPDATE(N,F) REWIND(COMPIL)
5	ATTACH(BLGO,BIRDG1LGO) MAP(ON) SEGLOAD(1,COMPIL,BABBS) LOSET(PRESET=ZERO) LOAD(BLGO) NOGO. RETURN(BSLCRD,COMPIL,BLGO,NEWPL) REWIND(BABBS) BABBS(TAPE2,CASE) RETURN(BABBS) REWIND(TAPE2,CASE)
6	ATTACH(LGO,LODGENLGO) MAP(ON) LGO(CASE,TX) RETURN(CASE,TX,LGO) REWIND(TAPE3)
7	ATTACH(PH2,PHASE24,CYB1) PH2. REWIND(TAPE2,TAPE3,TAPE4)
8	PH2(.,TAPE4,TAPE3) REWIND(TAPE2,TAPE3,TAPE4)
9	PH2(.,TAPE20,.,TAPE21) REWIND(TAPE20,TAPE21)
10	ATTACH(LGO,LINEARLGO) MAP(ON) RFL(140000) LGO. RETURN(LGO,TAPE20,TAPE21) REWIND(TAPE2)
11	ATTACH(LGO,POSTLGO) MAP(ON) LGO.



TABLE A.4. INPUT DATA FOR COMPLETE SOLUTION

STEP	INPUT DATA				
1	*DECK CASE				
	1	75.0	9332.0		
	1		1.0E+6	1.0E-12	
	10000				
	2 1			1.0	
	2 3		4.0	1.0	
	2 5	4.0		1.0	
	2 7	4.0	4.0	1.0	
	2 9	4.0		1.0	
	2 11	4.0	4.0	1.0	
	2 13	12.0		1.0	
	2 14	12.0			
	2 15	12.0	4.0	1.0	
	2 16	12.0	4.0		
	20000				
	3 1 16				75.0
	30000				
	40000				
	5 1 1	1.0			
	5 2 1		1.0		
	5 3 1			1.0	
	5 4 2	1.0			
	5 5 2		1.0		
	5 6 2			1.0	
	5 7 3	1.0			
	5 8 3		1.0		
	5 9 3			1.0	
	5 10 4	1.0			
	5 11 4		1.0		
	5 12 4			1.0	
	5 13 14			1.0	
	5 14 16			1.0	
	50000				
	7 100				
	7 101 100 1 1 1.0				
	7 100				
	70000				
	8 1 11 1.0				
	80000				
	10 100 ALUMINUM 2024-T62				
	10 101 1 10.4 E+6				
	10 102 1 7.44 E+6				
	10 103 1 50000.				
	10 104 1 66800.				
	10 105 1 .0488				
	10 106 1 .33				
	10 107 1 .126 E-4				
	10 108 1 .254 E-3				
	10 109 1 80.				
	10 110 1 1.0 E-03				
	10 100				
	100000				
	11 1 48 .004		5000.	15.	
	11 2 3 -.8			-1.0	
	11 3			-1.0	
	11 4	-1.0			
	11 5	11.0	2.0	1.0	
	11 6 1		1.0		
	11 7 2	4.0	1.0		
	11 8 3	8.0	1.0		
	110000				



TABLE A.4. INPUT DATA FOR COMPLETE SOLUTION (Continued)

STEP	INPUT DATA									
1	12	1	9	11	13	19				
	12	2	5	7	9	11				
	12	3	1	3	5	7				
	120000									
	20	1	13	14			100	1.0		
	20	2	15	14			100	1.0		
	200000									
	30	1	9	11	15	13	100	.5		
	30	2	10	12	14	14	100	.5		
	300000									
	40	1	1	3	7	3				
	40	2	5	7	11	9				
	400000									
	50	1	9				.4	E=2	.4	E=2
	50	2	11				.4	E=2	.4	E=2
50	3	13				.4	E=2	.4	E=2	
50	4	15				.4	E=2	.4	E=2	
500000										
3	*DECK CASE1									
	*READ TAPF2									
4	*READ ASLCRD									
7	SPURHAT	STANDARD								
	SRUN	GN, LOGIC								
		INPUT TAPF (MTAPE,1)								
		INPUT TAPF (LTAPF,1)								
		OUTPUT TAPF (DECOMP,1)								
	SINSTRUCTION									
		PT,OPT = OPT,DEJCOL, (1)								
		SAVE (DECOMP) OPT								
		MR = PRUP,KEL,SEQWF								
		PRUPJ,PRUPJ = PRUP,DEJCOL, (48)								
		PR = PRUPJ,MULT, PT								
		PRT = PR,TRANSP.								
		X,LTL,UR = PRUP,KEL,SEQWF; PRT								
		UT = PRUPJ,MULT, UR								
		SAVE (DECOMP) MR,PRUPJ,LTL,UR								
	PRINT (,,, ) UT									
	SEND									
8	SPURHAT	STANDARD								
	SRUN	GN, LOGIC								
		INPUT TAPF (MTAPE,1)								
		INPUT TAPF (DECOMP,1)								
		OUTPUT TAPF (TRANSP,1)								
	SINSTRUCTION									
		VAL,TR = MR,USER06, LTL								
		PRINT (,,, ) VAL								
		PRUPJ = TR,THULT, PRUPJ								
		PRUP = TR,THULT, PRUP								
		OPRO = PRUPJ,MULT, OPT								
		SAVE (TRANSP) TR,PRUPJ,PRUP,OPRO								
		MODES = PRUPJ,THULT, TR								
		PRINT (,,P2,,05) MODES								
	SPECIAL									
	25	25	1.0E=6							
	SEND									

TABLE A.4. INPUT DATA FOR COMPLETE SOLUTION (Continued)

STEP	INPUT DATA							
9	SFORMAT            STANDARD \$RUN                GO, LOGIC INPUT TAP (MTAB,1) INPUT TAP (TRANSP,1) OUTPUT TAP (FILE20,1) OUTPUT TAP (FILE21,1) \$INSTRUCTION SAVE (FILE20) PRUP SAVE (FILE20) MPT SAVE (FILE20) UZERO SAVE (FILE20) ECT,MEL,KBEL,CHEL,FPBAR SAVE (FILE20) SIGPS,EP SIG,DEBT,EVT,CONST SAVE (FILE21) DPBO SAVE (FILE21) PRUPJ \$END							
	10	1 10.0 70.0	6 11 1111 111 1111 1111 1111 1111	10 20.0 80.0	25P 30.0 90.0	16 15000 40.0 100.0	50.0	60.0
11	1 2 3 4 5 6 7 8 9 10 20 30 CARD 1, FIRST TITLE LINE CARD 2, FIRST TITLE LINE CARD 1, SECOND TITLE LINE CARD 2, SECOND TITLE LINE 9999    1= 10 9999    1= 10							

cussion. The following files are assumed to be permanently stored disc files in the system.

LAMGENLGØ	Laminate Generator relocatable decks
BIRØG1SL	Initial Generator SEGLØAD directives preceded by a *DECK UPDATE control card (card images)
BIRØG1LGØ	Initial Generator relocatable decks
LØØGENLGØ	Load Generator relocatable decks
PHASE2A, CY=1	FØRMAT Phase II absolute file
LINEARLGØ	Linear Incremental Solution relocatable decks
PØSTLGØ	Postprocessor relocatable decks

During this discussion, Figure A.1 should be referred to for master input/output files of each program. Also, Table A.2 should be referred to for the sequence of appearance of file names in the PRØGRAM declarations of each program. It is assumed that the reader has a working knowledge of the CDC system and its control cards.

In Table A.3, the job card requests 140000 words of central memory for the run which is more than sufficient to load and execute all programs. The LIMIT card requests more than the system default disc storage space normally allocated to a job.

The CDC utility UPDATE is executed first (Step 1) receiving input from the system input file and outputting the CØMPILE file under the name TAPE1. In Step 2, the Laminate Generator uses all default file names accepting file TAPE1 as input and creating file TAPE2 as output. TAPE1 is the partial model definition data and TAPE2 is the augmented model definition data. This is followed by another execution of UPDATE (Step 3) simulating a final editing and/or save of this data which, rather than being output under the default file name CØMPILE, is renamed CASE.

Step 4 executes UPDATE again to create a card image input stream for SEGLØØ which is output under the default name CØMPILE.

Step 5 includes both the loading of the Initial Generator and its execution. Input directives to SEGLØAD is the card image CØMPILE file from Step 4. Input to the Initial Generator is the complete model definition data, card image file CASE. The normal output file TAPE1 is overridden and renamed TAPE2.

Next the Load Generator is executed (Step 6). The normal input file TAPE1 is renamed CASE in order to accept the same model definition data used by the Initial Generator. The output is on TAPE3, the default file name for the binary matrix data output file. However, the normal card image output file TAPE2 is renamed to the dummy name TX since TAPE2 is already in use as the Initial Generator output file.

The following three steps, 7, 8, and 9, execute the FØRMAT Phase II program to assemble the input files necessary for the Linear Incremental Solution which follows. In the first execution, all default file names are used. Input is on file TAPE2 from Step 5 and TAPE3 from Step 6. Output is on TAPE4. In the second execution (Step 8), input consists of file TAPE2, the same file input to Step 7, and TAPE4 output from Step 7. In this step, therefore, the normal input file name TAPE3 is overridden and renamed TAPE4, and the normal output file name TAPE4 is overridden and renamed TAPE3. This sets up the stage for the final execution (Step 9) in which the input is, again, file TAPE2 from Step 5, and file TAPE3 output from Step 8. The normal output file names, TAPE4 and TAPE7, are renamed TAPE20 and TAPE21 for compatibility with the following step.

The Linear Incremental Solution is then executed (Step 10) using all default file names. Output is on TAPE2. In this step, blank common is extended to accommodate the size of the problem. On the first input card for this step (Table 3.3, Step 10), the available blank common is specified to the program in decimal as 15000 (last value on card). This is 7000 words (decimal) greater than the size of blank common in the compiled code. Therefore, in order to make additional core available for



execution, an RFL command is placed before the load and go command, LGØ. This effectively over rides the field length the loader normally establishes from the relocatable file it accesses for the load. The requested field length on the RFL card, 140000 words (octal), is sufficient to compensate for the 7000 words (decimal) added to blank common. (See minimum core requirements and dimensioned blank common block sizes discussed at the beginning of this section).

The last step, execution of the Postprocessor (Step 11) is then performed using all default file names, in which case, TAPE2 is the input file.

This example would be identical if the Non-Linear Incremental Solution had been used rather than the linear with the following exception. The default output file for the non-linear is TAPE23. The last control card, the command executing the Postprocessor, would, therefore, have to over ride the default input file name of TAPE2 to TAPE23 and would appear as

LGØ (, TAPE23)

SECTION VI  
REFERENCES

1. Pickard, J., "FORMAT-Fortran Matrix Abstraction Technique, Volume V, Engineering User and Technical Report", AFFDL-TR-66-207, Volume V, October 1968; Volume V Supplement I, June 1970; Volume V Supplement II, April 1973; Volume V Supplement III, December 1977.
2. Barber, J. P., Wilbeck, J. S. and Taylor, H. R., "Bird Impact Forces and Pressures on Rigid and Compliant Targets", University of Dayton Research Institute Report UDRI-TR-77-17, March 1977.
3. Greene, F. E., "Testing for Mechanical Properties of Monolithic and Laminated Polycarbonate Materials", Volume I, Technical Report AFFDL-TR-77-96, October 1977.
4. Rhodes, G. F. and Denke, P. H., "Damping, Static, Dynamic, and Impact Characteristics of Laminated Beams Typical of Windshield Construction", Technical Report AFFDL-TR-76-156, September 1977.